 
Hydraulic Oil, Manifolds and Fittings



3/8" Swivel Connector

360 degree swivel coupler for optimal orientation of the hydraulic connection on cylinders, pumps and hoses.
Order Model Number. **XSC1**



A, AM BFZ FZ HF Series



| | | | | | Series | 0 | N A | |
|--|--|---------------------|------------------------|----------|--|--------------------------|------------|--|
| 700 bar Fittings | | Model Number | Dimensions (mm) | | Series | | | |
| Street Elbow | | | Α | В | С | D | B | |
| From: %"-NPTF Male | | FZ1616 | 23 | 33 | 3/8"-18 NPTF | %"-18 NPTF | D | |
| To: %"-NPTF Female | | | | | | | C A | |
| Reducing Connector | | | | | | | | |
| From: %"-NPTF Female | 54 | FZ1615 | 28 | 25 | %"-18 NPTF | 1/4"-18 NPTF | A | |
| To: ¼"-NPTF Female | 250 | | | | | | C D | |
| From: ½"-NPTF Female | | FZ1625 | 47 | 29 | 1/2"-14 NPTF | %"-18 NPTF | В | |
| To: %"-NPTF Female | | | | | | | | |
| Hexagon Nipple | | | | | | | Δ | |
| From: To: | 51 | F7 4000 | 00 | 10 | 1/ 10 NIDTE | 1/4"-18 NPTF | | |
| 1/4"-NPTF 1/4"-NPTF 3%"-NPTF 3%"-NPTF | | FZ1608 FZ1619 | 38 51 | 16 19 | 1/4"-18 NPTF | | C | |
| % -NPTF | 15 | FZ1617 | 37 | 19 | %"-18 NPTF %"-18 NPTF | %"-18 NPTF %"-18 NPTF | B) | |
| Coupling | | 121017 | | 10 | 98 - 10 INF IF | 98 - 10 INF IF | ^ | |
| From: To: | 10.50 | | | | | | A . | |
| %"-NPTF %"-NPTF | | FZ1614 | 29 | 23 | 3%"-18 NPTF | %"-18 NPTF | C D | |
| 1/4"-NPTF 1/4"-NPTF | | FZ1605 | 29 | 19 | 1/4"-18 NPTF | 1/4"-18 NPTF | | |
| Cross | | | | | 7 | 77 101111 | C | |
| From: %"-NPTF Female | | FZ1613 | 45 | 25 | 3%"-18 NPTF | _ | B | |
| To: %"-NPTF Female | | | | | /- /- /- /- /- /- /- /- /- /- /- /- /- | | | |
| Tee | - Committee of the Comm | | | | | | C | |
| From: To: | 700 | | | | | | | |
| 38"-NPTF 38"-NPTF | | FZ1612 | 45 | 25 | %"-18 NPTF | _ | в | |
| 1/4"-NPTF 1/4"-NPTF | | FZ1637 | 45 | 24 | 1/4"-18 NPTF | _ | A | |
| Street Tee | | | | | | | ^ | |
| From: 3/8"-NPTF Female | | BFZ16312 | 56 | 26 | 3/8"-18 NPTF | %"-18 NPTF | | |
| To: 3/8"-NPTF Male | | | | | | | D | |
| | ~ | | | | | | C. T. T. | |
| Elbow | | | | | | | A - | |
| From: To: | 1 | | | | | | c | |
| 38"-NPTF 38"-NPTF | | FZ1610 | 33 | 20 | %"-18 NPTF | - | В | |
| 1/4"-NPTF 1/4"-NPTF | - | FZ1638 | 36 | 24 | 1⁄4"-18 NPTF | - | <u> </u> | |
| Reducer | | | | | | | A | |
| From: To: | - American | | ,_ | , - | | | | |
| 38"-NPTF 1/4"-NPTF | | FZ1630 | 19 | 19 | 1/4"-18 NPTF | 3%"-18 NPTF | C D | |
| 1/4"-NPTF 1/2"-NPTF 3%"-NPTF G1/4" | - | BFZ1630 BFZ16301 | 28 19 | 22 19 | 1/4"-18 NPTF G1/4" | ½"-14 NPTF | ву | |
| | | BFZ 10301 | 19 | 13 | G'/4" | %"-18 NPTF | | |
| Adaptor | | | | | | | _ | |
| From: To: G¼" ¼"-NPTF | | BFZ-16411 | 35 | 19 | 1/4"-18 NPTF | G1/4" | A A | |
| G¼" ½"-NPTF | - Marine | BFZ-16421 | 31 | 19 | 1/8"-27 NPTF | G1/4" | С | |
| G%" 1/4"-NPTF | | BFZ-16323 | 43 | 24 | 1/4"-18 NPTF | G3/8" | B B | |
| G%" 3%"-NPTF | | BFZ-16324 | 43 | 24 | 3/8"-18 NPTF | G3/8" | _ | |
| Adaptor | | | | | /6 IU NETT | 1 | | |
| From: To: | | | | | | | A . | |
| 1/4"-NPTF | No. | FZ1055 | 44 | 23 | 1/4"-18 NPTF | 3/8"-18 NPTF | c Total | |
| 1/4"-NPTF 1/8"-NPTF | | FZ1642 | 30 | 19 | 1/8"-27 NPTF | 1/4"-18 NPTF | R R | |
| ½"-NPTF | | FZ1634 | 42 | 28 | 3/8"-18 NPTF | ½"-18 NPTF | <u> </u> | |
| Swivel Fitting | | | | | | | ۸ | |
| From: %"-NPTF Male | | FZ1660 | 40 | 22 | %"-18 NPTF | %"-18 NPTF | | |
| To: 3/8"-NPTF Female | | | | | | | C D | |
| | - | | | | | | | |
| | | | | | | | <u>D</u> / | |