


Repair Parts Sheet

RLT Cylinders Low Profile Telescopic Cylinders


Document	Document	Document	Product Date Code
Number	Revision	Revision Date	Beginning With
L4245	В	06/2019	Α

To Protect Your Warranty, Use Only ENERPAC Hydraulic Oil.

Enerpac recommends that all kit components be installed to insure optimum performance of the repaired product.

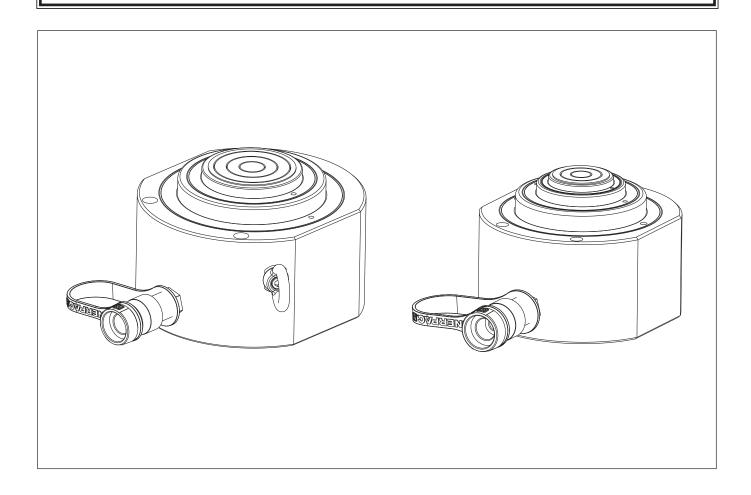

WARNING Be certain that hydraulic pressure is completely relieved (0 psi/bar) before beginning any adjustment, maintenance or repair procedures. Appropriate shop safety procedures are to be followed during disassembly and reassembly to minimize any possibility of injury.

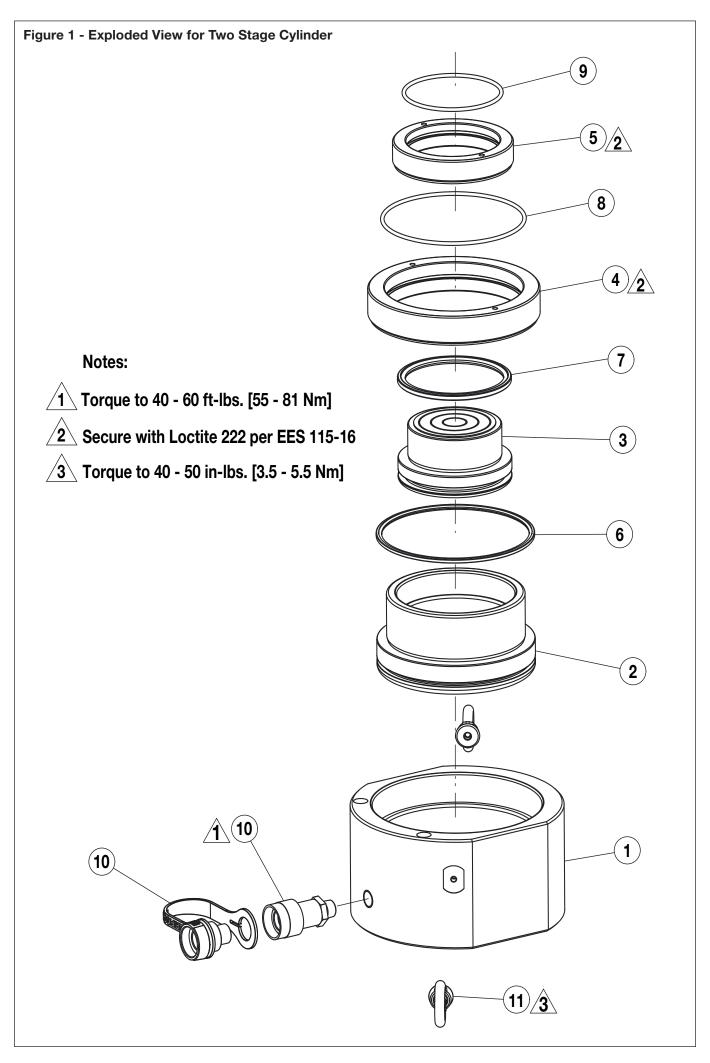

	Parts List for Figure 1						
Item	Description			Part N	lumber		
No.	Description	RLT40	RLT110	RLT230	RLT311	RLT501	RLT741
1	Cylinder Base	N/A	N/A	N/A	N/A	N/A	N/A
2	1st Stage Plunger	N/A	N/A	N/A	N/A	N/A	N/A
3	2nd Stage Plunger	N/A	N/A	N/A	N/A	N/A	N/A
4	1st Stage Stop Ring	B170121044-65	B170121044-75	B170121044-85	B170121044-90	B170121044-86	B170121044-91
5	2nd Stage Stop Ring	B170121044-55	B170121044-65	B170121044-75	B170121044-80	B170121044-85	B170121044-90
6	1st Stage Piston Seal	*	*	*	*	*	*
7	2nd Stage Piston Seal	*	*	*	*	*	*
8	1st Stage Scraper	*	*	*	*	*	*
9	2nd Stage Scraper	*	*	*	*	*	*
10	Female Coupler	CR400	CR400	CR400	CR400	CR400	CR400
11	Eyebolt	-	-	-	-	-	DB8099667
12	❖ Warning Decal	★ CH272026					
13	❖ Enerpac Decal	★ DB8179026	★ DB8179026	★ DB8173026	★ DB8173026	★ DB8179026	★ DB8173026
	Service Kit	RLT40K	RLT110K	RLT230K	RLT311K	RLT501K	RLT741K

⁻ Not shown

 $[\]bigstar$ - Included in Service Kit

N/A - Not Available

Figure 2 - Exploded View for Three Stage Cylinder 13) 7/2 12 <u>6</u>2 11) 5/2 (10) Notes: 1 Torque to 40 - 60 ft-lbs. [55 - 81 Nm] Secure with loctite 222 per EES 115-16 3 8 2 114 1

	Parts List for Figure 2			
Item	Description	Part Number		
No.	Description	RLT41	RLT111	RLT231
1	Cylinder Base	N/A	N/A	N/A
2	1st Stage Plunger	N/A	N/A	N/A
3	2nd Stage Plunger	N/A	N/A	N/A
4	3rd Stage Plunger	N/A	N/A	N/A
5	1st Stage Stop Ring	B170121044-75	B170121044-90	B170121044-86
6	2nd Stage Stop Ring	B170121044-65	B170121044-80	B170121044-85
7	3rd Stage Stop Ring	B170121044-55	B170121044-65	B170121044-75
8	1st Stage Piston Seal	*	*	*
9	2nd Stage Piston Seal	*	*	*
10	3rd Stage Piston Seal	*	*	*
11	1st Stage Scraper	*	*	*
12	2nd Stage Scraper	*	*	*
13	3rd Stage Scraper	*	*	*
14	Female Coupler	CR400	CR400	CR400
15	❖ Warning Decal	★ CH272026	★ CH272026	★ CH272026
16	❖ Enerpac Decal	★ DB8179026	★ DB8173026	★ DB8179026
	Service Kit	RLT41K	RLT111K	RLT231K

^{❖ -} Not shown

^{★ -} Included in Service Kit

N/A - Not Available

NOTES

-	

NOTES

-	

