





## Service Information Repair Parts Sheet L4275

| Note: See graphic on page 1 for service item locations |  |
|--|--|
| Service Item   | Action / Comment   |
| ①  | Replace decal if worn or unreadable.<br><br><b>Note:</b> The GBJK5 seal kit contains two decals. Be sure to use the 2 Ton decal.   |
| ②  | Approximate oil capacity with jack in upright position, ram fully retracted and oil level up to oil fill hole: 160 cc (5.41 fluid ounces).<br><br><b>Important:</b> <ul style="list-style-type: none"><li>• Be sure ram is fully retracted before checking oil level or adding additional oil.</li><li>• Use only Enerpac HF Series hydraulic oil.</li><li>• Jack hydraulic reservoir is full when oil level is up to - but not above - the oil fill hole.</li></ul> <b>Do not overfill!</b> |
| ③  | Apply lubricating oil to pins and linkage.   |



To maintain your warranty:

- Use only Enerpac Oil
- Have your products inspected and repaired by an Enerpac Authorized Service Center

**ENERPAC** 