

OWNERS MANUAL FOR F-2000T (VERSION 4.2 FOR BURLEY TOBACCO)

This addendum is to be used in conjunction with the Owners Manual for the F-2000 Hay Moisture Meter (attached). This addendum contains information specific to the tobacco applications. *We recommend the user read the Owner's Manual and addendum completely, before using the F-2000T.*

The meter reads moisture in TOBACCO between 8.0 and 37.0%. It also stores the reading and displays the average and maximum of up to 100 accumulated readings. The meter also has a set point and a buzzer. Whenever the displayed reading is above the set point value, the buzzer will sound. The meter will automatically correct the input reading for sample temperature, provided that the user has entered the correct temperature in the meter.

Whenever the battery is removed and then reconnected (i.e when power is applied), the meter will display the software version number (4.2) for one second and then shut off if no key is pressed.

The meter has FOUR keys - the "READ" key, the "CHECK" key, the "SET" key and the "TEMP" key (see the attached diagram).

1. TO RESET THE METER

Resetting the meter will restore the default settings and erase all the stored readings.

Press the "CHECK" key immediately, followed by the "SET" key. The meter will display "200" for two seconds and then shut off.

2. TO CHANGE THE SET POINT VALUE

The default set point value for the meter is 20.0%. The user can change the value between 8.0 and 37.0.

Press the "SET" key. The meter will display the current set point value. To increase the set point, keep the "SET" key pressed. The value will increase in steps of 1.0. To decrease the value, press the "TEMP" key within two seconds after pressing the "SET" key. The value will decrease in steps of 1.0.

3. TO CHANGE THE TEMPERATURE SETTING

The meter will automatically correct the moisture reading for sample temperature, provided the user has entered the correct SAMPLE TEMPERATURE in the meter. The user can set the temperature between 0° and 255° F.

The default temperature setting is 80° F. The meter will correct the moisture value by 0.05% for every degree change in the sample temperature.

Press the “TEMP” key. The meter will display the current temperature setting. To increase the setting, keep the “TEMP” key pressed. The temperature value will increase in steps of 5°. To decrease the value, press the “SET” key within two seconds after pressing the “TEMP” key. The value will decrease in steps of 5.0.

4. READING THE %MC VALUE

Press the “READ” key. Within 1 or 2 seconds, the meter will display the %MC between 8.0 and 37.0. The meter will automatically correct the reading for the sample temperature. The reading will be displayed for 2 seconds and if the “READ” key is still pressed, then the cycle will be repeated. The buzzer will sound if the displayed reading is above the set point value entered in the meter (default is 20.0).

The meter will “store” the reading, provided that the user releases the “READ” key, otherwise the meter will initiate another “READ” cycle without “storing” the previous reading. This feature lets the user take a number of readings in sequence and only “keep” the readings of his choice.

When the “READ” key is released, the meter will add the last displayed value to the sum of the previous readings (up to 100), provided the value is within the range. When all the 100 readings are taken, the meter will automatically display their average before turning off. No new value will be added to the sum unless the user erases the readings.

NOTE: The reading below 8.0% will be displayed as “.0” and above 37.0% as “99.9”. These are not considered valid readings and will not be stored.

5. CHECKING THE AVERAGE AND MAXIMUM VALUE OF THE ACCUMLATED READINGS_ (And erasing them)

As mentioned before, the meter adds the value of the new reading (provided that the “READ” key is released) to the sum of the previous readings. The meter holds this sum, as well as the number of readings added so far and the HIGHEST reading. Up to 100 readings can be accumulated. After that, the meter will stop adding the new reading and display the average every time a new reading is taken to remind the user to erase the readings to start accumulating the new ones.

At any time, the user can check the AVERAGE of the accumulated readings by pressing the “CHECK” key. The meter will display the number of readings accumulated for one second, followed by the AVERAGE value (displayed as “A xx.x”) for two seconds and the MAXIMUM value for another two seconds. If at the end of the total period, the meter finds the “CHECK” key pressed, it will erase the

accumulated readings. Hence, the user must release the key before four seconds if he wants to retain the readings. However, if all 100 readings are accumulated, then he should keep the key pressed to erase the readings so that the meter can accumulate the new ones.

6. TO CHECK THE METER CALIBRATION

To check the meter calibration, the user must PRESS first the "READ" key, immediately followed (within one second) by the "CHECK" key. The meter should display "12.0" +/- 0.2. Since a relay disconnects the external input when checking calibration, there is no need to disconnect the external electrode.



Delmhorst Instrument Co.
51 Indian Lane East
Towaco, NJ 07082-1025
Tel: 973-334-2557 / 877-DELMHORST
Fax: 973-334-2657
E-Mail: info@delmhorst.com
Web Site: www.delmhorst.com

rev 10/95
October, 2011

F-2000

owners manual




DELMHORST
INSTRUMENT CO.
WHEN ACCURACY IS THE POINT.™

TABLE OF CONTENTS

| | |
|----|--------------------------------|
| 2 | F-2000 Features |
| 3 | Before You Begin |
| 3 | Check Calibration |
| 4 | Set the Scale |
| 4 | Change the Set-Point |
| 5 | To Check Accumulated Readings |
| 5 | To Reset Meter |
| 6 | Taking a Reading |
| 6 | Testing Baled Hay |
| 6 | Testing in the Windrow |
| 8 | Factors Affecting Your Reading |
| 8 | Range of Moisture Content |
| 9 | Hay Temperature |
| 9 | Curing |
| 10 | Density |
| 10 | Use of Preservatives |
| 10 | Sample Size |
| 11 | Care of Your Meter |
| 12 | Service For Your Meter |
| 13 | Warranty |

DELMHORST F-2000

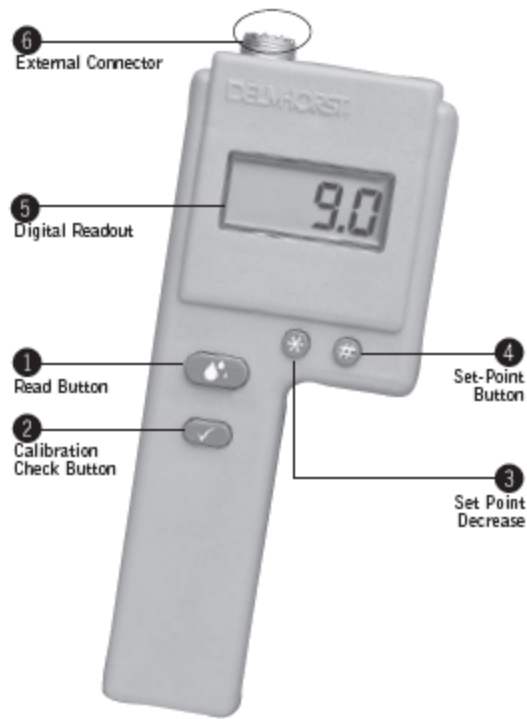

F-2000 FEATURES

- ▶ 6% to 40% moisture range for alfalfa hay
- ▶ Digital readout
- ▶ Built-in calibration check
- ▶ Temperature stable circuit
- ▶ Ergonomic case design
- ▶ Includes (1) 9-volt battery
- ▶ Three year warranty
- ▶ 60 years of proven quality, accuracy and service

BEFORE YOU BEGIN

Button Functions

- ① READ BUTTON - Reads the percent moisture content value %MC.
- ② CALIBRATION CHECK BUTTON - Checks the meter calibration. Displays the average of up to 100 accumulated readings; displays the highest stored reading; erases the readings.
- ③ SET POINT (DECREASE) BUTTON - Acts as an arrow button when pressed after the set-point button to decrease the set point to a lower value.
- ④ SET-POINT BUTTON - Displays the current set-point. Also acts as an arrow (scroll) button to increase the set-point value in 1% increments.

When the battery is replaced, the meter displays its software version for one second and then turns itself off. After replacing the battery, you must reset the meter as described on page 5.

CHECK CALIBRATION

- ▶ Remove the probe from the top of the meter.
- ▶ Press and hold the read button ① and check button ② simultaneously. Meter is in calibration if it displays "12" ($\pm .2$)

If you check the calibration and the display does not read "12," it is likely an indication of a low battery. If this occurs, change the battery immediately. Continued use with a low battery may cause the meter to go out of calibration. If you have a fresh battery and the instrument still does not indicate an acceptable calibration, return it to DELMHORST for service. See *Service for Your Meter* section.

CHANGE THE SET-POINT

- ▶ To change the set-point value press the set-point button 4. The meter will display the current set-point value.
- ▶ To scroll forward to a higher value, hold the set-point button 4 while the current value is displayed and scroll to the set-point value desired.
- ▶ To scroll backward through the set-point values, press and release the set-point button 4. Within one second press and hold the set-point decrease button 3.
- ▶ Continue to hold the set-point decrease button 3 and the set-point value will decrease.
- ▶ When scrolling in either direction, release the button to stop at your desired set-point.

If the meter reads a %MC higher than that of the set-point, a buzzer will sound.

TO CHECK ACCUMULATED READINGS

This feature allows you to view the total number of all accumulated readings for the given product you have chosen, the average of those readings, and the highest stored reading.

- ▶ To add a reading to the sum of all previously stored readings, release the read button ① within 2 seconds. If you press and hold the read button ①, the meter will repeat its read cycle, but will not add a new reading to the storage until the button is released.
- ▶ To view the readings press and release the calibration check button ②. First the meter displays the number of accumulated readings for one second, then the average of those readings for two seconds. Then it displays the highest stored reading for two seconds. The total "cycle" time is five seconds.
- ▶ To erase all the accumulated readings, hold the calibration check button ② for more than 5 seconds until the meter displays "0".
- ▶ To keep the accumulated readings in memory, release the calibration check button ② before the total cycle time is complete.

The meter will accumulate up to 100 readings. After all 100 readings are stored, it will not add new readings until the memory has been cleared. It will also continue to display the average of all 100 readings as a reminder that the memory is full.

Readings below 6% will be displayed as "0". Those above 40% will be displayed as "99.9." Neither will be added to the accumulated readings or used in calculation of average or highest reading.

TO RESET METER

- ▶ Press and release the calibration check button ②.
- ▶ Within one second, press and hold the set-point decrease button ③.
- ▶ The meter will reset itself and display "119." This indicates that the meter has been reset and that the set-point has been set to its default value of 19%. It will also clear all of the readings stored in memory.

TAKING A READING

Testing Baled Hay

- ▶ Connect the probe to the external connector on the top of the meter.
- ▶ Insert the probe into the bale.
- ▶ Press the read button **1** The meter displays the %MC for two seconds.

Notes

- ▶ The hay prod is electrically insulated, except at the metal points near the tip. The moisture content measured represents the hay in contact with the tip of the prod only.
- ▶ Partially cured hay may have wide variations in moisture content throughout the bale. Readings should be taken in several different parts of the bale and the highest readings used as a guideline. The arrangement and compaction of hay fibers in a bale may have an effect on meter readings.
- ▶ If you are testing high density bales, we recommend using the H-4 handle with the 830-2 10" prod, 830-3 18" prod, or the 830-4 36" prod. Using the handle/prod combination eliminates excess stress on the instrument case that may occur when trying to insert the prod into a high density or large bale.
- ▶ When using the 36" prod, be sure to guide the prod into the bale with one hand while pushing on the H-4 handle.

Testing in the Windrow

There are three ways to test moisture content in the windrow:

Test A

- ▶ Attach the #831 short pin prod to the H-4 handle and connect the handle to the external connector on top of the meter.
- ▶ Prepare a representative sample by collecting hay from various parts of the windrow.
- ▶ Place hay in a non-conductive container (such as a 5 to 10 gallon plastic pail) and apply the short pin prod to the hay.
- ▶ Press the read button **1** and take a reading.
- ▶ Mix the sample once again and take at least two more readings. Use the highest readings.

Notes

- ▶ Repeat the steps above if considerable variations are found in the meter readings. To reduce these variations, chop the hay, mix it thoroughly and take several readings by following the procedures above. This will make the moisture distribution in the sample more uniform.

Test B

- ▶ Attach the #831 short pin prod to the H-4 handle and connect the handle to the external connector on top of the meter.
- ▶ Apply the prod to the hay in the windrow.
- ▶ Press the read button **1** and take a reading.
- ▶ Make several tests on the hay exposed to the sun, then turn the windrow over and make an equal number of tests on the hay that had been closer to the ground. Use the highest readings.

Notes

- ▶ Make sure that the points of the electrode are not touching the ground. The electrode points should make contact with the hay only.

Test C

- ▶ Select up to five large, slower-drying stems from a section of the windrow.
- ▶ Place them one at a time across two adjacent points on the # 831 short pin prod.
- ▶ The average of these stem readings should be about two to five points higher than the actual moisture content.

Notes

- ▶ Repeat these steps in different parts of the field and pay special attention to the areas where the hay is heaviest.
- ▶ The amount of variation found among windrow readings as well as the average stem moisture should be taken into consideration before the decision is made to start baling.

FACTORS AFFECTING YOUR READINGS

Because of the many variables that affect the electrical meter readings, the indicated moisture content should not be used as an absolute quantitative measurement. Meter readings are very useful guidelines for safe storability of hay.

Meter readings become more significant when they are considered in the light of the density of the bales, anticipated handling and storage, and prevailing climate conditions.

Range of Moisture Content

The F-2000 is designed to test moisture in hay over a range of 6%-40%. Readings over 30% should be used only as a qualitative indication of high moisture content. Delmhorst moisture meters use the relationship existing between electrical conductivity and moisture content in hay. As moisture content increases, so does the conductivity.

Tests on hay at high moisture content, over 25%, are less accurate. This is mostly due to the variability in moisture distribution. The reduced level of accuracy in the high range does not significantly affect the usefulness of the meter, as a few high readings indicate that some action be taken to dry the hay to avoid spoilage or even self-combustion.

While it is important to note the average of several readings, it is even more important to note the high readings and the frequency at which they occur.

Hay Temperature

The F-2000 has been calibrated at 80°F on various samples of different types of hay, mostly alfalfa, and on different cuttings and mixtures. The higher the temperature of the sample, the higher the meter readings will be. Temperatures lower than 80°F cause lower meter readings. The correction is approximately 1% point for every 20° difference. Refer to chart below:

| Hay temperature | Add to reading | Subtract from reading |
|-----------------|----------------|-----------------------|
| 20°F/-7°C | 3 | -- |
| 40°F/ 5°C | 2 | -- |
| 60°F/15°C | 1 | -- |
| 80°F/30°C | 0 | 0 |
| 100°F/40°C | -- | 1 |
| 120°F/50°C | -- | 2 |
| 140°F/60°C | -- | 3 |

Example

Meter reading: 22%
Temperature: 40°F/5°C
Moisture Content: 24% (22 + 2)

Curing

Before proper curing has taken place, wide variations in moisture content should be expected in both recently baled hay and hay in the windrow. These variations will be exposed by meter readings taken on different parts of the windrow or bale. The higher the moisture range, the wider are the variations. The more curing has been allowed to take place, the greater uniformity in moisture distribution can be expected.

The validity of the meter readings is closely related to the care spent in sampling the hay to be tested. Whether hay in the windrow or baled hay is tested, the number of tests made should be increased whenever the initial readings show considerable variations.

Density

The calibration of the moisture testers applies to bales of normal "average" density. Generally:

- ▶ Denser bales may yield readings 1-2% points higher.
- ▶ Looser bales tend to yield 1-2% point lower.
- ▶ Tests in stacks usually yield readings 2%-3% lower.
- ▶ Tests on grass hay may yield readings about 3% lower.

Baling should be done according to the lower meter reading.

When testing baled hay, drive the prod across the slices of the bale, not between them. This will ensure firmer and more uniform contact.

Use of Preservatives

Hay preservative or stabilizers may also have an affect on meter readings. Normally a bale of hay treated with preservative will read higher than a bale of the same hay that had not been treated. The readings typically increase by 2-4% points, and 24-48 hours after treatment, the readings between the bales tend to equalize.

Occasional higher readings may occur if, in addition to the effect of the increased conductivity due to the stabilizer, the bales tested also show an increase in temperature and "sweating." As the stabilizer becomes more thoroughly absorbed and the sweating subsides, the meter readings recede to the initial level and will continue to decrease, assuming that the bale becomes progressively dryer.

Sample Size

When testing baled hay, it is essential to take readings at several different points in the bale. Hay moisture may vary a great deal in the same bale. For example, at one point bale moisture may be 20% and at another over 35%.

More tests must be made whenever the variations among readings are greater. If there is a possibility of high moisture areas, samples from these locations should be taken. Areas of high moisture content will spoil, resulting in loss.

It is extremely important to note the high readings and the frequency at which they occur.

CARE OF YOUR METER

To keep your meter in good working order:

- ▶ Store your meter in a clean, dry place. The optional protective carrying case is an ideal storage place when the meter is not in use.
- ▶ Change the 9-Volt battery as needed. Continued use with a low battery may cause the meter to go out of calibration.
- ▶ Clean the meter and probe with any biodegradable cleaner. Use the cleaner sparingly and on external parts only. Do not immerse the meter or any prod in water.
- ▶ Remove the battery if the meter will not be used for one month or longer.

SERVICE FOR YOUR METER

- ▶ Before sending in your meter we recommend you give one of our trained technicians a call. Many times troubleshooting can be taken care of over the phone. Call us at 877-DELMHORST
- ▶ Pack your meter securely. Enclose a purchase order or letter with a brief description of the problem.
- ▶ There is no need to call us for a return authorization number if you are within the U.S. Customers outside the U.S. must contact us for more specific instructions prior to returning a meter.
- ▶ Include your name, address, daytime phone and fax numbers or e-mail address. If you believe the meter is under warranty, please provide the original sales slip or invoice.
- ▶ Ship via UPS, Express Mail, Priority Mail, or any overnight courier who provides prompt service. Do not use standard parcel post.
- ▶ Insure your instrument for its full value and ship prepaid. We are not responsible for damage in transit.
- ▶ We do not accept COD shipments or cover any incoming freight or duty charges on returned merchandise.
- ▶ Turnaround time on repairs is approximately two weeks.
- ▶ We will call you with an estimate if you specifically request one, or if we determine that the meter may be too costly to repair.
- ▶ Non-warranty repairs will be returned via UPS/GROUND, unless you have already established an alternate shipping method. Payment may be made by credit card. We accept Visa/Mastercard and American Express. When your repair is complete, we will contact you for the credit card information.
- ▶ Warranty repairs will be returned at no charge, if shipped within the U. S., via UPS/GROUND. Freight charges for expedited services (Federal Express, UPS/1DAY, UPS/2DAY, etc...) are the customer's responsibility and will be charged as per the above terms.

WARRANTY

Delmhorst Instrument Co., referred to hereafter as Delmhorst, guarantees its F-2000 meter for three years from date of purchase and any optional electrodes against defects in material or workmanship for 90 days. If, within the warranty period of the F-2000, you find any defect in material or workmanship return the meter following the instructions in the **Service for Your Meter** section. This limited warranty does not cover abuse, alteration, misuse, damage during shipment, improper service, unauthorized or unreasonable use of the meter or electrodes. This warranty does not cover batteries, pin assemblies, or pins. If the meter or any optional electrodes have been tampered with, the warranty shall be void. At our option we may replace or repair the meter.

Delmhorst shall not be liable for incidental or consequential damages for the breach of any express or implied warranty with respect to this product or its calibration. With proper care and maintenance the meter should stay in calibration; follow the instructions in the **Care of Your Meter** section.

Under no circumstances shall Delmhorst be liable for any incidental, indirect, special, or consequential damages of any type whatsoever, including, but not limited to, lost profits or downtime arising out of or related in any respect to its meters or electrodes and no other warranty, written, oral or implied applies. Delmhorst shall in no event be liable for any breach of warranty or defect in this product that exceeds the amount of purchase of this product.

The express warranty set forth above constitutes the entire warranty with respect to Delmhorst meters and electrodes and no other warranty, written, oral, or implied applies. This warranty is personal to the customer purchasing the product and is not transferable.

For 60 years Delmhorst has been the leading manufacturer of high quality moisture meters and thermohygrometers. Today we offer the innovative KIL-MO-TROL® in-kiln monitoring system. We also offer a wide range of meters for a variety of applications including wood-working/lumber, agriculture, construction, paper, restoration, IAQ and flooring.

DELMHORST.
INSTRUMENT CO.

WHEN ACCURACY IS THE POINT.™

51 Indian Lane East
Towaco, NJ 07082

(877)-DELMHORST
www.delmhorst.com
e-mail - Info@delmhorst.com

©2000, Delmhorst Instrument Co.
510INS-0008

Rev.4/09