

Copyright

© 2020, FLIR Systems, Inc.

All rights reserved worldwide. Names and marks appearing herein are either registered trademarks or trademarks of FLIR Systems and/or its subsidiaries. All other trademarks, trade names or company names referenced herein are used for identification only and are the property of their respective owners.

Document identity

Publ. No.: T810537
Release: AA
Commit: 63222
Head: 63222
Language: en-US
Modified: 2020-01-27
Formatted: 2020-01-27

Website

<http://www.flir.com>

Customer support

<http://support.flir.com>

Disclaimer

Specifications subject to change without further notice. Models and accessories subject to regional market considerations. License procedures may apply. Products described herein may be subject to US Export Regulations. Please refer to exportquestions@flir.com with any questions.




1 Quick start guide

1. Place the battery inside the provided carrying bag inside one of the pockets. Attach the power cable to the battery.
2. Carefully plug the power cable into the camera - make sure the red orientation marks are aligned. The camera starts automatically when power is connected. The LED on the side should turn red.
3. To turn off the camera, simply detach the power by carefully disconnecting the plug.

For more information, see the FLIR Si124 User's manual.

2 Screen elements

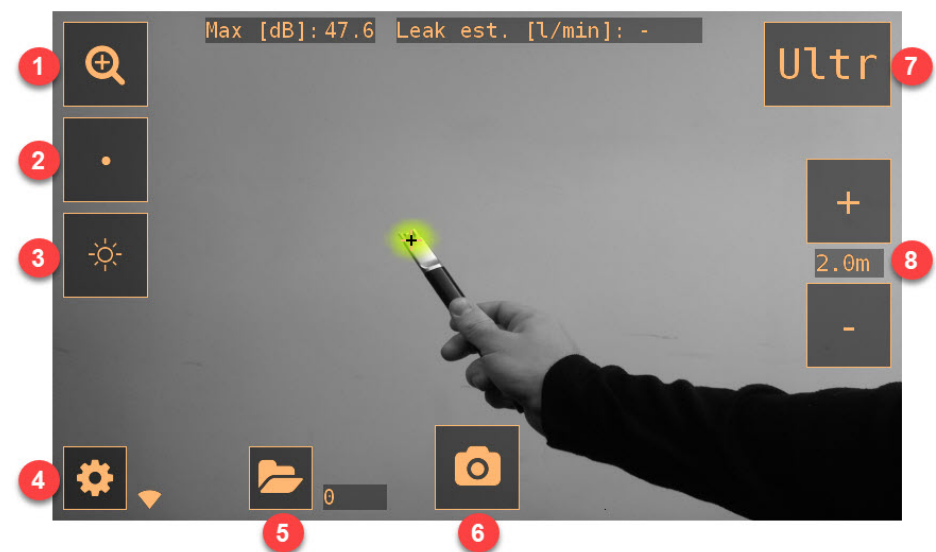

1. Zoom
2. Multi-source
3. Brightness
4. Settings
5. Browse
6. Snapshot
7. Filter (used to highlight different types of sources)
8. Distance

3 Cloud service

If you have Wi-Fi and the FLIR Acoustic Camera Viewer cloud service enabled on your device, you will be able to access the cloud portal via the URL below with the provided user name and password. The results can be synchronized through a secured Wi-Fi network.

Website URL: <https://si124viewer.flir.com/>

User name	
Password	