



Created To **AMAZE**

USB-EXT-2

2-Port USB 2.0 100m (330 ft) CAT 5e/6/7
Extender System with Flexible Power

Quick Start Guide




Before you get started, ensure that all the drivers required for your USB device(s) are installed. See online manual at www.fsrinc.com for detailed instructions.

Product Contents:


- USB-EXT-2 Local Extender
- USB-EXT-2 Remote Extender
- USB 2.0 Cable
- AC Power Adapter
- Power Cord
- Quick Start Guide

- 1 Place the units where desired, and connect the CAT 5e/6/7 (solid core) extension link cabling into the Link ports (RJ45) of the Local and Remote Extenders.
- 2 Connect the power adapter into your desired unit - Local Extender or Remote Extender.

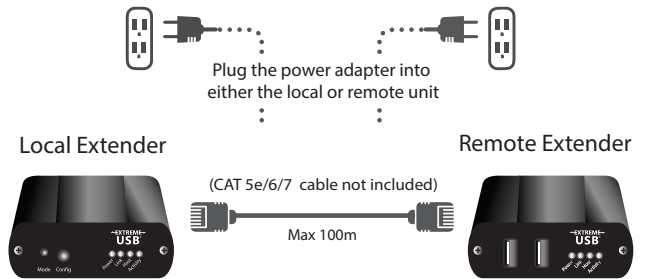

Note: Flexible power is different from Power over Ethernet (PoE). Ensure the CAT 5e/6/7 cable is only connected between the Local and Remote Extenders.

- 3 Connect the Local Extender into your computer using the included USB 2.0 cable.

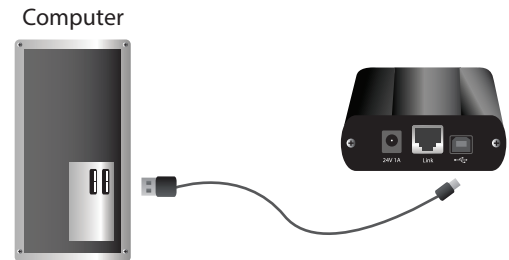

- 4 Attach your USB device(s) to the Remote Extender.





USB-EXT-2 Remote Extender shown

1	Power LED (Blue)	LED turns on when power is supplied.
2	Link LED (Green)	Indicates a valid ExtremeUSB link is established between the local and remote extenders. LED turns on when link between local and remote extenders is established. LED is off when there is no link between the local and remote extenders.
3	Host LED (Green)	Indicates that the extender system is properly enumerated on the host computer. LED blinks when the extender system is in a suspended state.
4	Activity LED (Amber)	Indicates data transmission is occurring between the local and remote extenders. LED blinks intermittently with or without a USB device connected. When the local and remote extenders are in suspend mode, the LED is off.

See online manual at www.fsrinc.com for detailed instructions.

Certification and Compliance

FCC Radio Frequency Interference Statement Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

CE Statement

We, FSR Inc., declare under our sole responsibility that the USB-EXT-2, to which this declaration relates, is in conformity with European Standard EN 55022, EN 61000 and EN 55024.

IC Statement

This Class B digital apparatus complies with Canadian ICES-003.

WEEE Statement

The European Union has established regulations for the collection and recycling of all waste electrical and electronic equipment (WEEE). Implementation of WEEE regulations may vary slightly by individual EU member states. Please check with your local and state government guidelines for safe disposal and recycling or contact your national WEEE recycling agency for more information.

Product Operation and Storage

Please read and follow all instructions provided with this product, and operate for intended use only. Do not attempt to open the product casing as this may cause damage and will void warranty. Use only the power supply provided with this product. When not in use, product should be stored in a dry location between -20°C and 70°C.



Information contained herein is subject to change without notice.

FSR Inc.
244 Bergen Blvd.
Woodland Park NJ 08724
1-800-332-3771 or +1-973-998-2300
www.fsrinc.com