



## 4A. INSTALLING ONE DV-HSW4K-41 UNIT:

a. INSTALL DV-HSW4K-41 TO BASE PLATE WITH SUPPLIED M3 HARDWARE.

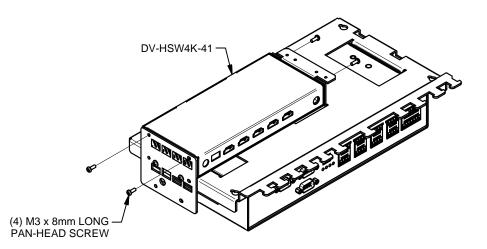


## 4B. INSTALLING TWO DV-HSW4K-41 UNITS:

- a. REMOVE DV-HSW4K-41 SIDE BRACKET AND REINSTALL TO NEW POSITION ONTO BASE PLATE.
- b. INSTALL DV-HSW4K-41 MOUNTING/SUPPORT BRACKET TO BASE PLATE WITH SUPPLIED #6 HARDWARE.

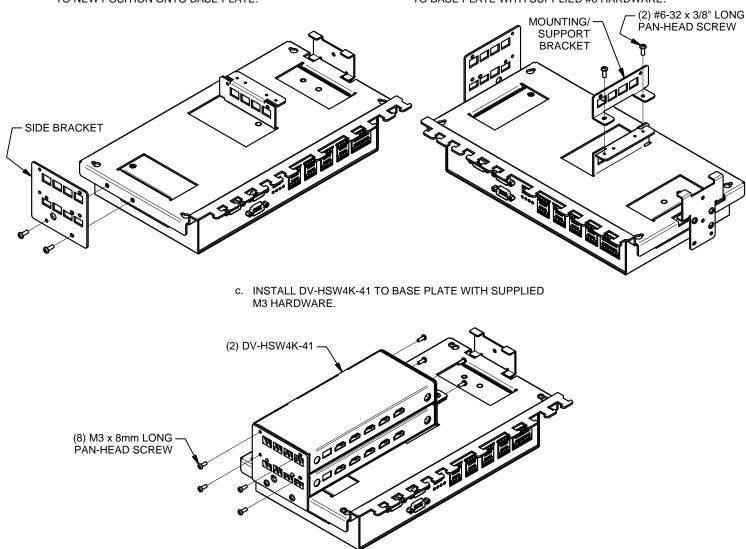


## 5A. INSTALLING ONE DV-PC2HD UNIT:

a. INSTALL MOUNTING BRACKET TO DV-PC2HD WITH #6 HARDWARE (MOUNTING BRACKET AND #6 HARDWARE SUPPLIED WITH DV-PC2HD).

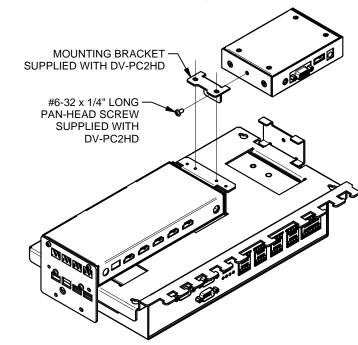


## 5B. INSTALLING TWO DV-PC2HD UNITS:

a. REMOVE DV-PC2HD SIDE BRACKET. INSTALL MOUNTING b. REINSTALL SIDE BRACKET TO BASE PLATE AND BRACKET TO DV-PC2HD WITH #6 HARDWARE (MOUNTING SECURE DV-PC2HD WITH #6 HARDWARE SUPPLIED BRACKET AND #6 HARDWARE SUPPLIED WITH DV-PC2HD). WITH DV-PC2HD. INSTALL DV-PC2HD WITH ATTACHED MOUNTING BRACKET TO BASE PLATE WITH SUPPLIED #6 HARDWARE.

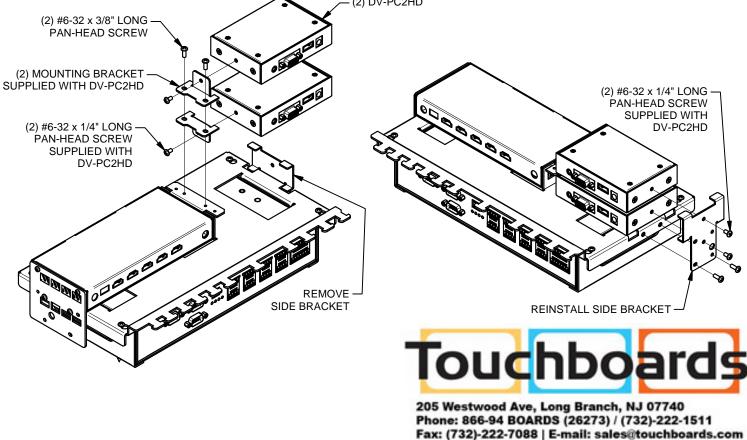

b. INSTALL DV-PC2HD WITH ATTACHED MOUNTING BRACKET TO BASE PLATE WITH SUPPLIED #6 HARDWARE AND #6 HARDWARE SUPPLIED WITH DV-PC2HD.

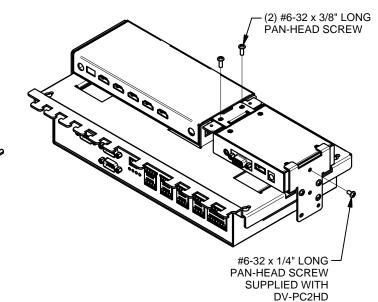

(2) DV-PC2HD