


1587 FC/1587/1577 Insulation Tester

Quick Reference Guide


See Users Manual for "Safety Information" and complete operating information.

- All illustrations show the 1587 FC.


Fluke Connect (i))

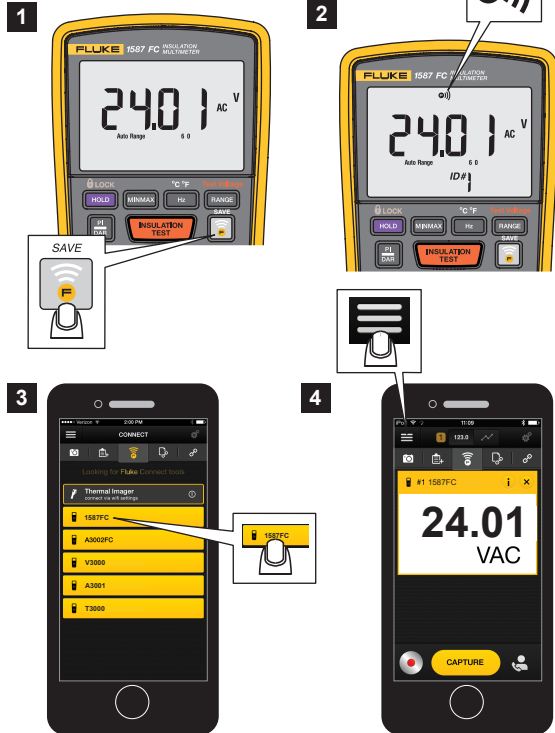


Fuse Test

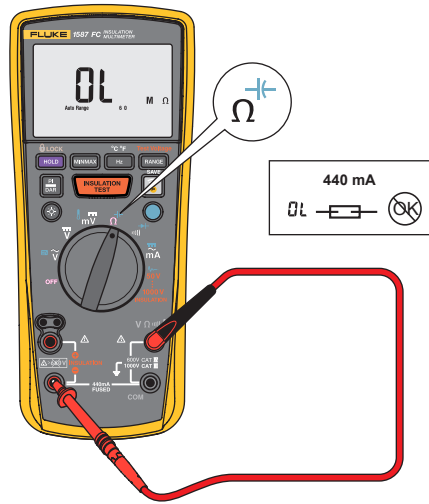


Temperature

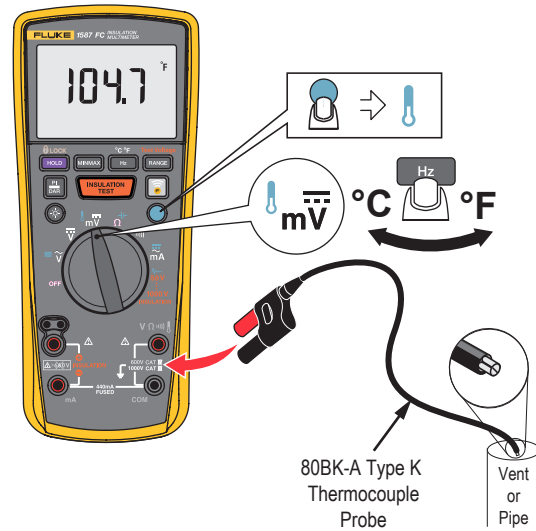


Testing Insulation

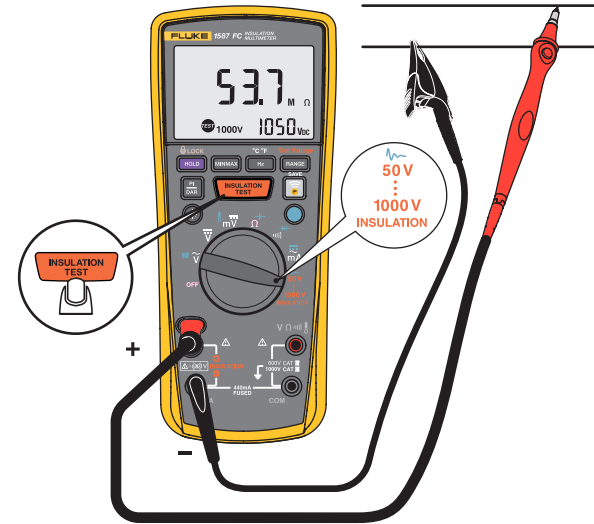


PI / DAR

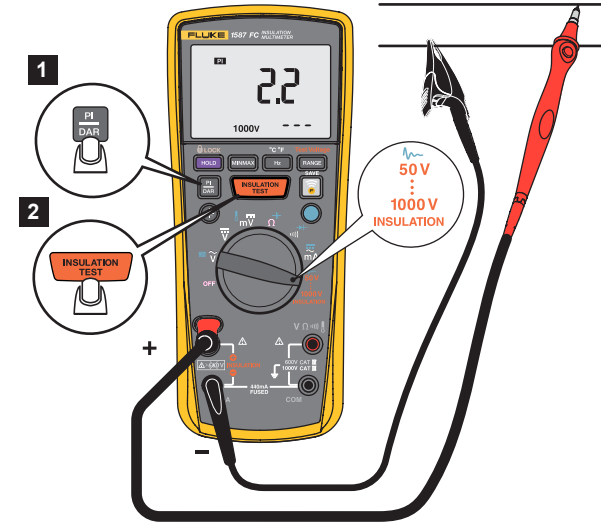


Voltage \tilde{V} \bar{V} \bar{mV}

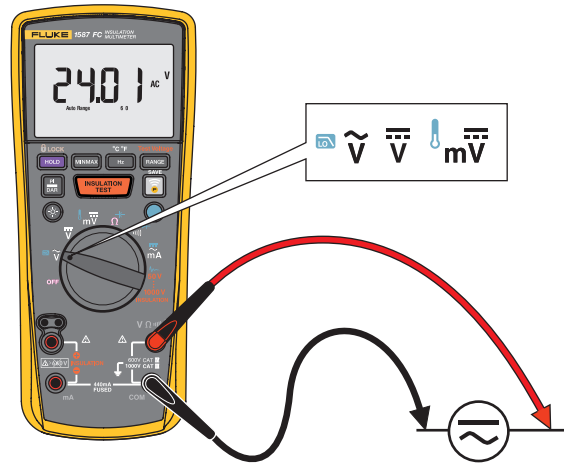



Continuity ()))

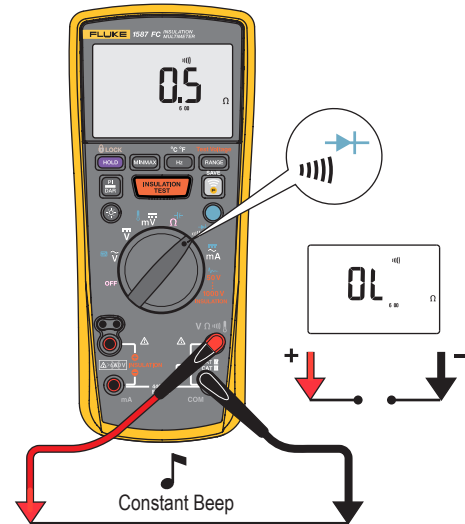


Current \tilde{mA} , \bar{mA}

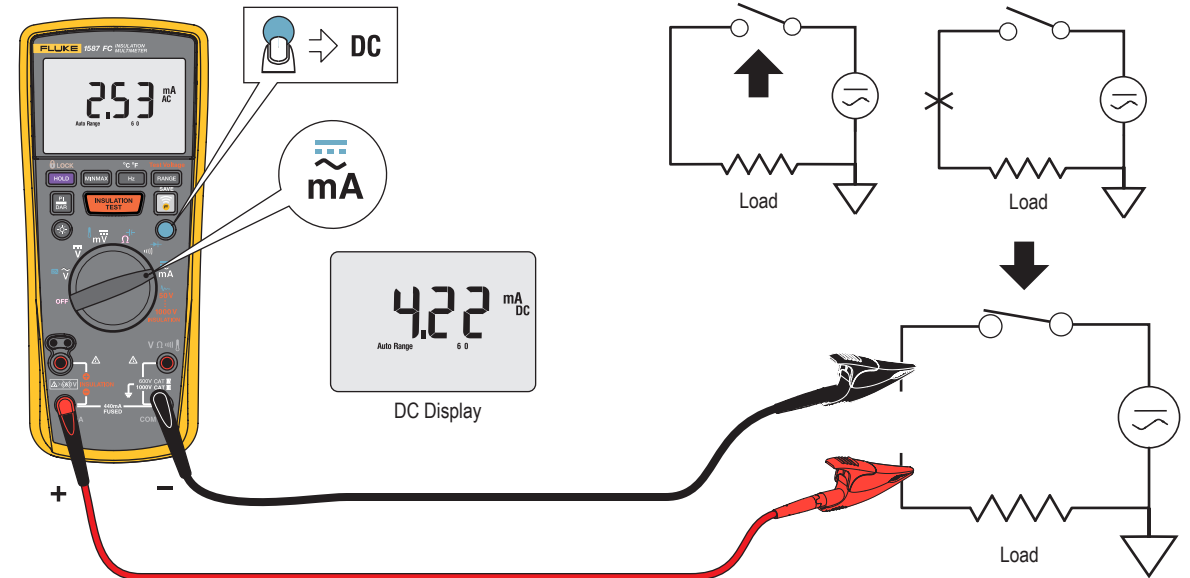


Diode Test $\rightarrow|$

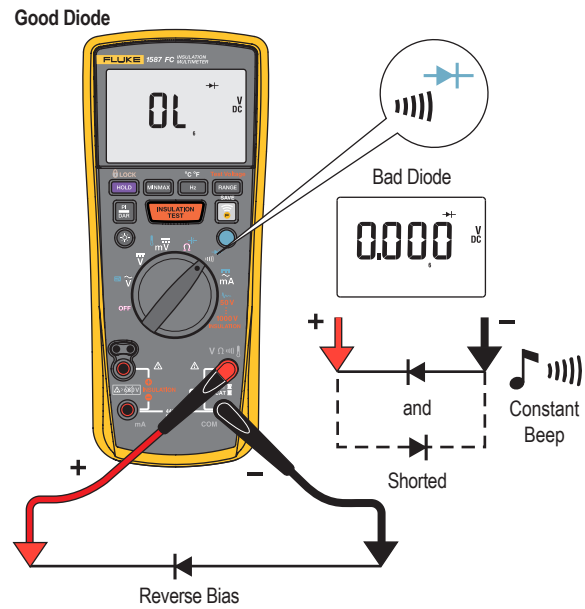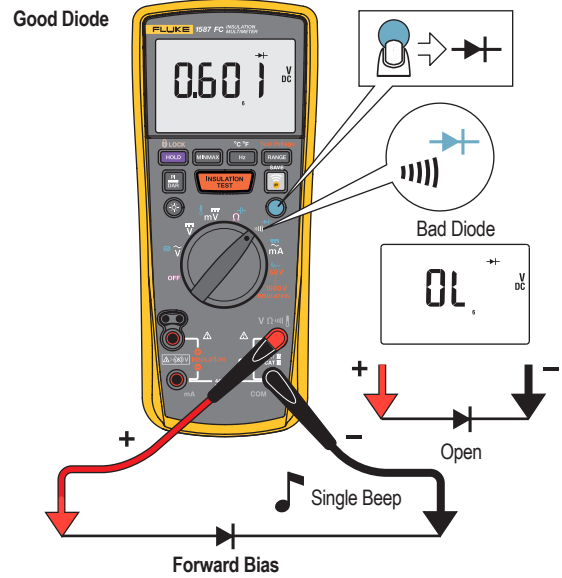


Resistance Ω

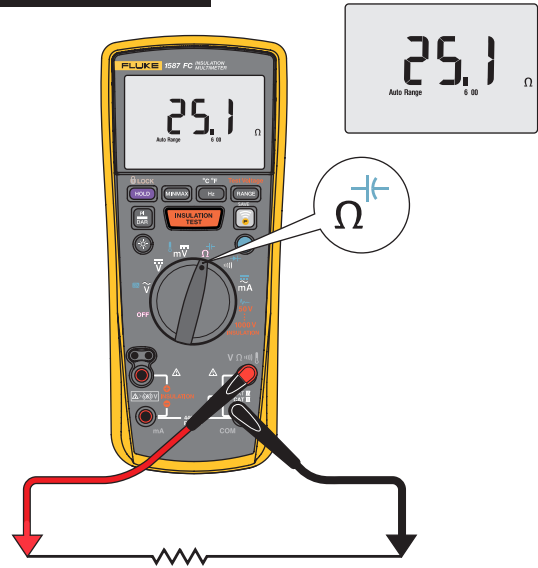


Capacitance μF

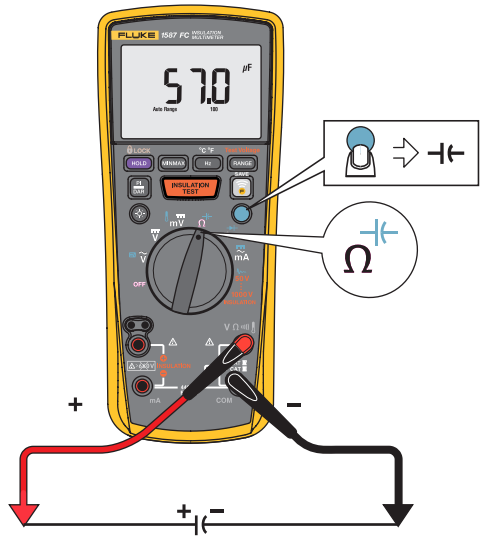


Frequency (Hz)

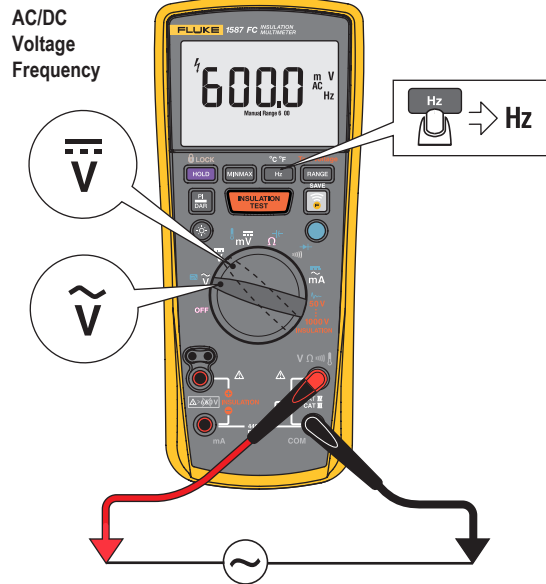


AC/DC Current Frequency

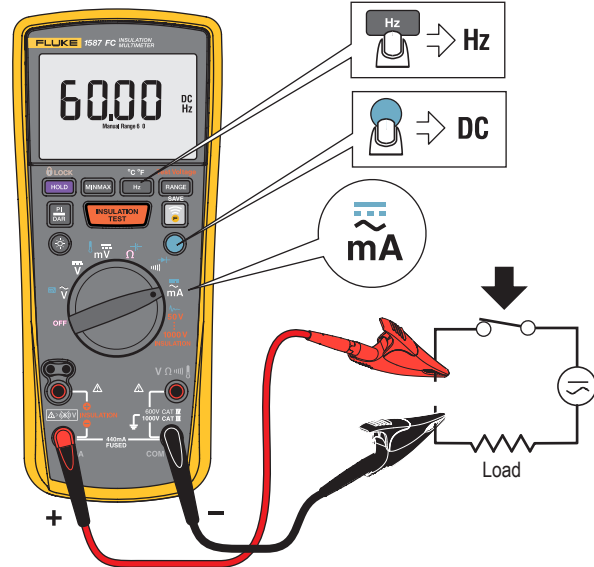

Low Pass (VFD) Filter (Model 1587)

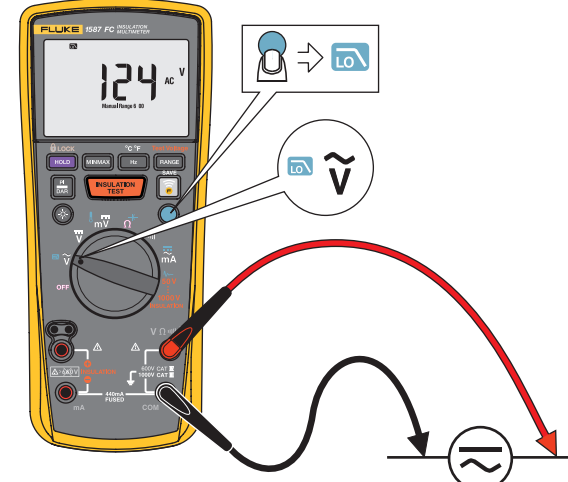

Smoothing (Power Up Option)

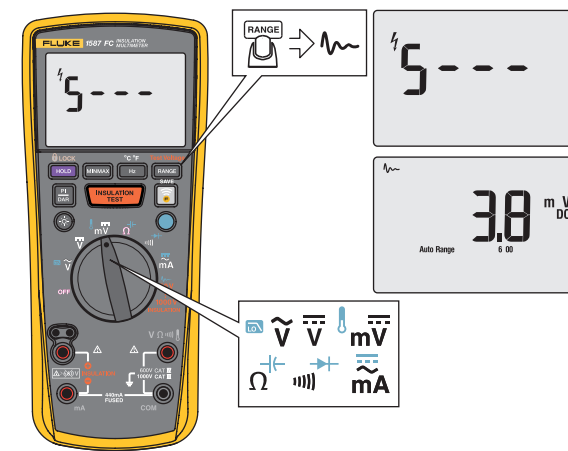

Battery / Fuse Replacement \square / \square

