

FLUKE®

T5-600/T5-1000

 
Electrical Tester

Instruction Card

⚠ Warning


- Read the T5-600/T5-1000 Safety Sheet before using this tester.
- Lisez la fiche de sécurité T5-600/T5-1000 avant d'utiliser cet appareil.
- Prima di usare questo tester leggere le istruzioni per la sicurezza allegate al T5-600/T5-1000.
- Vor Verwendung des Prüfgeräts das Sicherheitsblatt T5-600/T5-1000 lesen.
- Lea la hoja de instrucciones de seguridad T5-600/T5-1000 antes de utilizar este probador.
- Antes de usar este instrumento de teste, leia a Folha de Segurança T5-600/T5-1000.
- Lees vóór gebruik van deze tester het veiligheidsblad bij de T5-600/T5-1000.
- Les sikkerhetsdataene for T5-600/T5-1000 før testinstrumentet tas i bruk.
- Man bør læse sikkerhedsanvisning T5-600/T5-1000 inden man benytter instrumentet.
- Lue T5-600/T5-1000 –turvaohjeet ennen tämän mittarin käyttöä.
- Läs säkerhetsdatabladet för T5-600/T5-1000 innan du använder denna testare.
- 本器を使用する前に、T5-600/T5-1000 Safety Sheet をお読みください。
- 이 테스터를 사용하기 전에 T5-600/T5-1000 안전 지침을 읽으십시오.
- 使用该测试仪之前，请参阅 T5-600/T5-1000 安全说明书。
- 使用本測試儀之前，請參閱 T5-600/T5-1000 安全說明書。
- เพื่อความปลอดภัยโปรดอ่าน T5-600/T5-1000 ก่อนการใช้งานทดสอบ

Voltage Indicator




≡ V

T5-600 max: 600 V CAT III
T5-1000 max: 1000 V CAT III, 600 V CAT IV

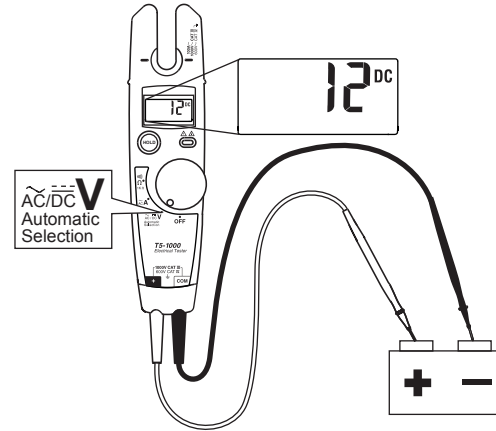


≈ V


45 Hz - 66 Hz
T5-600 max: 600 V rms CAT III
T5-1000 max: 1000 V rms CAT III, 600 V rms CAT IV

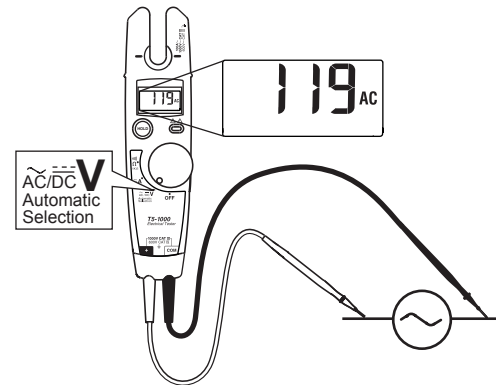


Continuity & Resistance Ω

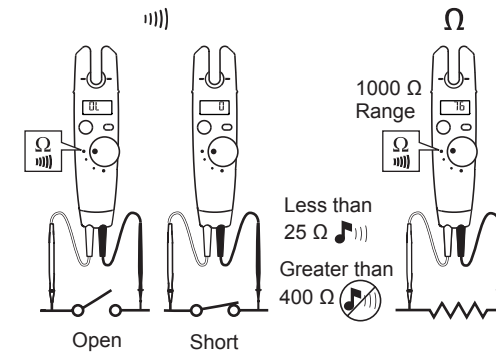


~A

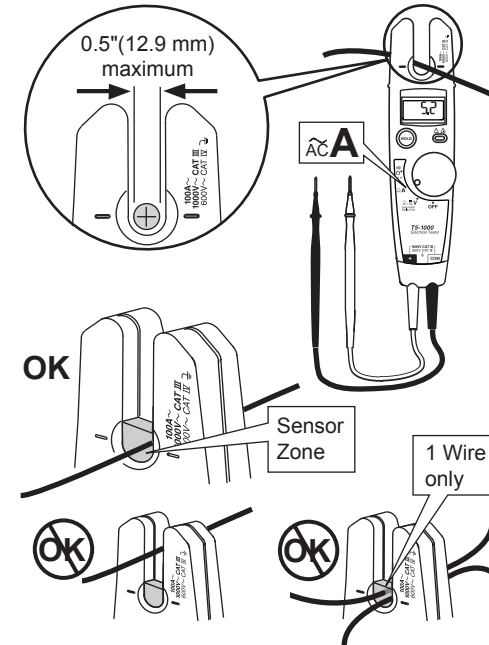


Display HOLD

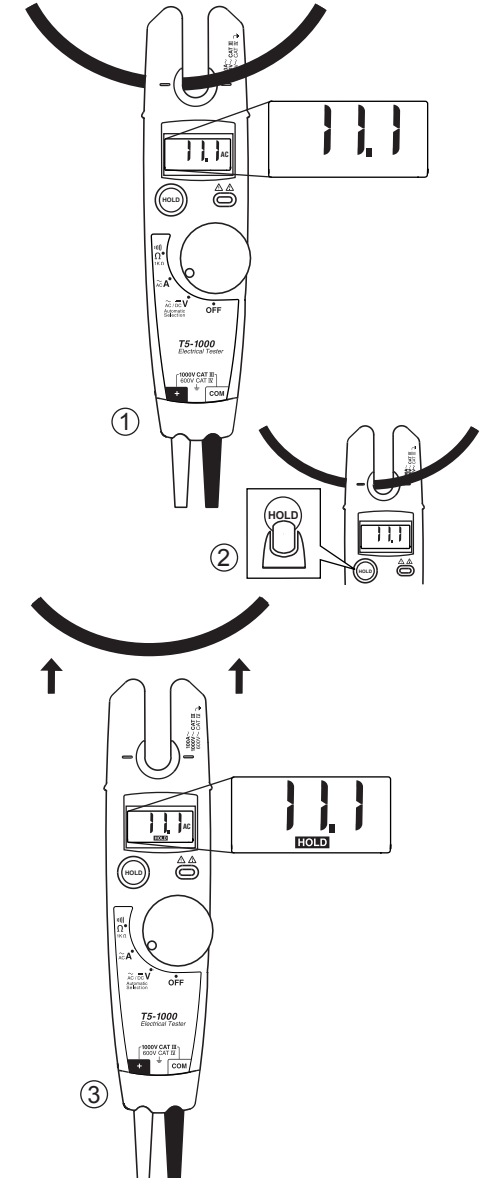

Auto Off

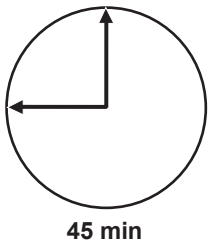

LO +

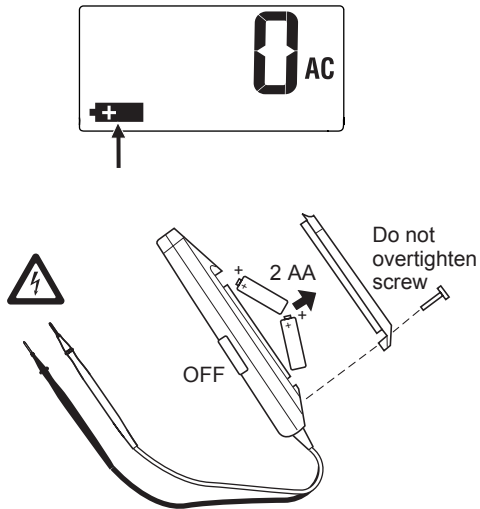

- ⚠ Warning**
- Disconnect test leads from power source before opening battery door.
 - Débranchez les cordons d'essai avant d'ouvrir le couvercle de la pile.
 - Prima di aprire lo sportello del vano della pila, scollegare i cavetti dal circuito di alimentazione.
 - Die Prüfleiter vor dem Öffnen des Batteriefachs von der Stromquelle trennen.
 - Desconecte los conductores de prueba de la fuente de alimentación antes de abrir la cubierta de la batería.
 - Antes de abrir a tampa do compartimento das pilhas, desconecte os terminais de teste da fonte de alimentação.
 - Maak de meetkabels los van de stroombron voordat u de batterijklep opent.
 - Koble prøveledningene fra strømkilden før batteridekselet åpnes.
 - Søgeledningerne skal tages evt. emne, inden batteridækslet åbnes.
 - Irrota koestusjohtimet virtalähteestä ennen paristolokeron avaamista.
 - Koppla bort mätsladdarna från strömkällan innan du öppnar batteriluckan.
 - バッテリー・ドアを開ける前に、テストリードを電源からはずしてください。
 - 배터리 도어를 열기 전에 테스트 리드를 전원과 분리하십시오.
 - 打开电池门之前，请先从电源断开测试导线。
 - 打開電池蓋之前，請從電源上拔掉測試導線。
 - ถอดขั้วทดสอบจากแหล่งไฟฟ้าก่อนเปิดกล่องแบตเตอรี่

Specifications

Specifications subject to change without notice.

Calibration	1-year calibration cycle
Temperature Operating: Storage:	-10 °C to +50 °C (14 °F to 122 °F) -30 °C to +60 °C (-22 °F to +140 °F)
Altitude Operating: Storage:	2000 m (6562 ft) 10,000 m (32808 ft)
Relative Humidity	0 % to 95 %, 5 °C to 30 °C (41 °F to 86 °F); 0 % to 75 %, 30 °C to 40 °C (86 °F to 104 °F); 0 % to 45 %, 40 °C to 50 °C (104 °F to 122 °F)
Battery Type and Life	AA (2); 360 hours continuous with alkaline; 125 hours continuous with zinc chloride
RF Field Specification	0.5 % full scale + (specified accuracy) at 3 V / m
Enclosure Rating	IP 52 per IEC 60529, no vacuum applied
Safety	Complies with ANSI/ISA-S82.01-94, UL classified to IEC 61010, CSA/CAN C22.2 No.1010.1-92, and EN 61010-1: 1995.
EMC	EN 61326
Temperature coefficient	0.1 x (specified accuracy) / °C for <18 °C or >28 °C (< 64.4 °F or > 82.4 °F)
Accuracy	± ([% of reading] + [number of least significant digits]) Accuracy is specified for 1 year after calibration, at 18 °C to 28 °C (64 °F to 82 °F) with relative humidity to 90 %. AC conversions are ac-coupled, average responding, and calibrated to the rms value of a sine wave input.
CAT III protects against transients in a <i>fixed equipment installation</i> such as a distribution panel, and lighting systems in large buildings.	
CAT IV protects against transients from a <i>primary supply</i> such as an electricity meter or an overhead or underground utility service.	

Function	T5-600 Range	T5-1000 Range	Resolution	Accuracy
$\tilde{V}$	600 V rms	1000 V rms	1 V	$\pm (1.5 \% + 2 \text{ digits})$
$\overline{V}$	600 V	1000 V	1 V	$\pm (1 \% + 1 \text{ digit})$
$\tilde{A}$	100.0 A	100.0 A	0.1 A	$\pm (3 \% + 3 \text{ digits})$
	1000 V CAT III 600 V CAT IV			
Ω	1000 Ω	1000 Ω	1 Ω	$\pm (1 \% + 2 \text{ digits})$

Certifications:	CE	SP	CLASSIFIED UL In accordance with IEC 61010-1, 54CJ
-----------------	----	----	---

Replacement Parts

Test Lead Assembly. Replace only with Fluke double-insulated leads (□) See "Accessories" for available probes.	PN 648029
Battery Door	PN 2091779
Battery Door Screw	PN 1618578

Accessories

H5 Belt Holster
TP1 Probe Set, Flat-Blade
AC285 SureGrip™ Alligator Clips
AC220 SureGrip™ Alligator Clips
Service Information Sheet, PN 686953

To contact Fluke, call:
USA: 1-888-99-FLUKE (1-888-993-5853)
Canada: 1-800-36-FLUKE (1-800-363-5853)
Europe: +31 402-675-200
Japan: +81-3-3434-0181
Singapore: +65-738-5655
Anywhere in the world: +1-425-446-5500
Visit Fluke's Web site at www.fluke.com.

205 Westwood Ave
Long Branch, NJ 07740
1-877-742-TEST (8378)
Fax: (732) 222-7088
salesteam@Tequipment.NET