

**4ch Thermistor Terminal**  
**USER'S MANUAL**

Thank you very much for buying this GRAPHTEC product.  
This product can be used as a measurement terminal (hereafter "module") that connects to the GL100-N/GL100-WL.  
These directions describe preparations and cautions before measurement.

To ensure safety, please read the operation instructions, etc.  
For details on the warnings and how to handle this module, please read the Quick Start Guide or USER'S MANUAL included on the CD-ROM (included in the GL100 packaging)

**Confirmation of the exterior**

After opening the package, please confirm that there are no problems (scratches and dirt) on the exterior before use.

**Confirmation of the attached items.**

- User's manual (this book): 1


If by any chance faults are found, please contact the store where you bought the item.

\* Please note that items mentioned in this book may change without prior notice.

604309181 MANUAL-TSR

**1 Part Names**

This section describes the name and function of each part.

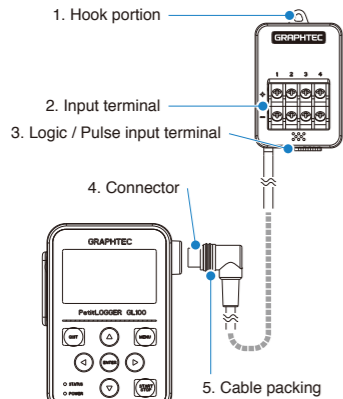

GL100 main module

- Hook portion ..... Used to mount to a wall.
- Input terminal ..... Used to connect Thermistor.
- Logic/Pulse input terminal ..... Used to input logic / pulse.
- Connector ..... Used to connect to the connector on the GL100 module.
- Cable packing ..... This packing is used when connecting the connector.

**CAUTION** This module is not dustproof or waterproof. Please use it in a proper usage environment.

After connecting the GL100 to modules or sensors, please always check/set the time and date.


< Extension cable >  
The module can be used approx. 1.5 m away from the GL100 by using an extension cable for GS (GS-EXC). However, you cannot connect and use multiple extension cables.

**2 How To Connect**

We will now explain how to connect the signal input cable.

**1. Thermistor input**


Connect the GS thermistor sensor (GS-103AT-4P or GS-103JT-4P; each sold separately) to the +/-.

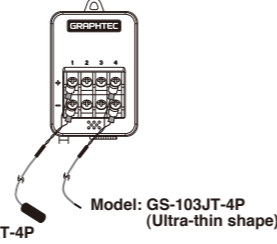

**WARNING** This terminal is for thermistor input only. Make sure not to input voltage or electric current, as this can cause damage.

**4. Logic / pulse input**

+ : No. 1 to No. 4: High-voltage terminal (terminal input on the input signal's high-voltage side)  
- : G: Low-voltage terminal (terminal input on the input signal's low-voltage side)

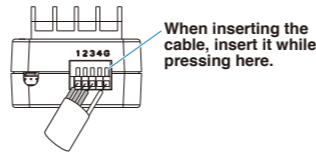

**CAUTION** G is the GND terminal for this module.

**3 Regarding Maximum Input Voltage**

To avoid break-downs or short-circuiting accidents, please make sure to abide by the items written below.

• Maximum input voltage

In case the input voltage exceeds the specifications, the circuit at the input part will break down. Please don't input it.

Logic / Pulse  
<Input terminal (+) / GND terminal interval>  
Maximum input voltage: DC24V

**4 How To Measure**

**1. Power supply (Refer to Quick Start Guide or USER'S MANUAL.)**

Connect this module while power is being supplied to the GL100 by a battery or USB cable.

**2. Start-up and operation**

(1) Screen display menu flow

After power-on, the GL100 is ready for operation by holding down [MENU] key. When the module is connected, "Module Type Recognition" screen is displayed. When the module is not connected, "Module Unconnected State" screen is displayed.

Operate in accordance with the displayed instructions.



**Module unconnected state**  
<Operation>  
Connect the module.



**Recognition of module types**

 


**Standby state**  
<Operation>  
Press [ENTER] key.



**Module start-up**

(2) Free-running screen



Hold down the [QUIT] key (approx. three seconds) to put the module into standby state. When running on batteries, the module will automatically go into standby state after three minutes of no operation. Press the [ENTER] key while in standby state to return to the free-running screen.

**3. Setting**


(1) Setting screen operation

**Item selecting screen**

Press the [MENU] key on the free-running screen to go to the setting screen.

<How to set>

Select the item with the directional keys (Δ▽◀▶) and press the [ENTER] key.

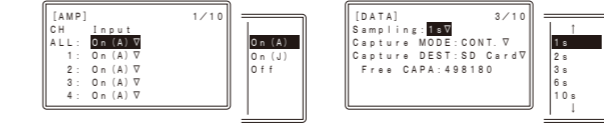

If the submenu shows ↑↓ then there are selections in those directions.

**Numerical entry screen**

 
<How to set>

Numbers can be inputted by increasing or decreasing the value with the Δ and ▽ keys.



(2) AMP setting

Select the 4ch measurement content then select the sensor type to be connected.




**AMP input condition settings (4ch)**

Input	Off, On(A), On(J)
-------	-------------------

Set to On (A) for Model GS-103AT-4P.  
Set to On (J) for Model GS-103JT-4P.

(3) LOGIC setting

 Select the 4ch logic measurement content. When setting the pulse, select the slope if new logic is "on."




**LOGIC input condition settings (4ch)**

Off	Input Slope	Off, On
Logic	Input Slope	Off, On
Pulse	Input Slope	Counts: ↑H, ↓L Inst.: ↑H, ↓L

(4) DATA setting

Set the Sampling and Capture Mode those will be recorded to the data recording media.

 The recorded data's size will be displayed in the information for the SD card being recorded to. Please take note of it.



**DATA recording condition setting**

Sampling	500 ms, 1, 2, 5, 10, 20, 30s, 1, 2, 5, 10, 20, 30, 60 min
Capture MODE	CONT, 1 Hour, 24 Hour
Capture DIST	Memory, SD card

 
(5) TRIGGER setting

Select the conditions for beginning data recording after measurement starts.

Off : Pressing the [START/STOP] key on this module will start/stop recording.

Start : The recording will start with the trigger source conditions after pressing the [START/STOP] key. The recording will stop after pressing the [START/STOP] key.

Stop : The recording will start after pressing the [START/STOP] key and will be stopped with the trigger source conditions.



**TRIGGER capture condition settings**

TRIG Setting	Off, Start, Stop
TRIG Source	Off
Level / Mode	Off Level On Level ↑H Value setting ↓L Value setting * The level depends on the setting range.
Alarm	Off
Date	Date, Time

(6) ALARM setting

Set the alarm information. The parameters will vary depending on the setting range. Please set the number level.



**ALARM settings**

Alarm	Off
Level / Mode	Off Level On Level ↑H Value setting ↓L Value setting * The level depends on the setting range.

(7) Temperature unit setting


From the OTHER-2 screen, you can switch between temperature displays in Celsius (°C) or Fahrenheit (°F).

**5 Recording**

(1) Recording


Press the [START/STOP] key to start measuring with the set conditions.

After pressing [START] key, when the module is in awaiting recording start, "ARMED" is displayed, and then when recording is started, "REC" is displayed. When alarm occurs, "ALM" is displayed.

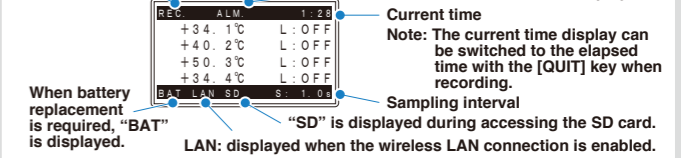

Note: The current time display can be switched to the elapsed time with the [QUIT] key when recording.

The module's status is shown with the lamp display.

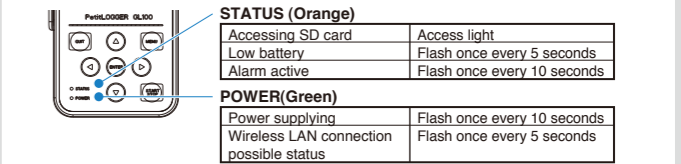

**CAUTION** When accessing an SD card, do not remove the SD card. The data may not write properly or the SD card may be damaged.  
When "low battery" is displayed, replace the battery or connect the USB interface to supply power as soon as possible. Caution: Batteries cannot be replaced when recording data. Replace them after the recording has finished.

(2) Recording completion

- Press the [START/STOP] key to stop measuring.
- The screen display will change to the standby screen display.
- Press [ENTER] key to change to the free-running screen display.




**6 How To Confirm The Data**

Check the recorded data with the application software included with this module using the method below (for details, refer to the USER'S MANUAL).


- Connect the USB interface and check the online data
- Insert the SD card into PC and check the data directly
- Check the data directly from PC via wireless LAN

**7 Regarding Thermistor Sensor**

1. Type A (GS-103A-4P)

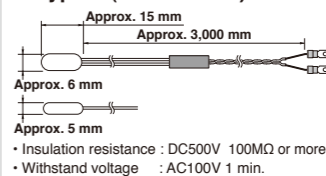

2. Type J (GS-103JT-4P) <Ultra-thin shape>

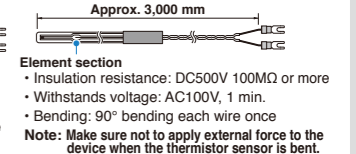

**Element section**  
• Insulation resistance: DC500V 100MΩ or more  
• Withstands voltage: AC100V, 1 min.  
• Bending: 90° bending each wire once  
\* Note: Make sure not to apply external force to the device when the thermistor sensor is bent.

**8 Specifications**

Item	Contents
Measurement data	Temperature/Logic, Pulse count (Instant, Accumulation)
Measurement channels	Temperature 4 channels Logic/Pulse count 4 channels
Input method	Scan method, non-isolated input (Thermistor input)
Measurement temperature range	Available for the two types of thermistors (option). Type A: -40°C to 105°C (GS-103AT-4P) Type J: -40°C to 120°C (GS-103JT-4P)
Measured temperature accuracy	<Main module> -40 ≤ TS < 0 ±0.7 (°C) 0 ≤ TS ≤ 35 ±0.2 (°C) 35 < TS ≤ 70 ±0.4 (°C) 70 < TS ≤ 120 ±1.0 (°C) <Thermistor sensor> ±0.4 °C (Typical value)
Logic-Pulse Input	Input voltage range: 0 to +24V (One line ground input) Input signal: No-voltage contact (a contact, b contact, NO, NC), Open collector, voltage input Threshold level: approx. +2.5V Hysteresis: approx. 0.5V (+2 to +2.5V)
Pulse measurement range	Instant : Max. 200C / Sampling Accumulation: Max. 65535C
Temperature unit	Select from °C (Celsius) / °F (Fahrenheit)
Sampling interval	0.5, 1, 2, 5, 10, 20, 30 sec. 1, 2, 5, 10, 20, 30, 60 min.
Triggers	Start trigger : OFF, LEVEL, ALARAM, DATE Stop trigger : OFF, LEVEL, ALARAM
Alarm	OFF / Level
Cable length	approximate 20 cm
Usage environment	-10 to 50°C, 80% RH ore less (non-condensing)
External dimensions (W×D×H) (approximate)	46 × 66 × 35.5 mm (not including protruding parts)
Weight (approximate)	83 g