



## M-LLA

### Light Sensor Level

Simply drop the light sensor level over the PAR or solar radiation sensor to determine if the sensor is level. Purchase one for use on any number of light sensors.



## Contact Us

Sales (8am to 5pm ET, Monday through Friday)

- ▶ Email [sales@onsetcomp.com](mailto:sales@onsetcomp.com)
- ▶ Call 1-508-759-9500
- ▶ In U.S. toll free 1-800-564-4377
- ▶ Fax 1-508-759-9100

Technical Support (8am to 6pm ET, Monday through Friday)

- ▶ Contact Product Support [www.onsetcomp.com/support/contact](http://www.onsetcomp.com/support/contact)
- ▶ Call 1-508-759-9500
- ▶ In U.S. toll free 1-877-564-4377

Onset Computer Corporation  
470 MacArthur Boulevard  
Bourne, MA 02532