

FUNCTIONS	COMBI 521	COMBI 519	EASYTEST
Insulation resistance	50, 100, 250, 500, 1000 VDC	50, 100, 250, 500, 1000 VDC	50, 100, 250, 500, 1000 VDC
Polarization index PI and dielectric absorption ratio DAR	•	•	•
Continuity of the protection cable	200mA	200mA	200mA
RCD tripping time and current, manual / auto / ramp test	A, AC, B General, Selective	A, AC, B General, Selective	A, AC, General, Selective
RCD nominal currents (mA) (Molded case type)	6, 10, 30, 100, 300, 500, 650, 1000	6, 10, 30, 100, 300, 500, 650, 1000	6, 10, 30, 100, 300, 500, 650, 1000
Fault / line impedance and prospective fault / short-circuit current	•	•	•
Breaking capacity MCB / Fuse	•	•	•
L-PE resistance no trip RCD	• (2-wires, 3-wires)	• (2-wires, 3-wires)	• (2-wires, 3-wires)
Voltage drop	•	•	•
Phase Sequence Indication	•	•	•
Automatic test sequence	• (Ra, RCD, MOhm)	• (Ra, RCD, MOhm)	• (Ra, RCD, MOhm)
Wiring polarity checker	•	•	•
DMM	•	•	•
EVSE safety AUTO sequence	•		
Environmental parameters	•		
Leakage current	•		
Power quality	•		
GUI (Graphic user interface)	Black/White Graphic display	Black/White Graphic display	Black/White Graphic display
Memory recall and clear	• (999 locations)	• (999 locations)	• (999 locations)
PC Interface	• (optical/USB)	• (optical/USB)	• (optical/USB)
WiFi interface	•		