


Replacing the lens

This projector is shipped lens-less. You can order optional lenses from www.infocus.com (in select areas), your retailer or your dealer.


- 1 Turn the projector off and unplug the power cord.
- 2 Wait 60 minutes to allow the projector to cool thoroughly.
- 3 If a lens is not attached, remove the dust cap from the projector and go to Step 6.
- 4 If a lens is attached, press and hold the release button located near the lens (marked "Press: Release lens") to release the lock.
- 5 Twist the lens counter-clockwise and carefully remove it from the front of the projector. Release the release button.
- 6 Insert the new lens into the projector carefully, arrow side up, through the front of the projector. Turn the lens clockwise until you hear a click.
- 7 Plug in the power cord, turn on the power switch and press the **Power** button to turn the projector back on. Note: Connection to a circuit with a minimum of 20A capacity is recommended.
- 8 Activate the Center Lens feature in the Alignment menu. (This will allow the lens to work properly.)

(1)

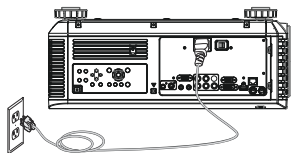


Turn off and
unplug projector

(2)

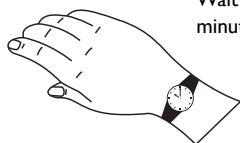


Wait 60
minutes

(3)

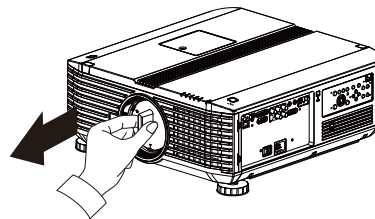


(4)

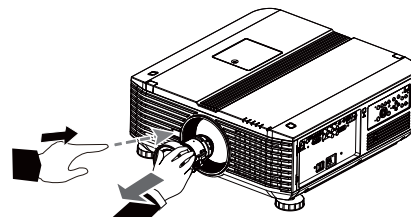

(5)

(6)

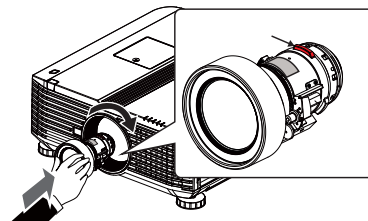

5012092900

