

Video Meeting

If you have a basic unmanaged network with a router provided by your ISP, you will likely need to configure nothing. Most firewalls in a standard configuration will allow a [stateful](#) connection.

Socket	Direction	Usage	Port #
TCP and UDP	Outbound	SIP	5060, 5061
UDP	Outbound	InFocus.net Media	25000-35000
HTTPS	Outbound	InFocus.net Provisioning	443
TCP and UDP	Outbound	H.323	1720
UDP	Outbound	H.323 Media	1024-65535

EMAIL

These Outbound TCP Ports need to be unrestricted depending on the chosen email service/configuration.

Socket	Direction	Usage	Port #
TCP	Outbound	SMTP	25, 465, 587
TCP	Outbound	IMAP	143, 993
TCP	Outbound	POP	110, 995

Mondopad Services

All of the below services are designed to work on your internal network. This information is provided in case you have security between Mondopads on your internal network that would prevent this communication. Otherwise it's not likely you will need to make any network configuration changes to use these services.

Socket	Direction	Usage	Port #
UDP	Inbound	Mondopad Management Tool	10089
TCP	Inbound	Sharing/ControlView	38100, 38101
TCP	Inbound	Sharing/ControlView	53001
UDP	In and outbound	Sharing/ControlView	10086, 38436-38439
UDP	In and outbound	Mondopad Discovery	2001