

InFocus PC Module Replacement


1. Power down the PC by shutting down windows. You will see the green LED on the PC turn off.



2. Switch the rocker to power off the unit.




3. Remove the two screws holding the PC in place.

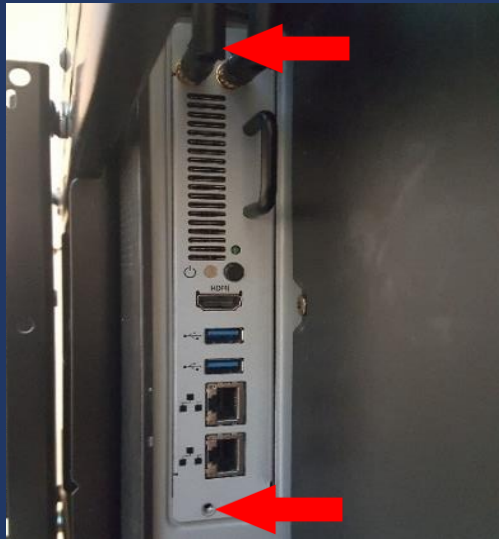

4. Gently remove the PC using the handle.




5. Remove the antenna from the PC and install them onto the replacement PC.

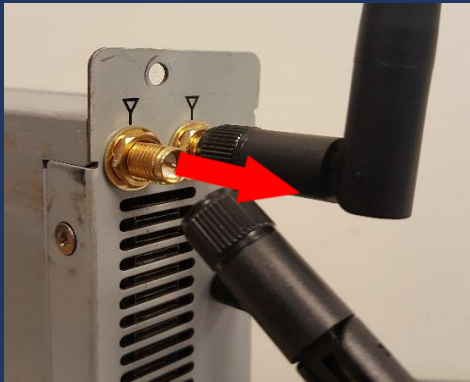

6. Re-seat the replacement PC back into the panel.



7. Replace the two screws securing the PC into the panel.

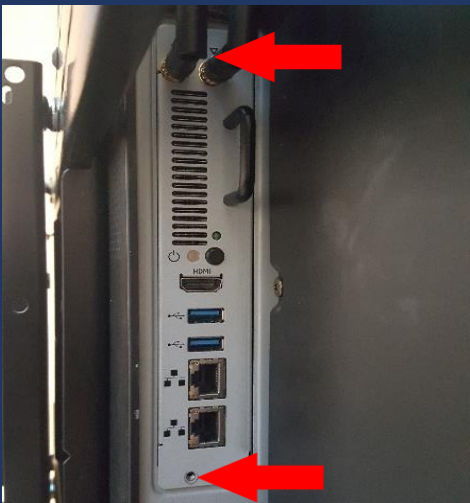

8. Power the unit back on with the rocker switch.

