


How to Update Your Lightcast


1. Load the update file to a USB thumb drive
2. Insert thumb drive into the Lightcast Module (or the panel in the case of the INF6501c)
3. Press on the “cog wheel” in the lower right hand corner for settings

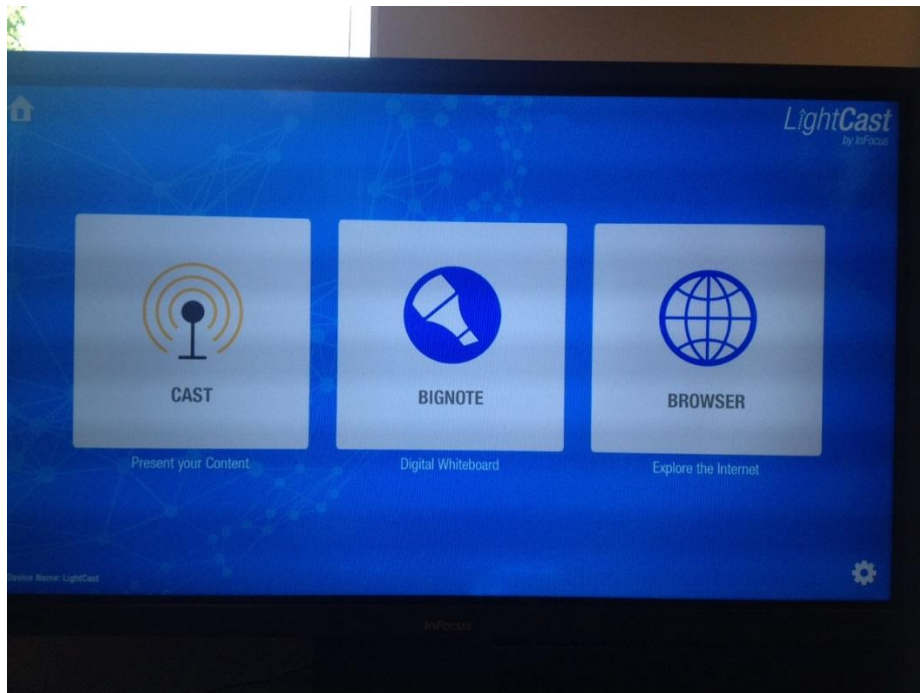


Touchboards

205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com


4. Press on the “Firmware Update” button

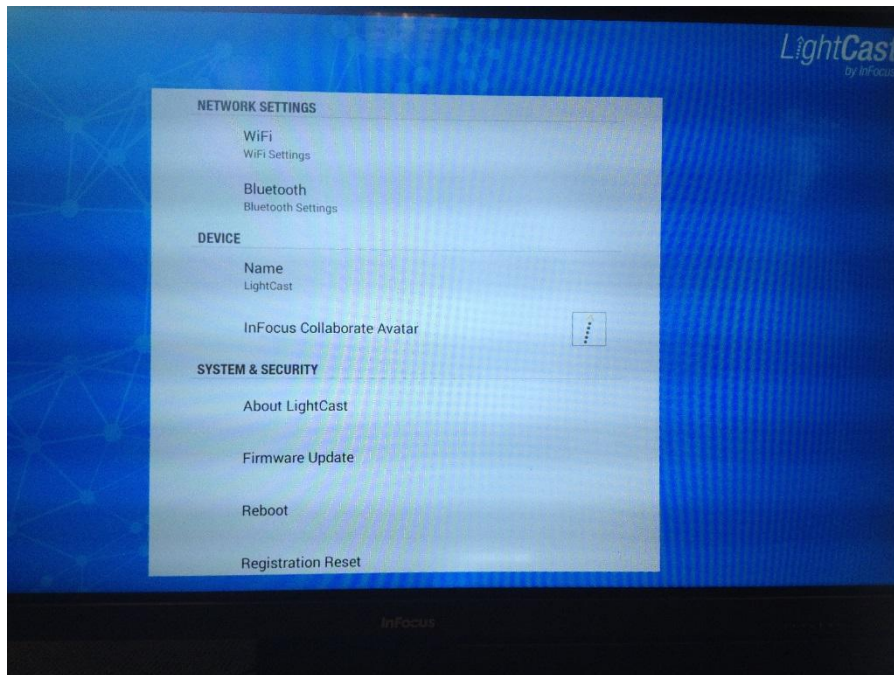

5. Navigate to your zipped update file under “Update Using USB” by clicking “Update”

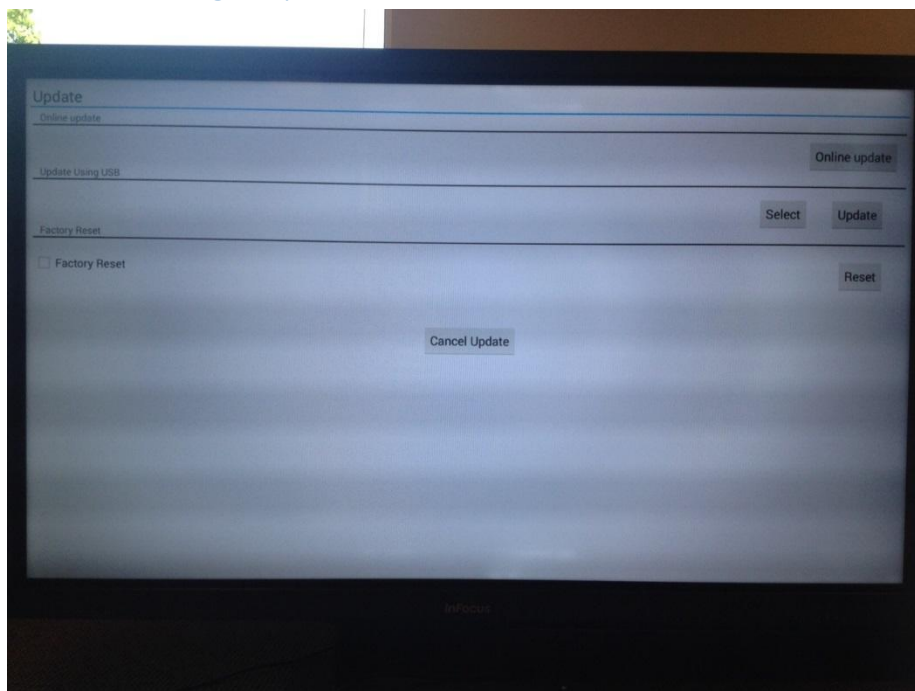

6. Select UPDATE

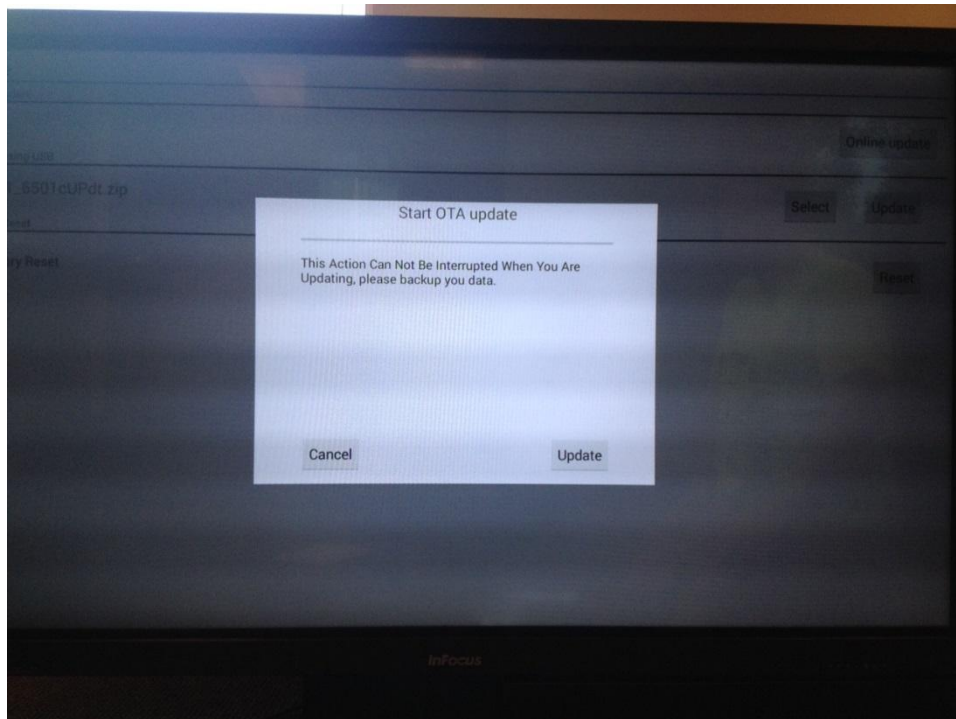

7. The system will update and restart automatically.