














	(Power on/off)	uPD6121G: 02 BD 45 BA(32bits)
	(Focus/Mouse mode switch)	uPD6121G: 02 BD 50 AF(32bits)
	(Voice mute)	uPD6121G: 02 BD 80 7F(32bits)
	(Focus/Mouse toward the up)	uPD6121G: 02 BD CA 35(32bits)
	(Focus/Mouse toward the left)	uPD6121G: 02 BD 99 66(32bits)
OK	(mode,Mouse left click@mouse mode)	uPD6121G: 02 BD CE 31(32bits)
	(Focus/Mouse toward the right)	uPD6121G: 02 BD C1 3E(32bits)
	(Focus/Mouse toward the down)	uPD6121G: 02 BD D2 2D(32bits)
	(Return/exit)	uPD6121G: 02 BD D0 2F(32bits)
	(Home)	uPD6121G: 02 BD 95 6A(32bits)
	(Switch applications of recently@mouse mode)	uPD6121G: 02 BD 51 AE(32bits)
	(Menu)	uPD6121G: 02 BD D6 29(32bits)
	(Notifications)	uPD6121G: 02 BD C5 3A(32bits)
	(Volume up)	uPD6121G: 02 BD DD 22(32bits)
	(Volume down)	uPD6121G: 02 BD 8C 73(32bits)
	(Page up)	uPD6121G: 02 BD 9A 65(32bits)
	(Page down)	uPD6121G: 02 BD CD 32(32bits)