

FLEXMOUNT™ 8111

Installation Instructions

Desk Clamp

- 1
- 2
- 3

Thru-Desk

8111-cup, 8251-cup, 8318-cup | 8111-thru, 8251-thru, 8318-thru

- 1
- 2

Wall Mount

- 1
- 2

* Hardware not included.

Reverse Wall Mount

8111-wall, 8251-wall, 8318-wall

- 1
- 2

* Hardware not included.

Grommet Hole

 
- 1
- 2
- 3

> 2.5"

Side Bolt

- 1
- 2

* Hardware not included.



Questions? Call Us 800.577.3304

FLEXMOUNT™ 8111

Parts List

ITEM	DESCRIPTION / PART NO.	QUANTITY
A	Mount Column 401328 Model 7000, 7045, 3500, 3545 8269 Model 7500, iLift™, ArcView™ (9177 Series)	1
B	Base Plate 406656 Model 7000, 7045, 3500, 3545 8321 Model 7500, iLift™, ArcView™ (9177 Series)	1
C	Large "L" Bracket 701117 Model 7000, 7045, 3500, 3545 702828 Model 7500, iLift™, ArcView™ (9177 Series)	1
D	Small "L" Bracket 701116	1
E	Rectangular Spacer 701544	1
F	3/8-16 x 1" Flat Socket Cap Screw 701124 Model 7000, 7045, 3500, 3545 701855 Model 7500, iLift™, ArcView™ (9177 Series)	1

ITEM	DESCRIPTION / PART NO.	QUANTITY
G	3/8-16 x 7/8" Flat Socket Cap Screw 701799	1
H	3/8-16 Nylon Stop Nut 701418	1
I	3/8-16 x 7/8" Button Socket Cap Screw 701122	1
J	3/8-16 x 2-1/2" Hex Head Bolt 700268	1
K	1/2-13 x 3" Socket Set Screw 701126	1
L	Foam Pad 701120 <i>Included with Model 7000 and 8111-cup only</i>	1