

# JBC

[www.jbctools.com](http://www.jbctools.com)



## Premium 4 Tools Rework Station with Pneumatic Pump

Ref. DMVE-A

# Packing List

The following items should be included:

**DME Control Unit** ..... 1 unit  
 Ref. DME-1A (120V)  
 DME-2A (230V)  
 DME-9A (100V)



**Pneumatic Desoldering Module** ..... 1 unit  
 Ref. MVE-A



**ESD Tip Cleaner** ..... 1 unit  
 Ref. CL8499



**General Purpose Handle** ..... 1 unit  
 Ref. T245-A



**Stand** ..... 1 unit  
 Ref. AD-SD



**Desoldering Iron** ..... 1 unit  
 Ref. DR560-A



**Stand** ..... 1 unit  
 Ref. DR-SD



**Sponge** ..... 1 unit  
 Ref. S0354



**Metal Brush** ..... 1 unit  
 Ref. CL6217



**Brass Wool** ..... 1 unit  
 Ref. CL6210



**Stand Cable** ..... 2 units  
 Ref. 0011283



**Module Cable** ..... 1 unit  
 Ref. 0014874



**Power cord** ..... 1 unit  
 Ref. 0010569 (230V)  
 0013671 (100/120V)



Check our website for the corresponding manuals. Also available in other languages.


## DR560 Accessories

Ref. 0010211

**Tip cleaning set** ..... 1 unit  
Ref. 0965970



 **Long Tip Cleaning set** ..... 1 unit  
Ref. 0965760

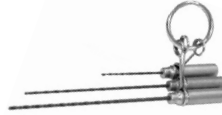

**Tips** ..... 3 units  
Ref. C560005 (x1)  
C560013 (x1)  
C560004 (x1)



**Glass solder collector** ..... 1 unit  
Ref. 0812620



**Spanner** ..... 1 unit  
Ref. 0780550



**Filter Box** ..... 1 unit  
Ref. 0780840  
*It contains 10 filters*



**Internal gasket** ..... 1 unit  
Ref. 0019208  
*It contains 2 gaskets*



**Metal solder collector** ..... 1 unit  
Ref. 0812630



**Cartridges** ..... 2 units  
Ref. C245903 / C245906



**Filter Box** ..... 1 unit  
Ref. 0005966  
*It contains 50 filters*



**Cleaning stick** ..... 1 unit  
Ref. 0786640



**Union Flanges** ..... 1 unit  
Ref. 0011356



**Venturi Filter** ..... 1 unit  
Ref. 0008446



**Cotton Filter** ..... 1 unit  
Ref. 0781046  
*It contains 10 filters*



**Suction Filter** ..... 1 unit  
Ref. 0821830




**Manual** ..... 1 unit  
Ref. 0020517



Premium 4 Tools Rework Station with Pneumatic Pump  
Ref. DMVE-A

# Features

Work simultaneously with **up to 2 tools** and join each station port with **1 module + 1 pedal** (Peripherals).

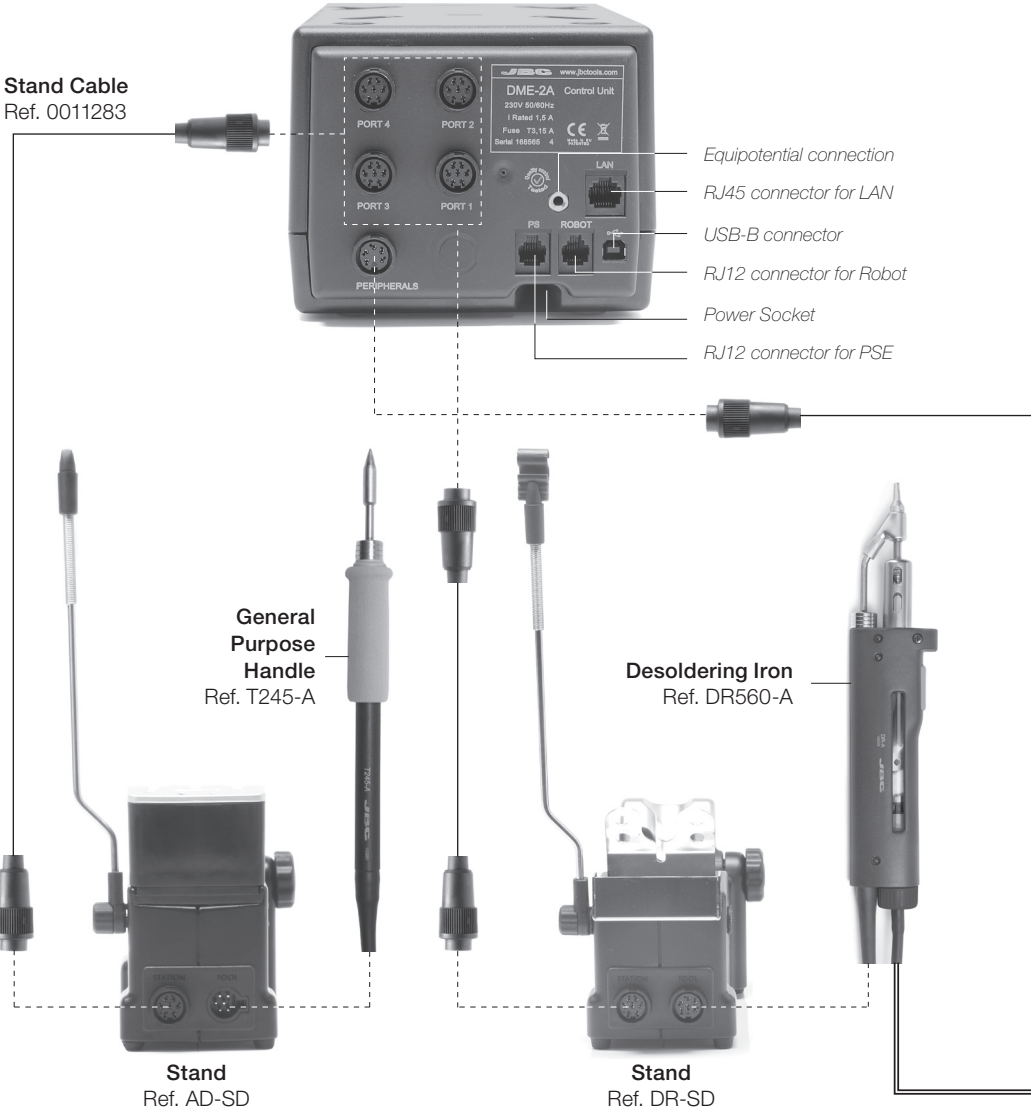

3.5" Color TFT Touch screen

USB-A connector

Tilt the display for easy reading

Speaker



Module Cable  
Ref. 0014874


Pneumatic Desoldering Module  
Ref. MVE-A

To another peripheral

To Pedal  
Ref. P-005

Suction Filter  
Ref. 0821830

Air pressure (4-6 bar)

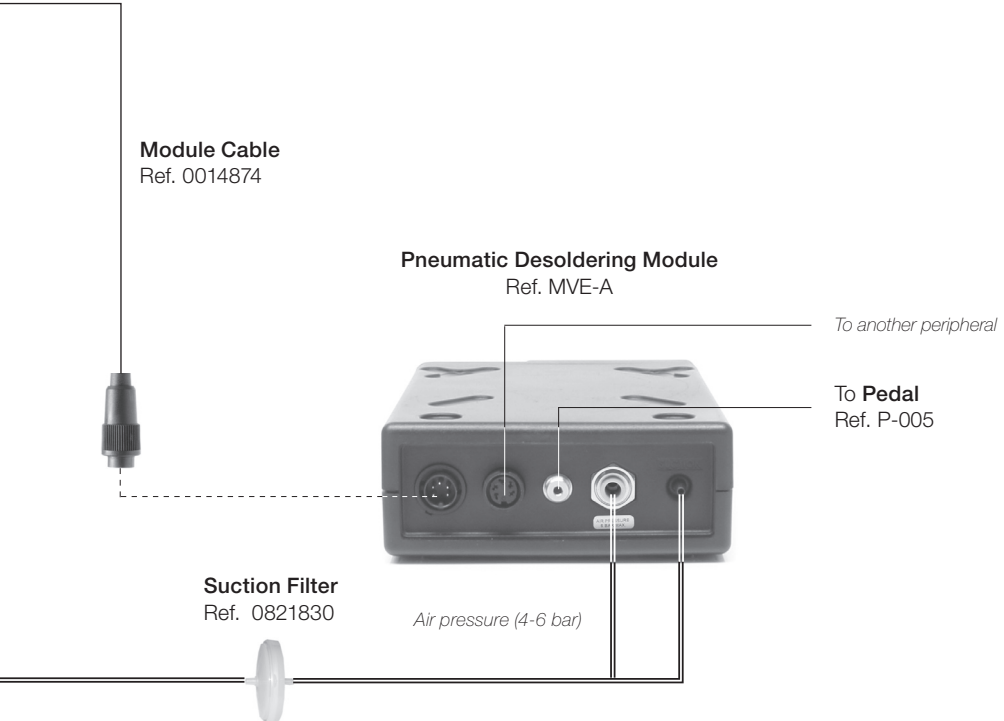



# Maintenance

Before carrying out maintenance or storage, always allow the equipment to cool.

- Clean the station screen with a glass cleaner or a damp cloth.
- Use a damp cloth to clean the casing and the tool. Alcohol can only be used to clean the metal parts.
- Periodically check that the metal parts of the tool and stand are clean so that the station can detect the tool status.
- Maintain tip surface clean and tinned prior to storage in order to avoid tip oxidation. Rusty and dirty surfaces reduce heat transfer to the solder joint.
- Periodically check all cables and tubes.



- Replace a blown fuse as follows:

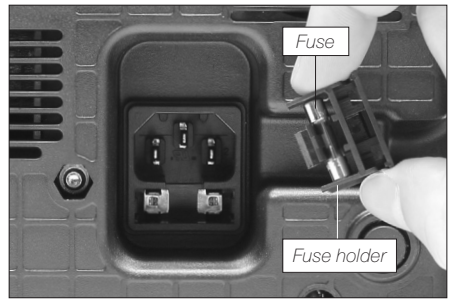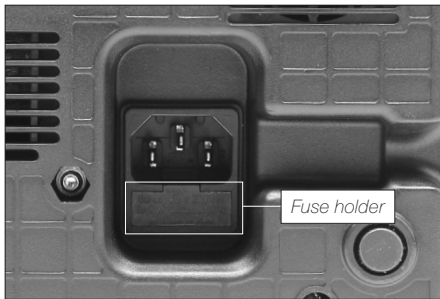

1. Pull off the fuse holder and remove the fuse. If necessary use a tool to lever it off.

2. Press the new fuse into the fuse holder and replace it in the station.

- Replace any defective or damaged pieces. Use original JBC spare parts only.
- Repairs should only be performed by a JBC authorized technical service.

## Safety



**It is imperative to follow safety guidelines to prevent electric shock, injury, fire or explosion.**

- Do not use the units for any purpose other than soldering or rework. Incorrect use may cause fire.
- The power cord must be plugged into approved bases. Be sure that it is properly grounded before use. When unplugging it, hold the plug, not the wire.
- Do not work on electrically live parts.
- The tool should be placed in the stand when not in use in order to activate the sleep mode. The soldering tip, the metal part of the tool and the stand may still be hot even when the station is turned off. Handle with care, including when adjusting the stand position.
- Do not leave the appliance unattended when it is on.
- Do not cover the ventilation grills. Heat can cause inflammable products to ignite.
- Avoid flux coming into contact with skin or eyes to prevent irritation.
- Be careful with the fumes produced when soldering.
- Keep your workplace clean and tidy. Wear appropriate protective glasses and gloves when working to avoid personal harm.
- Utmost care must be taken with liquid tin waste which can cause burns.
- This appliance can be used by children over the age of eight and also persons with reduced physical, sensory or mental capabilities or lack of experience provided that they have been given adequate supervision or instruction concerning use of the appliance and understand the hazards involved. Children must not play with the appliance.
- Maintenance must not be carried out by children unless supervised.

# Specifications

## 4 Tools Rework station with Pneumatic Pump

### DMVE-1A / DMVE-2A / DMVE-9A

- Total weight: 10,1 kg (22.3 lb)

**DME-1A** 120V 50/60Hz. Input fuse: 6A. Output: 23.5V

**DME-2A** 230V 50/60Hz. Input fuse: 3.15A. Output: 23.5V

**DME-9A** 100V 50/60Hz. Input fuse: 8A. Output: 23.5V

- Weight: 4,6 kg (10 lb)
- Dimensions: 148 x 120 x 232 mm (5.83 x 4.72 x 9.13 in)
- Output Peak Power: 160W per tool
- Temperature Range: 90 - 450 °C (190 - 840 °F)
- Idle Temp. Stability (still air): ±1.5 °C (±3 °F)
- Ambient Operating Temperature: 10 - 40 °C (50 - 104 °F)
- Tip to ground resistance: <2 ohms
- Tip to ground voltage: <2mV RMS
- RJ12 connectors: 1 for Robot and 1 for PSE Power Supply Control Unit.
- RJ45 connector for LAN (Ethernet)
- USB-A / USB-B / Peripherals connectors

### MVE-A

- Weight: 0,7 kg (1.54 lb)
- Dimensions: 145 x 55 x 225 mm (5.71 x 2.17 x 8.86 in)
- Air Pressure supply range: 4 - 6 Bar
- Vacuum at 6 Bar: 90% / 680 mmHg / 26.8 inHg
- Flow rate: 15 SLPM

Complies with CE standards.  
ESD protected.



## 有害物质含量表

产品中有害物质的名称及含量

部件名称	有害物质					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
烙铁头	○	○	○	○	○	○
手柄	○	○	○	○	○	○
电源线	○	○	○	○	○	○
主机	○	○	○	○	○	○
电源插座	○	○	○	○	○	○
保险丝	○	○	○	○	○	○
主开关	○	○	○	○	○	○
电位连接	X	○	○	○	○	○
变压器	○	○	○	○	○	○
线路板	X	○	○	○	○	○


○ 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572 规定的限量要求以下。  
 X 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572 规定的限量要求。

# Exploded View


**DMVE-1A** 120V  
**DMVE-2A** 230V  
**DMVE-9A** 100V

REWORK STATION 4 TOOLS  
 WITH PNEUMATIC PUMP  
 FROM SERIE 195375

DME-1A / DME-2A / DME-9A

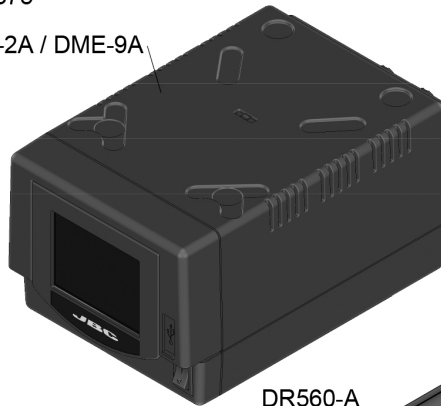

SPARE
<b>DME-1A / DME-2A</b>
-CIRCUIT
-ENCLOSURE
· TOP
· BOTTOM
· FRONT+DIS
· BACK
<b>MVE-A:</b>
-CIRCUIT
-ENCLOSURE
· TOP
· BOTTOM
· FRONT
· BACK
-SOLENOID VALV

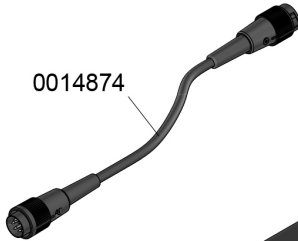


DR560-A



00112

T245-A

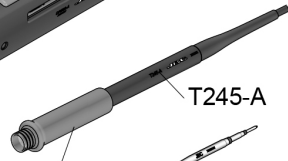

0016057

C245903

C245906

00111




MVE-A



0008446



0005966

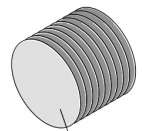

0781046

PARTS	
/ DME-9A:	
	0018696
	0019028
	0014567
DISPLAY	0011014
	0011861
	0014059
	0014860
	0014861
	0014688
	0014862
	0006813



 
0965760



0781138



0781129

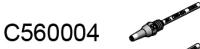

C560004



C560005



C560013

 


0019208

0965970



0780840

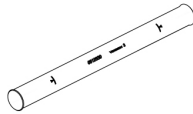

0812630

 


0812620




0780550

E-1A 120V FUSE T-6A  
 E-2A 230V FUSE T-3,15A  
 E-9A 100V FUSE T-8A

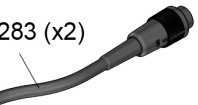

283 (x2)

AD-SD

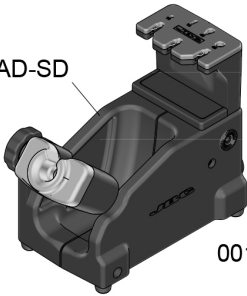


CC3702



0010433




356

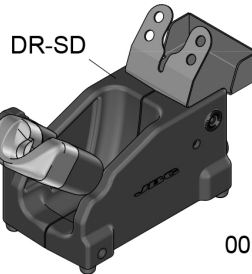

DR-SD

0010211

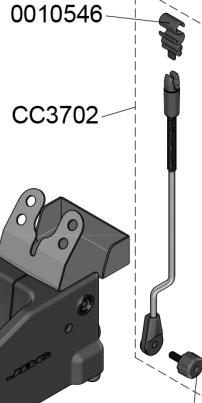

0010546

CC3702

0010433




CL6217




0786640



 CL6210

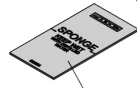

S0354

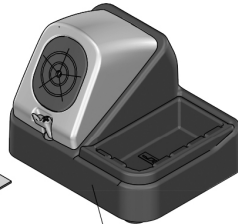

CL8499

# JBC

---

## Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour.

Warranty does not cover product wear or misuse.

In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.

**Register your warranty within 30 days of purchase in [www.jbctools.com/productregistration](http://www.jbctools.com/productregistration)**

---



This product should not be thrown in the garbage.

In accordance with the European directive 2002/96/EC, electronic equipment at the end of their life must be collected and returned to an authorized recycling facility.



Manual in other languages available on our website

**[www.jbctools.com](http://www.jbctools.com)**