


INSTRUCTION MANUAL

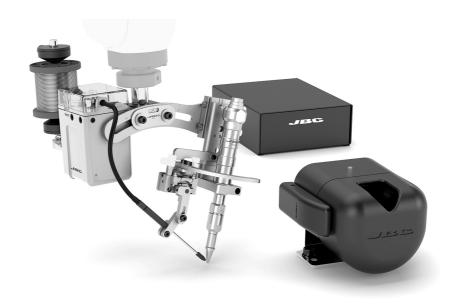

HM245 / HM470

General / Heavy Duty Soldering Set for Robot This manual corresponds to the following references:

- HM245-5A works with R245 cartridges

- HM470-5A works with R470 cartridges

Packing List

Either one or the other item are included according purchased reference:



UCR245 General Control Unit for Robot 1 unit Ref. UCR245-5A



The following common items are included:



RBA Soldering Head for Robot 1 unit Ref. RBA-A



SFR Solder Feeder for Robot 1 unit Ref. SFR-B



UCR470 Heavy Duty Control Unit for Robot 1 unit Ref. UCR470-5A






CLRP Tip Cleaner for Robot with Fiber Brushes 1 unit Ref. CLMR-PA





Connections

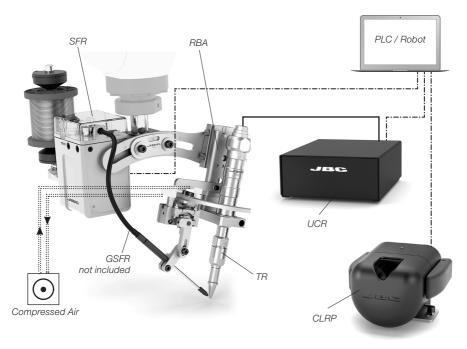

Connections:

----- RS 232 Comunication

..... Air Tube

___ 100-240 V AC

Further information can be found in the instruction manuals for the individual products, which are contained in the respective product box.

For SFR download the Robot Communication Protocol at www.jbctools.com/jbcsoftware.html

Different Guide Kits GSFR, with and without solder wire perforation, are available at **www.jbctools.com**

Maintenance and Safety

Follow the instructions in the individual instruction manuals, included in each product box.

Specifications

HM245

General Soldering Set for Robot

Ref.: HM245-5A

HM470

Heavy Duty Soldering Set for Robot

Ref.: HM470-5A

- Total Package Dimensions/Weight: $(L \times W \times H)$

545 x 345 x 275 mm / 6 kg 21.46 x 13.58 x 10.83 in / 13.23 lb



Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour.

Warranty does not cover product wear or misuse. In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.



This product should not be thrown in the garbage.

In accordance with the European directive 2012/19/EU, electronic equipment at the end of its life must be collected and returned to an authorized recycling facility.





