

www.jbctools.com

INSTRUCTION MANUAL



RHN Rework Hand Support for PHNK

This manual corresponds to the following reference:

RHN-A

Packing List

The following items are included:







Tool Arm 1 unit Ref. HRR-A

Height Adj. Flange 1 unit Ref. 0023991

Shaft 1 unit



Base for PHN 1 unit

Headless Screw 1 unit







Manual 1 unit Ref. 0027888





Features




Assembly

Setting up the Tool Arm

Fit the shaft into the base bushing (1) and tighten the headless screw. Then assemble first the height adjustment flange (2) and finally the tool arm (3) onto the shaft.


The tool arm position should be like shown in the image. The right hand support ist marked at its bottom side with the letter "R".

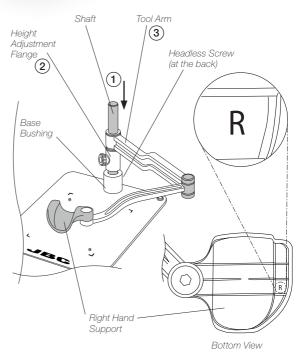

Height Adjustment


According to your work needs RHN arm allows adjustment for different heights through the vertical axis.


Slide the arm to the appropriate height and secure by tightening the knob to guarantee stability.

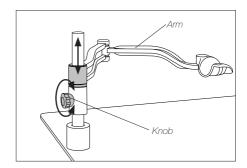

Work Position Adjustment


RHN arm allows adjustment for different positions according to your work needs. The articulated arm covers all work areas.

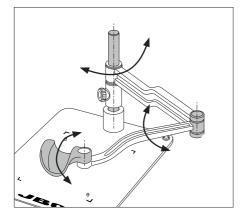


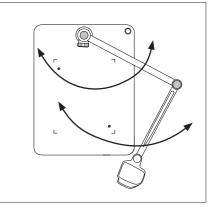

Position the arm and tighten the knobs.

The correct hand work posion ist shown in the following images:

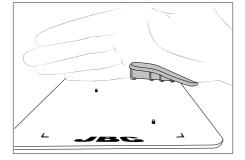

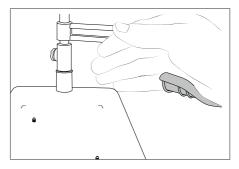




Preheater Positioning

The position of PHN can be fixed on the base by means of positioning bolts.

Fit the positioning caps onto the positioning bolts (1). The four corner guides (2) helps to the place the heater units in its position.

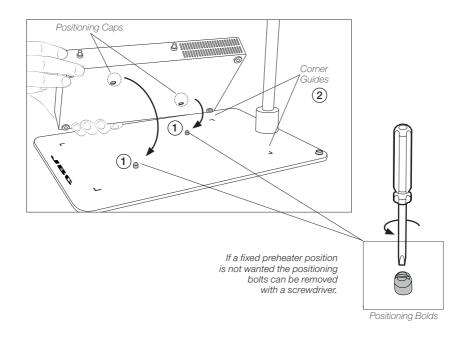

Note: For each preheater size there are different rework hand supports with different base dimensions available.


Preheater	Rework Hand Support	Base Dimension
PHNK	RHN	310 x 239 mm / 12.20 x 9.41 in
PHNS	RHS	400 x 270 mm / 15.75 x 10.63 in
PHNB	RHB	550 x 480 mm / 21.65 x 18.90 in

Accessories*

If a second hand support ist need choose the Left Hand Support HRL (Ref. HRL-A). HRL allows adjustment for different positions.



In case of using both left and right arms, assemble them as shown in the picture, according with the letter back of the arm support, to keep the supports at the same height.

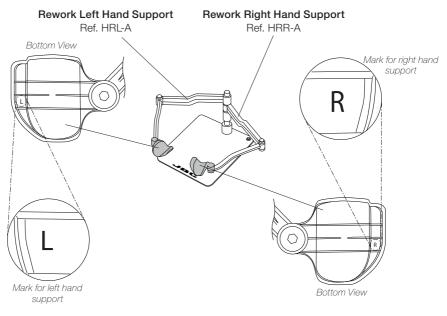


* Not included, sold separately.



Accessories*

The following JBC accessories are ideal additions to the HRL and HRR. They can make hand soldering easier.

Heaters Hose Set Holder is suitable for JTSE and TESE:

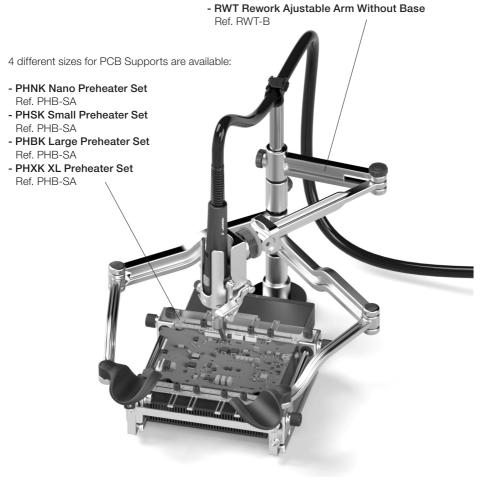

* Not included, sold separately.

Maintenance

- Check periodically that RHN is clean, especially the sliding parts and the shaft.
- Use a damp cloth when cleaning. Alcohol can only be used to clean the metal parts.
- Replace any defective damaged parts. Use original JBC spare parts only.



Not leave up RHN over the preheater when the preheater is working.



Safety



It is imperative to follow safety guidelines to prevent electric shock, injury, fire or explosions.

- Do not use the equipment for any purpose other than PCB rework.
- The temperature of accessible surfaces may remain high after the unit is turned off. Handle with care.
- Be careful with the fumes produced when soldering.
- Keep your workplace clean and tidy. Wear appropriate protection glasses and gloves when working to avoid personal harm.
- Not leave up the arms directly above heat surfaces.
- Utmost care must be taken with liquid tin waste which can cause burns.
- This appliance can be used by children over the age of eight as well as persons with reduced physical, sensory or mental capabilities or lacking experience provided that they have been given adequate supervision or instruction concerning use of the appliance and understand the hazards involved. Children must not play with the appliance.
- Maintenance must not be carried out by children unless supervised.



Notes



Notes

Specifications

RHN Rework Hand Support for PHNK Ref.: RHN-A

 Base Dimensions: 	310 x 239 mm / 12.20 x 9.41 in
- Total Height:	205 mm / 8.07 in
- Arm Heigth:	200 mm / 7.87 in
- Arm Lenght:	498 mm / 19.61 in
- ESD Connector	
- Total Net Weight:	4.50 kg / 9.92 lb
- Package Dimension / Weight:	370 x 204 x 370 mm / 6.09 kg
$(L \times W \times H)$	14.57 x 8.03 x 14.57 in / 13.43 lb
Complies with CE standards	
ESD Safe	



Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour.

Warranty does not cover product wear or misuse. In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.



This product should not be thrown in the garbage. In accordance with the European directive 2012/19/EU, electronic equipment at the end of its life must be collected and returned to an authorized recycling facility.



www.jbctools.com