

RESETTING YOUR COMBINATION:

The lock is preset to open at 0-0.

To reset the combination to your own number, (1) first open the buckle, use a small tipped object (e.g. ball point pen) to press in the reset button. (2) Rotate the dial to your desired number while keeping the reset button depressed. (3) Release the reset button, repeat process on the other side of the lock.

PATENTED

