

QUICK START

FUYL Tower 15

VIDEO INSTRUCTIONS:

<https://vimeo.com/288109115>

Visit our website for detailed instructions.

www.lockncharge.com/support (International)

www.pclocs.com.au/support (AUS and NZ)

What's required?



x2



x4



x1



x1




x1




x3



1

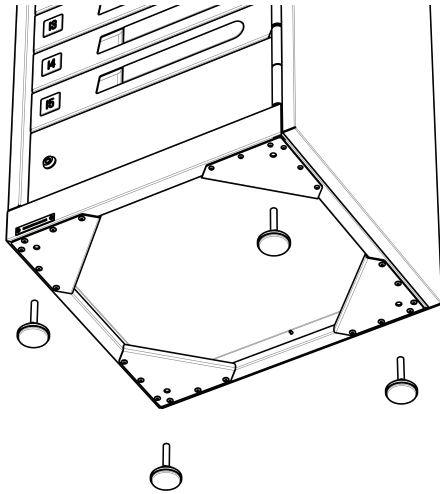

2

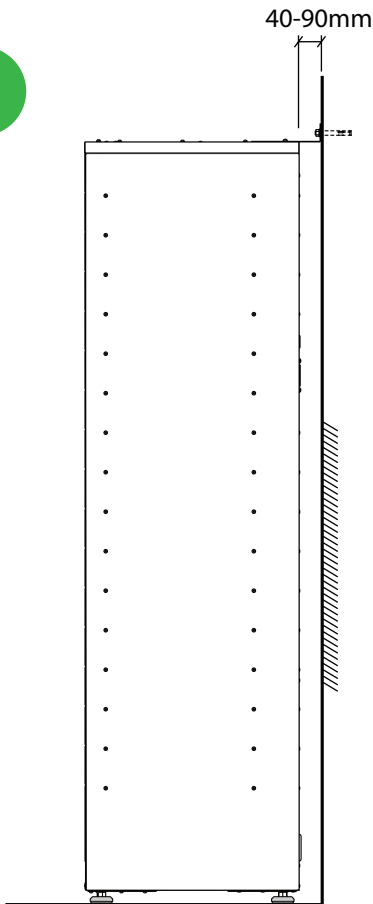


3



MANDATORY!!

Fix FUYL Tower to the wall using the supplied bracket




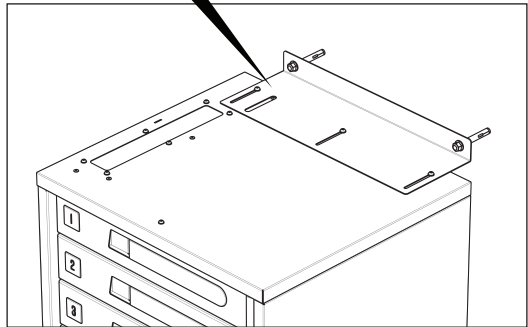


4


Initialization process

Once connected to power and the LAN network;

- 1) The tower will turn on. It may take several minutes to boot, initialize and acquire network settings
- 2) The doors will begin opening sequentially
- 3) The tower is ready to use with the default more being 'User Mode'

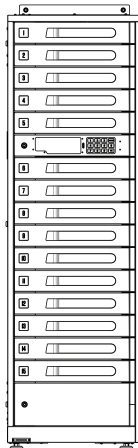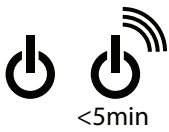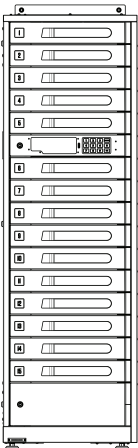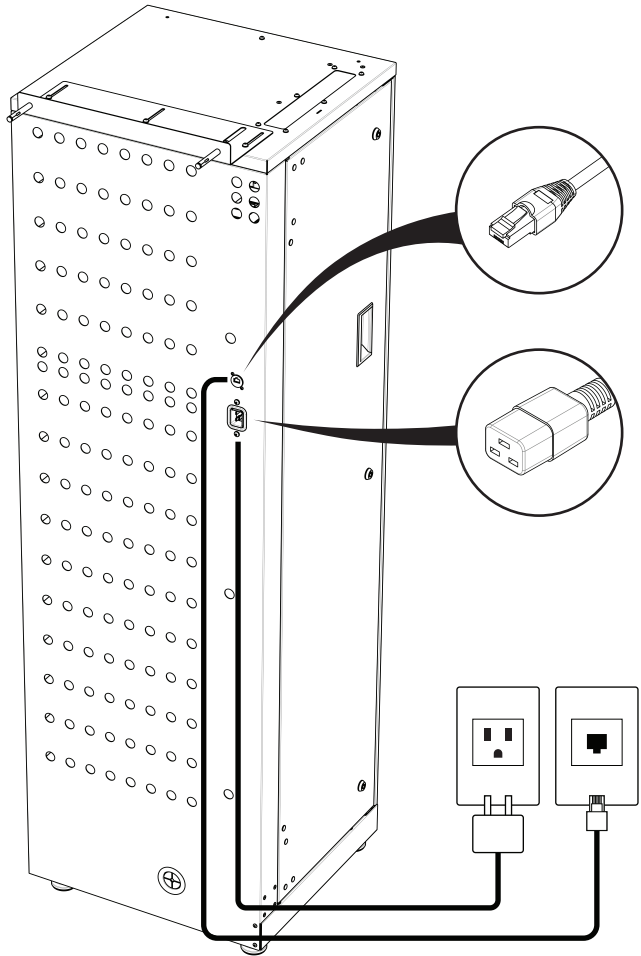

1-15

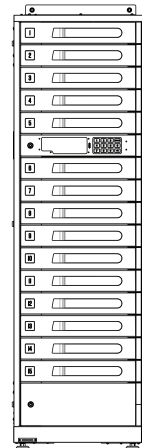

✓
READY

SETTING UP THE MANAGEMENT PORTAL

5



On the tower keypad, press '00' to launch the admin screen.
Enter the default password:


3 1 0 8 2 0 1 8

6



Go to the Network Status page by pressing '5'. Record the Portal URL.

7

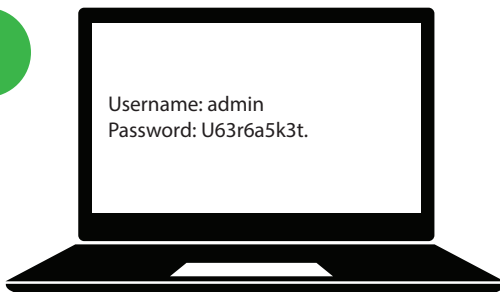

Open a web browser on your computer and type the Portal URL. A login page will be displayed.

The default credentials are:
Username: admin
Password: U63r6a5k3t.

Once logged in, the wizard will guide you in setting up the Management Portal, for local and cloud.