

AVJ42 Base Instructions

 
All AVJ42 Units

01/14/13




205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com


Parts List

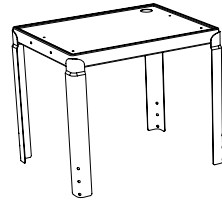


A x1

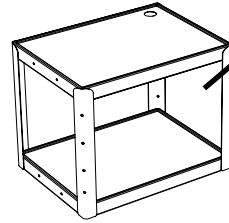 


B x1

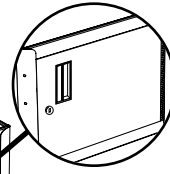 

 Cabinet comes pre-assembled on units that include a cabinet.



C x4

 


D x4



E x4


Tools Required

 - Phillips Screwdriver
- Rubber Mallet
- Pliers or Adjustable Wrench

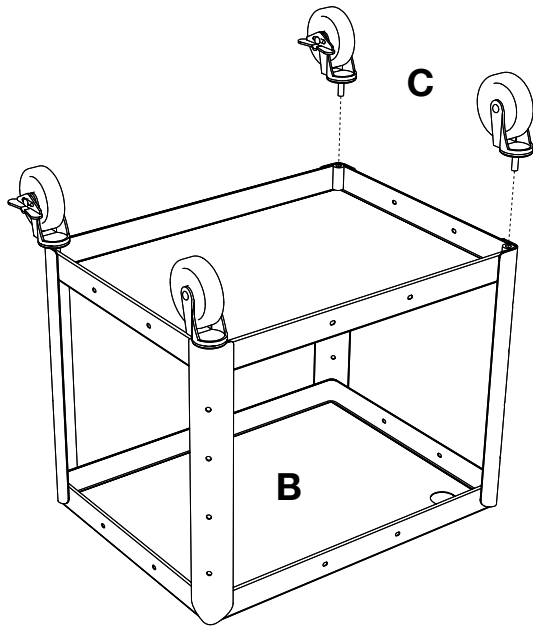


1

 Position the bottom shelf **B** so that the caster holes are facing up. Insert caster **C** into the caster holes on the bottom of shelf **B**. Use a mallet to set the casters properly.

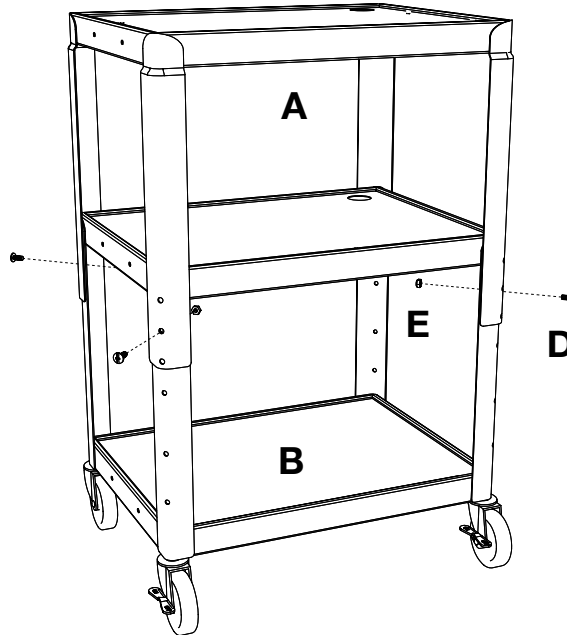

2

 Flip bottom shelf **B** so that it is upright. Set top shelf **A** on top of bottom shelf **B**. Align the screw holes so that the top shelf **A** is at the desired height.

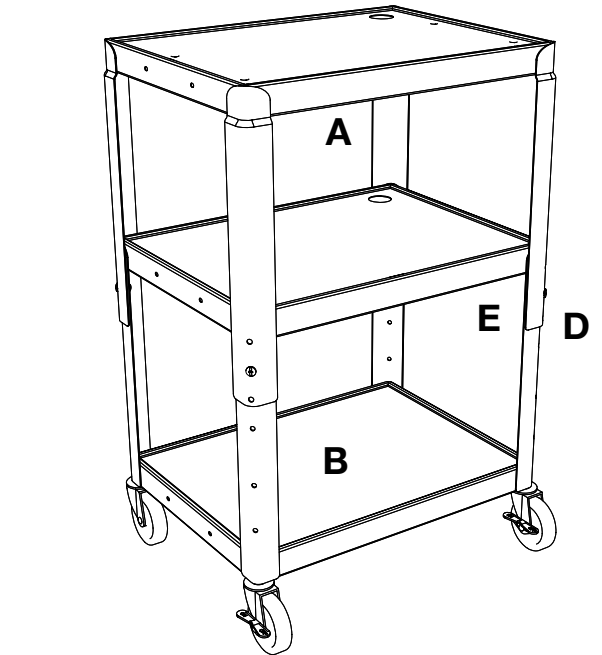


3

Insert screw **D** through the aligned screw hole of **A** and **B** and fasten nut **E** with pliers and screwdriver. The AVJ42 base unit is now complete.

Electric Assembly Instructions



Number of outlets
may vary.

 Parts List

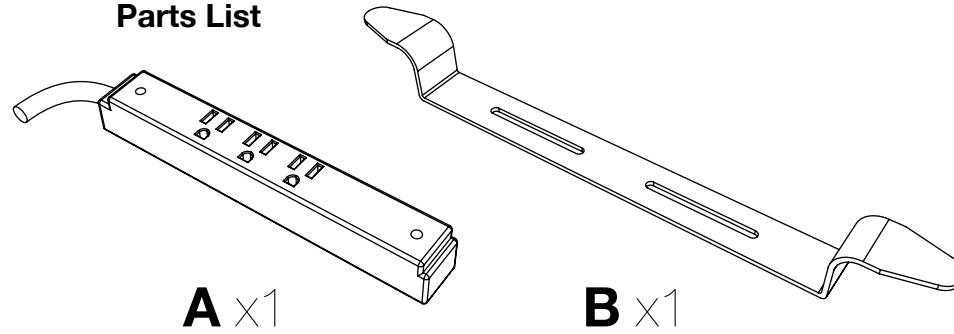

Tools Required

  - Screwdriver

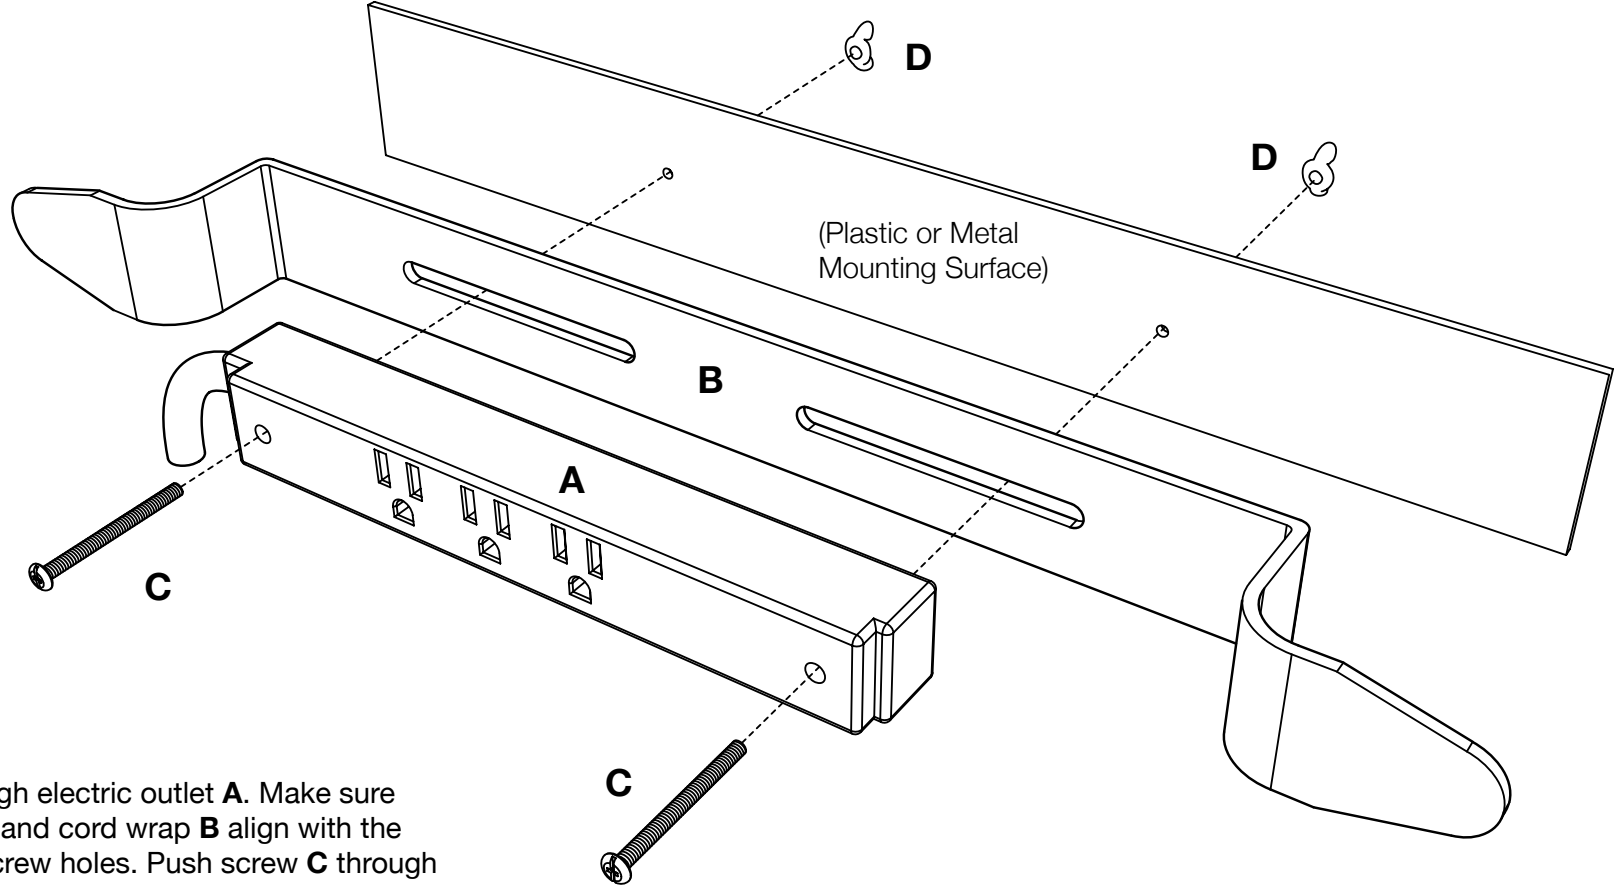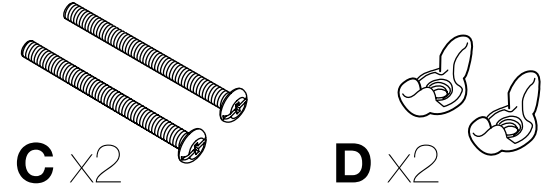

1

Push screw **C** through electric outlet **A**. Make sure the electric outlet **A** and cord wrap **B** align with the mounting surface screw holes. Push screw **C** through cord wrap **B** and the mounting surface screw holes. Use wing nut **D** and screwdriver to fasten.

Metal / Plastic Cart LCD Instructions

 
Tools Required

- Phillips Screwdriver
- 8mm Wrench



**Requires Completed
Cart Before Assembly**

**Lock Casters
Before Assembly**



01/26/15

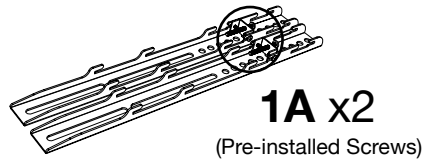

1 x2

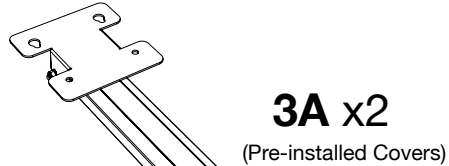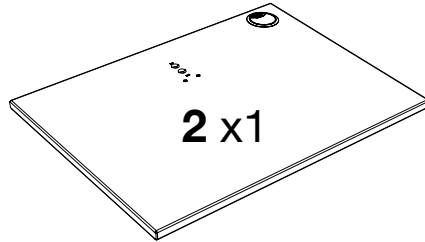  

3 x1

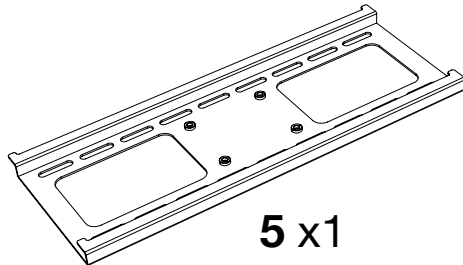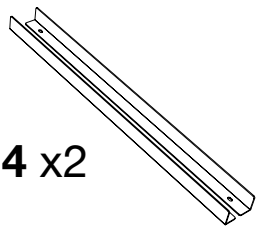  

Parts List

 
 
 
 
LCD Component List

- 1** - TV brackets x2
- 2** - Base plate x1
- 3** - Aluminium tube x1
- 4** - L support bar x2
- 5** - TV Mount x1


Hardware Bag

- A** - M5x16 TV screw x4
- B** - M6x16 TV screw x4
- C** - M8x35 TV screw x4
- D** - M6 metal washer x4
- E** - M6x35 allen screw x4
- F** - M6 metal washer x4


- G** - M6x20 tube screw x2
- H1** - M6 metal washer x2
- H2** - Tube spacer x1
- I** - M8 metal washer x2
- J** - M8x15 allen screw x2
- K** - M8x25 allen screw x2
- L** - M8 locking nut x2
- M1** - M5x15 allen screw x4
- M2** - M5x50 allen screw x4
- N** - M5 metal washer x4
- O** - Allen wrench x1
- P** - TV screw spacer x4
- Q** - Angle bracket x1

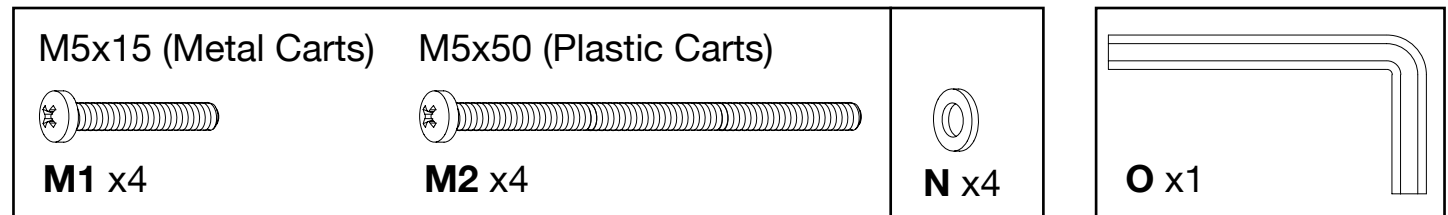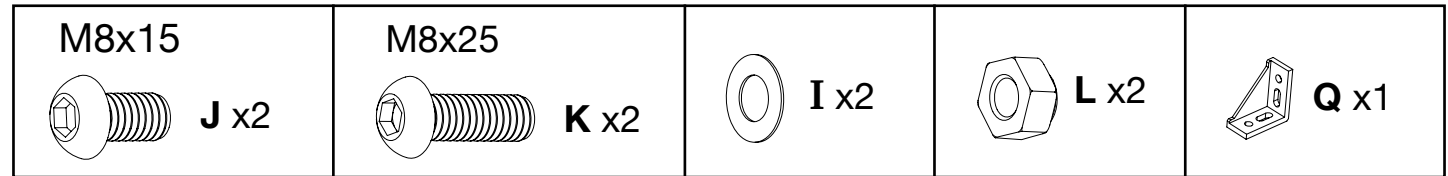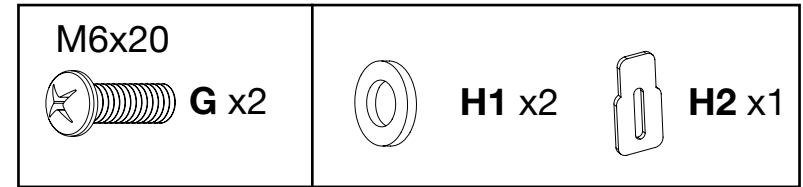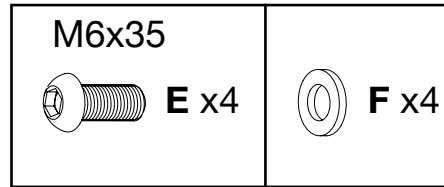


TV Mounting Hardware

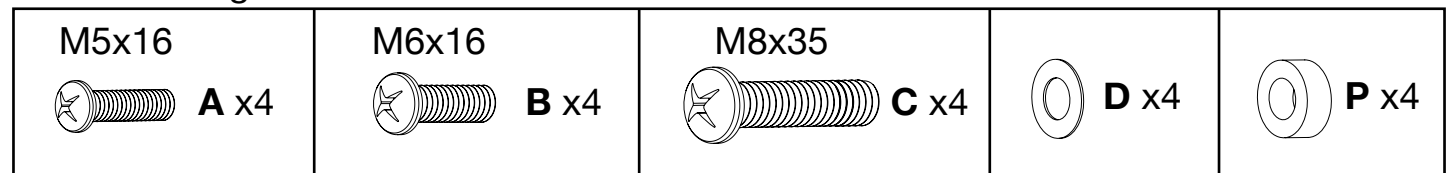 


1

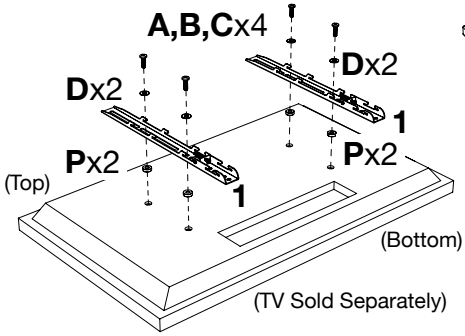 


2

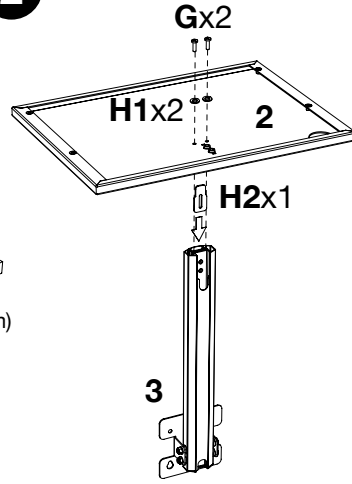 


3

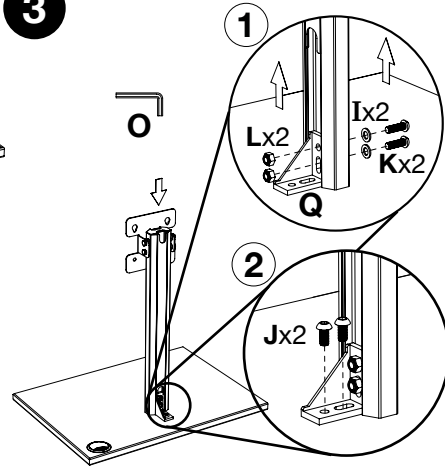 

4

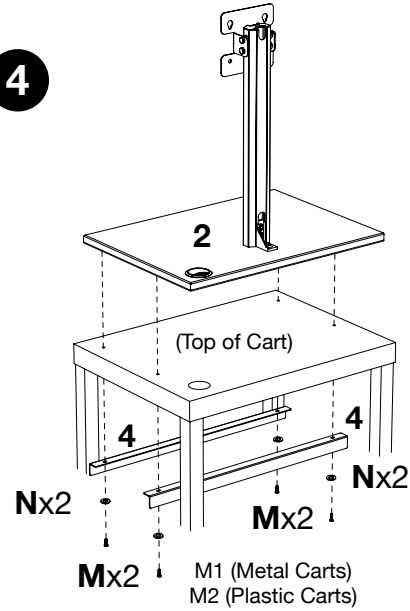 


5

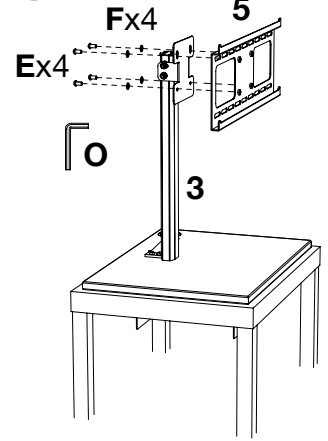 


Do not fully tighten until all screws are into place.

6

 Remove pre-installed screws **1A** to properly install to TV Mount **5**.

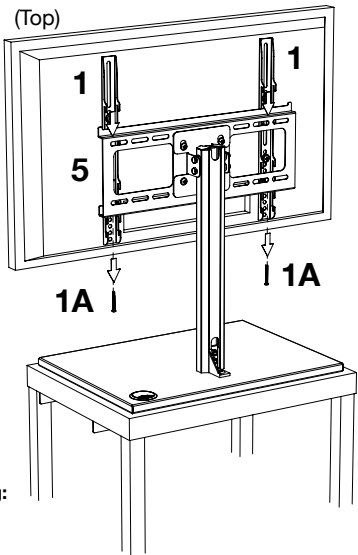


7

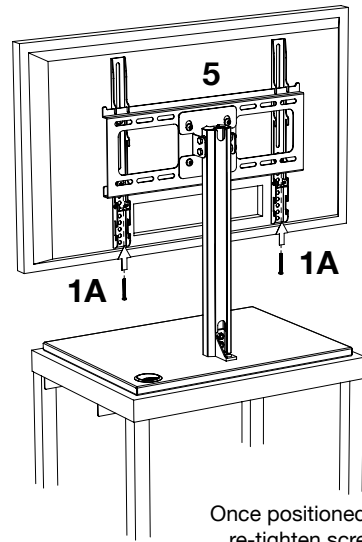 

Once positioned properly re-tighten screws **1A**.

 
8

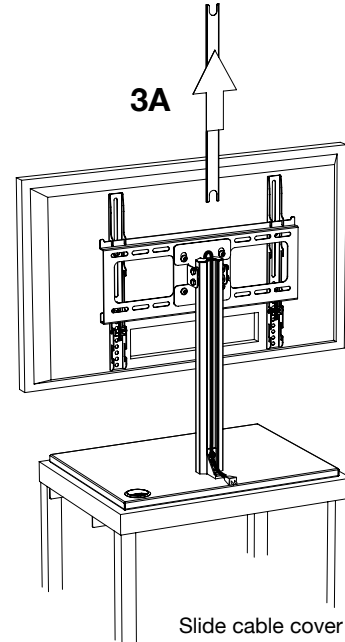

Slide cable cover off and feed cable into place.

9

 Slide cable cover back into place. Assembly complete.

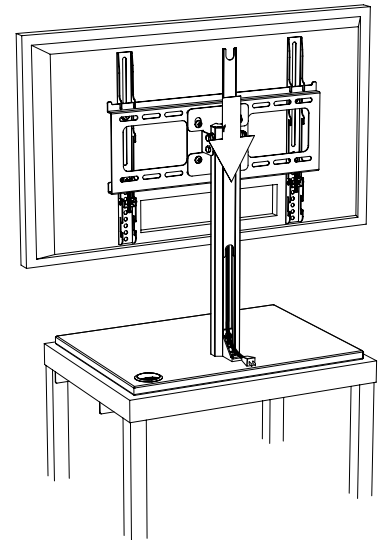

Heavy Lifting:
Assistance
Required