

205 Westwood Ave, Long Branch, NJ 07740 Phone: 866-94 BOARDS (26273) / (732)-222-1511 Fax: (732)-222-7088 | E-mail: sales@touchboards.com



User Guide

MT-91 / MT-90 / MT-92 Interlinking Transmitter Module









All rights reserved. MN 014/08

Specifications and design subject to change without notice.

MIPRO Electronics Co., Ltd Headquarters: 814 Pei-Kang Road, Chiavi, 60096, Taiwan

Tel:+886.5.238.0809 www.mipro.com.tw



CE Do not copy or forward without prior approvals MIPRO.

2CE504A

Fax:+886.5.238.0803

mipro@mipro.com.tw

MT-91

! IMPORTANT SAFETY INSTRUCTIONS !

- 1. Read these instructions.
- 2. Keep these instructions.
- 3. Heed all warnings.
- Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with a dry cloth.
- 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarised or ground plug: A polarised plug has two blades with one wider than the other. The wide blade is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched particularly at plug, convenience receptacles, and the point where they exit from the apparatus.
- 11. Only use attachments/accessories specified by the manufacturer.
- 12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to gualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- 16. Apparatus should not be exposed to dripping or splashing and no objects filled with liquids, should be placed on the apparatus.
- 17. Use only with the battery which specified by manufacturer.
- 18. The power supply cord set is to be the main disconnected device.

WARNING

1. FOR OUTDOOR USE:

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

2. UNDER WET LOCATION:

Apparatus should not be exposed to dripping or splashing and no objects filled with liquids, such as vases should be placed on the apparatus.

3. SERVICE INSTRUCTIONS:

CAUTION - These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.





This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.



Disposal Dispose of any unusable devices or batteries responsibly and in accordance with any applicable regulations.

> Disposing of used batteries with domestic waste is to be avoided!

Batteries / NiCad cells often contain heavy metals such as cadmium(Cd), mercury(Hg) and lead(Pb) that makes them unsuitable for disposal with domestic waste. You may return spent batteries/ accumulators free of charge to recycling centres or anywhere else batteries/accumulators are sold.

By doing so, you contribute to the conservation of our environment!

Interlinking Transmitter Module

THIS DEVICE COMPLIES WITH PART74 OF THE FCC RULES. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

IC

This device complies with Industry Canada licenceexempt RSS-123 Issue2 standard.

Operation is subject to the following two conditions:

(1) this device may not cause interference, and(2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage

radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Contents


- 1 Key Features & Benefits
- 2 Controls and Indicators
- 3 Transmitter Frequency Set-Up
- 4 Operating Tips


Key Features & Benefits

- 1. Modularized design for easy set-up, operation and maintenance.
- 2. Preset with 16 selectable channels.
- 3. Bright LED channel display.

Interlinking Transmitter Module


Controls and Indicators

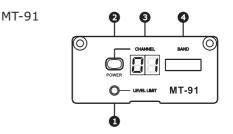

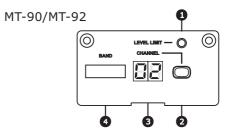

- **0** Volume Limiter Indicator
- **O** MT-91: Channel button
 - MT-90/MT-92: Channel button
- **③ LED screen:** Displays current numeric channel.
- **Frequency Code Sticker:** The code identifies the contained frequency range.

System Accessories Included:

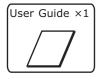

1

2

Transmitter Frequency Set-Up

- Press and hold Channel button ③ for 2 seconds until numeric LED blinks continuously to denote it is ready for changing channel.
- During blinking, press and release the Channel button until one of the 16 preset channels is selected.
- If Channel button is not pressed within 6 seconds during blinking the current numeric channel remains the same.
- Volume Limit Indicator **1** will not be illuminated under normal input signals.
- Volume Limiter Indicator ① will be illuminated if over normal input signals. Reduce volume to desired level.

Operating Tips

- The transmitter functions when the module and antenna are inserted properly and powered on. Ascertain the frequency code sticker is the same between the transmitter and receiver.
- Select another module with a different frequency code if the existing operating frequency experiences continuous interference.
- Module is available in frequency codes between 620~934MHz and compatible with MIPRO wireless receivers or portable PA amplifiers with the same frequency codes.

Insert and Remove the Module

- Remove the front cover plate.
- Insert module gently into slot horizontally.
- Fasten the panel with the attached two screws.
- To remove, reverse the above steps.

3