


#22601 LB-PR Heavy Duty Multi-Use Utility Stand

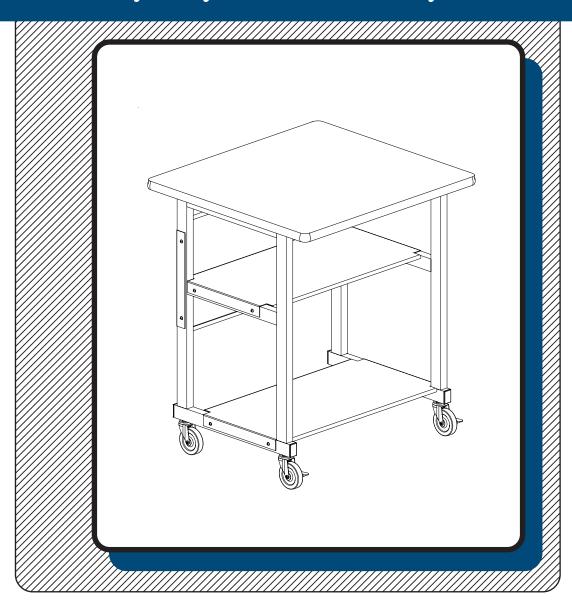


Assembly Instructions

#22601 LB-PR

Utility Stand

Assembly Instructions

Part	Drawing	Description	Qty			
P-1 ₆		Top Platform	1 EA		Hardware List	
				A	Short Screw	12 EA
P-2		Leg Assembly	2 EA	В	Interior Threaded Post	12 EA
				C (1)	Long Screw	4 EA
P-3		Stability Panel	3 EA	D	Leveling Glides	4 EA
				E	3" Locking Caster	2 EA
				F	3" Non-Locking Caster	2 EA
				G	Allen Wrench	2 EA
				H	Caster Wrench	1 EA

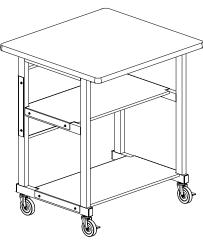

We recommend that you assemble this unit on a table.

Do not use unless all screws are tight. At least every six months, check all screws to be sure they are tight.

If parts are missing, broken, damaged, or worn, stop use of the product until repairs are made by your dealer using factory authorized parts.

Should you require assistance during assembly, please call our Customer Service Department Monday - Friday 8 a.m. - 5 p.m.
Central Standard Time

Toll-Free Customer Service

1-800-749-2258


#22601 LB-PR **Assembly Diagram**

1. Separate and identify parts and hardware.

2. Place the Top Panel (P-1) with the insert nuts facing up. Attach 2 Leg Assemblies (P-2) to the Top Panel (P-1) using 4 Long Screws (C) as shown in illustration #1. Finger tighten only. Attach 1 Stability Panel (P-3) to the 2 Leg Assemblies (P-2) using 4 Short Screws (A) and 4 Interior Threaded Posts (B) as shown in illustration #1.

3. Attach 2 Locking Casters (E) and 2 Non-Locking Casters (F),(or 4 Leveling Glides D) to 2 Leg Assemblies (P-2) as shown in Illustration #1. Tighten Casters using Caster Wrench (H).

4. Attach 2 Stability Panels (P-3) to 2 Leg Assemblies (P-2) using 8 Short Screws (A) illustration #2.

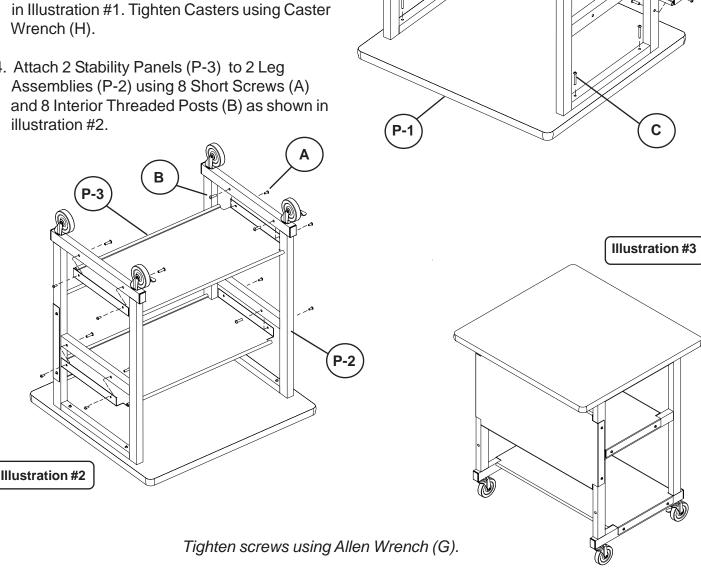

P-2

Illustration #1