




 

 

 
 


Agility Corner Tables

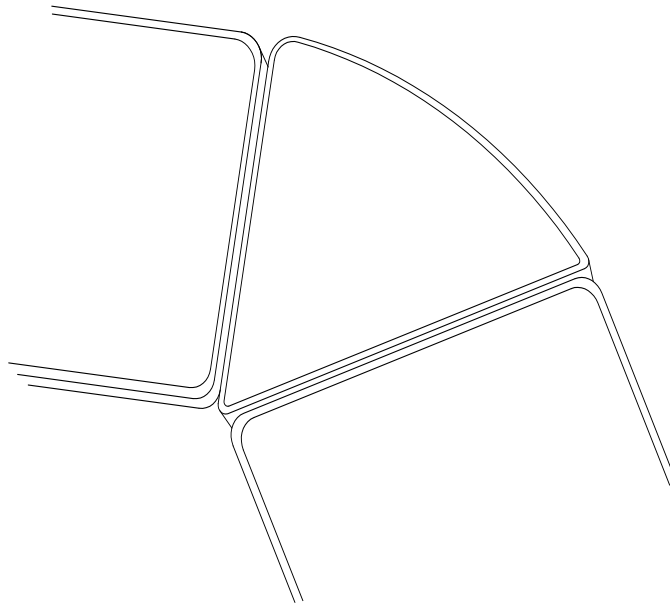

Assembly Instructions

Agility Corner Tables

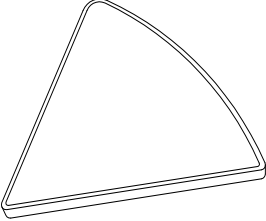Part	Drawing	Description	Qty	Part	Drawing	Description	Qty								
P1		Corner Table Top	1 EA	<div style="border: 1px solid black; padding: 10px;"> <p style="text-align: center;">Hardware List</p> <table border="0"> <tr> <td style="vertical-align: top;">A</td> <td style="text-align: center;"></td> <td style="vertical-align: top;">Allen Screw M6X15mm</td> <td style="vertical-align: top;">8 EA</td> </tr> <tr> <td style="vertical-align: top;">B</td> <td style="text-align: center;"></td> <td style="vertical-align: top;">Allen Wrench</td> <td style="vertical-align: top;">1 EA</td> </tr> </table> </div>				A		Allen Screw M6X15mm	8 EA	B		Allen Wrench	1 EA
A		Allen Screw M6X15mm	8 EA												
B		Allen Wrench	1 EA												
P2		Connector	4 EA												

Important

The Balt product you have purchased is guaranteed against material and workmanship defects. This guarantee extends 1 year from date of purchase. Should this product fail to function satisfactorily under normal use due to defect or imperfection, the defective part or product will be replaced. Damage caused by common carriers during shipment is not included in this guarantee.

This guarantee sets forth all applicable guarantees and remedies. No other warranty, expressed or implied shall apply. Failure to follow instructions found in Important Information Section of Owner Sheet shall void the guarantee. Consequential or incidental damages and or costs are not refundable.

Missing Parts or UPS Damaged Parts

For Your Convenience you can
EMAIL us at
furniture@baltinc.com
24HOURS 7 DAYS A WEEK

***Should you require assistance during assembly,
please call our Customer Service Department
Monday - Friday 8 a.m. - 5 p.m.
Central Standard Time 1-800-749-2258***

Do not use unless all screws are tight. At least every six months, check all screws to be sure they are tight. If parts are missing, broken, damaged, or worn, stop use of the product until repairs are made by your dealer using factory authorized parts.

Agility Corner Table Assembly Diagram

READ THROUGH INSTRUCTIONS FROM BEGINNING TO END BEFORE STARTING TO ASSEMBLE UNIT.

- 1.) Identify and Separate all the Parts and Hardware.
- 2.) Place the two Agility Tables that will be connected so that the back corners or the front corners are touching as shown in Illustration #1. Connect four Brackets (P-2) to the underside of the two tables you are connecting. Use Allen Screws (A) to connect each Bracket to the table top as shown in Illustration #1.
- 3.) Slide the pie shaped Corner in resting on the Brackets (P-2). Line up the threaded inserts in the bottom of the Corner Top (P-1) with the slotted holes in the Brackets(P-2) and attach using four Allen Screws (A). Tighten all Allen Screws (A) using Allen Wrench (B).

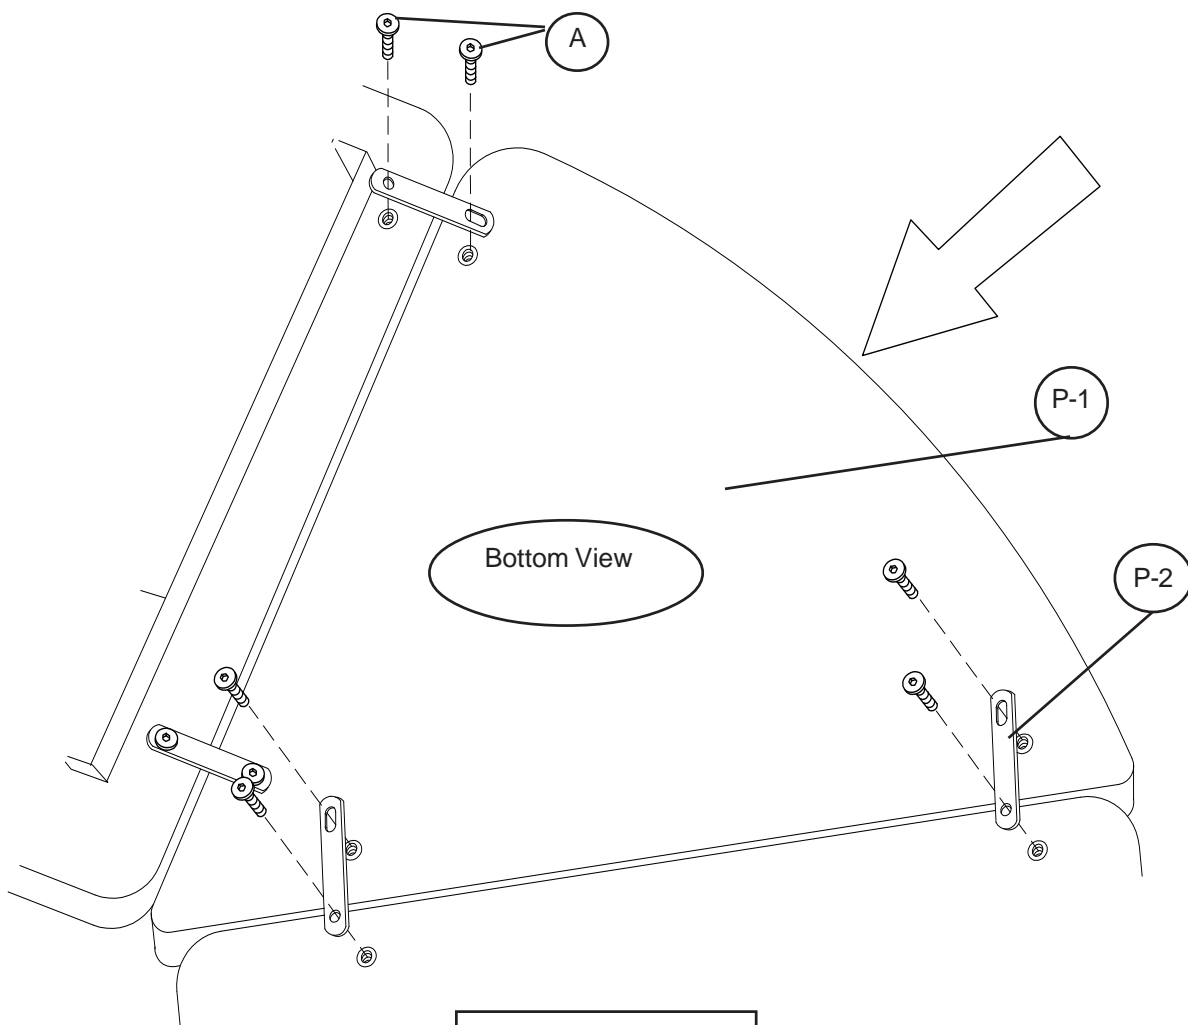


Illustration # 1