#34552 Circulation Chair

Don't Sweat ItTM



Important


The product you have purchased is guaranteed against material and workmanship defects. This guarantee extends 1 year from date of purchase. Should this product fail to function satisfactorily under normal use due to defect or imperfection, the defective part or product will be replaced. Damage caused by common carriers during shipment is not included in this guarantee.

This guarantee sets forth all applicable guarantees and remedies. No other warranty, expressed or implied shall apply. Failure to follow instructions found in Important Information Section of Owner Sheet shall void the guarantee. Consequential or incidental damages and or costs are not refundable.

Do not use unless all screws are tight. At least every six months, check all screws to be sure they are tight. If parts are missing, broken, damaged, or worn, stop use of the product until repairs are made by your dealer using factory authorized parts.

#34552 Circulation Chair

Don't Sweat It TM

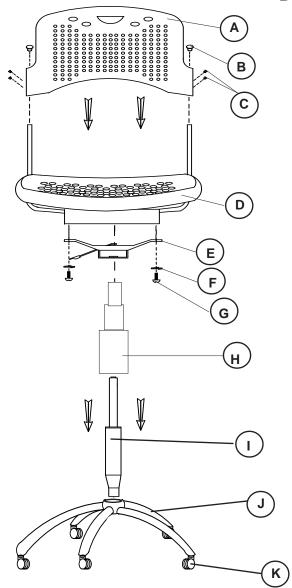

Part / Hardware List

Part	Drawing	Description	Qnty
Α		Chair Back	1 EA
B C		Backpost Plug Back Push Pin	2 EA 4 EA
D		Seat Assembly	1 EA
Е		Lever Control	1 EA
F G	© 	Lock Washer Bolt	4 EA 4 EA
Н		Cylinder Cover	1 EA
I		² Pneumatic Cylinder	1 EA
J		⇒Base	1 EA
K		Caster	5 EA

Assembly Instructions

- 1. Seperate and Identify all parts.
- 2. Place Chair Back (A) on backpost tubes of Seat Assembly (D).
- 3. Align holes in Chair Back with holes in the backpost tubes and insert 4 Back Push Pins (C) into the holes.
- 4. Bolt the Lever Control (E) to the bottom of the Seat Assembly (D) using 4 Bolts (G) with 4 Lock Washers (F).
- 5. Push in 5 Casters (K) into the holes in the bottom of Base (J).
- 6. Insert the Pneumatic Cylinder (I) into the Base (J).
- 7. Slide the Cylinder Cover (H) down the Pneumatic Cylinder (I).
- 8. Place the Seat and Back assembly from Step #4 onto the Pneumatic Cylinder (I).