
# Platinum Series Plasma/LCD Cart- No Tilt

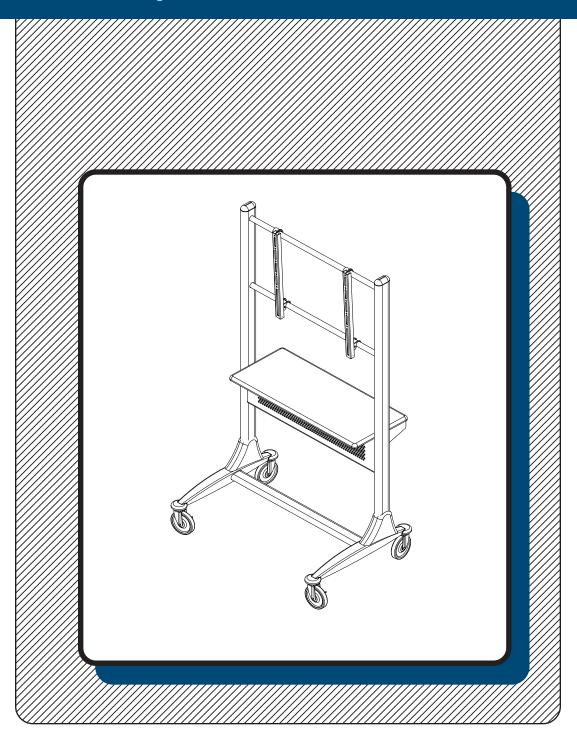


**Assembly Instructions** 

Part Drawing	Description	Qty	Part	Drawing	Description	Qty
P1	Left Leg	1 EA		I	Hardware List	
			А	S	crew M6X13mm	14 EA
P2	Right Leg	1 EA	A1	s	crew M8X40mm	4 EA
P3	LCD Tube	2 EA	В		Screw M4X8mm	2 EA
P4	Lower Cross Brace	1 EA	E		5" Locking Caster	2 EA
P5	Stability Panel	1 EA	F	5'	'Caster	2 EA
P6	Left Shelf Bracket	1 EA	G	A	llen Wrench	1 EA
P7 -	Right Shelf Bracket	1 EA	Н	c	aster Wrench	1 EA
P8	Wood Shelf	1 EA				
P9 🕥	Collar	2 EA				
P10	TV Bracket	2 EA				
***						


## Assembly Diagram


## READ THROUGH INSTRUCTIONS FROM BEGINNING TO END <u>BEFORE</u> STARTING TO ASSEMBLE UNIT.

- 1.) Identify and Separate all the Parts and Hardware.
- 2.) Slide two Collars (P9) onto one LCD Tube (P3) as shown in illustration # 1.

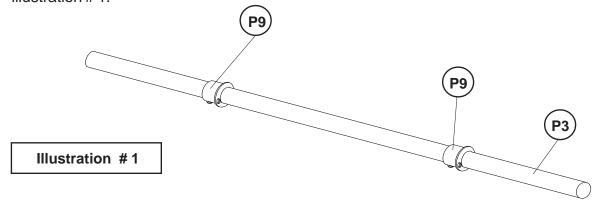

 
3.) Attach Left and Right Shelf Brackets (P6 & P7) to the Left and Right Legs (P1 & P2) using 4 screws (A) as shown in illustration # 2.

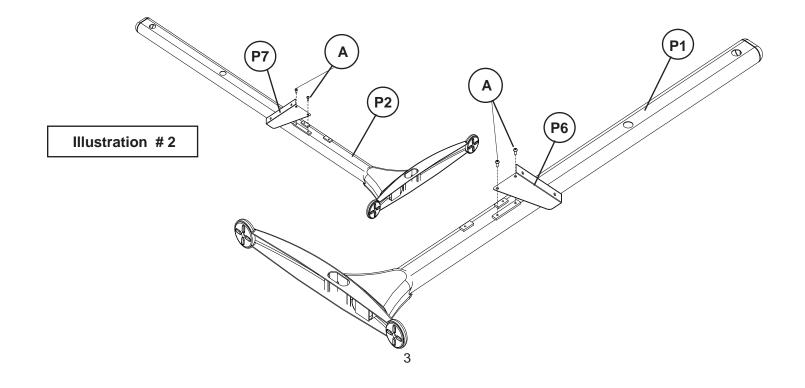




#### Illustration #3

- 5.) Attach Left and Right Legs (P1 & P2) to the Lower Cross Brace (P4) using 4 screws (A1) as shown in illustration #3.
- 6.) Attach Stability Panel (P5) to the Left and Right Legs (P1 & P2) using 4 screws (A) as shown in illustration #3.

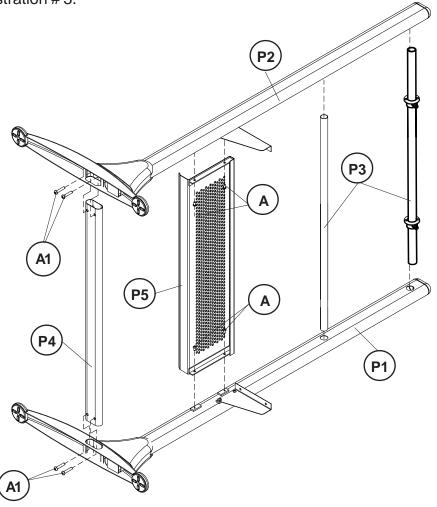

### Illustration #4

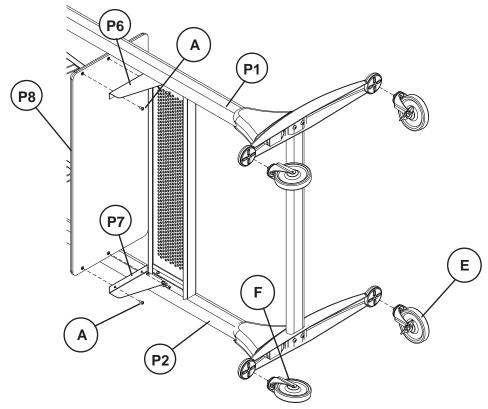

- 7.) Attach Left and Right Shelf Brackets (P-6 & P-7) to Wood Shelf (P-8) using 4 screws (A) as shown in illustration # 4. Do not tighten.
- 8.) Attach 2 Locking Casters (E) and 2 Casters (F) to the bottom of the Left Leg (P1) & Right Leg(P2) as shown in illustration # 4. Tighten Casters using Caster Wrench (H).

9.) Hook the two TV Brackets (P10) on the Top and Bottom LCD Tubes(P3) as shown in illustration #5. Connect each TV Bracket to the Collar (P9) on the top LCD Tube using two Screws (B).

