


QUICK START CARD

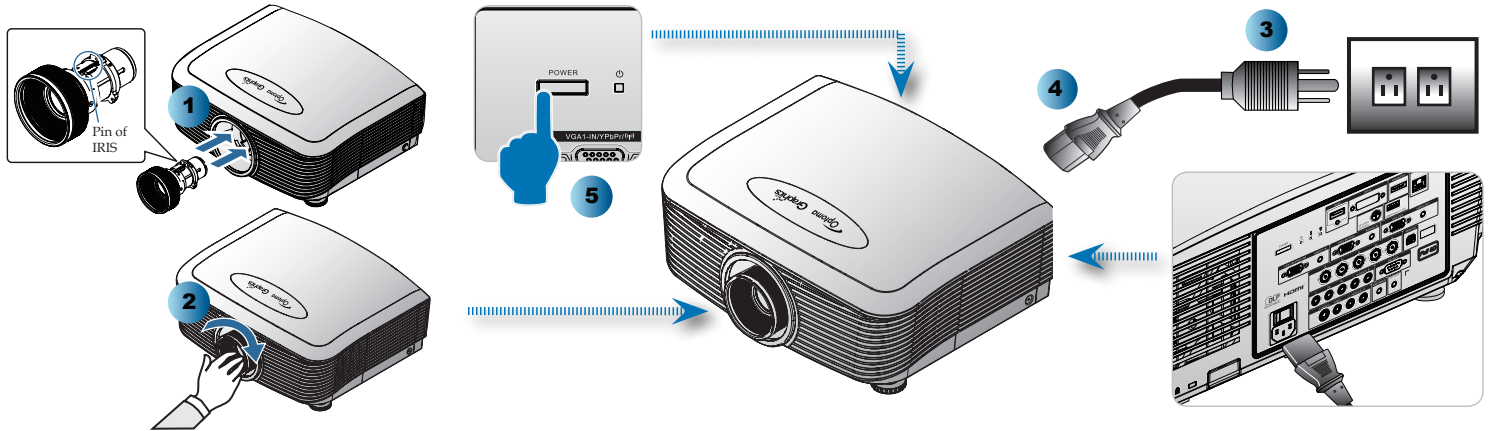


8 **Fn** + **F8 CRT/LCD**

Toggle Output Settings

Asus/Dell	[Fn] + [F8]
Acer/Toshiba	[Fn] + [F5]
Gateway	[Fn] + [F4]
HP/Compaq	[Fn] + [F4]
IBM/Lenovo	[Fn] + [F7]
NEC	[Fn] + [F3]

Mac Apple :
System Preferences → Display →
Arrangement → Mirror display

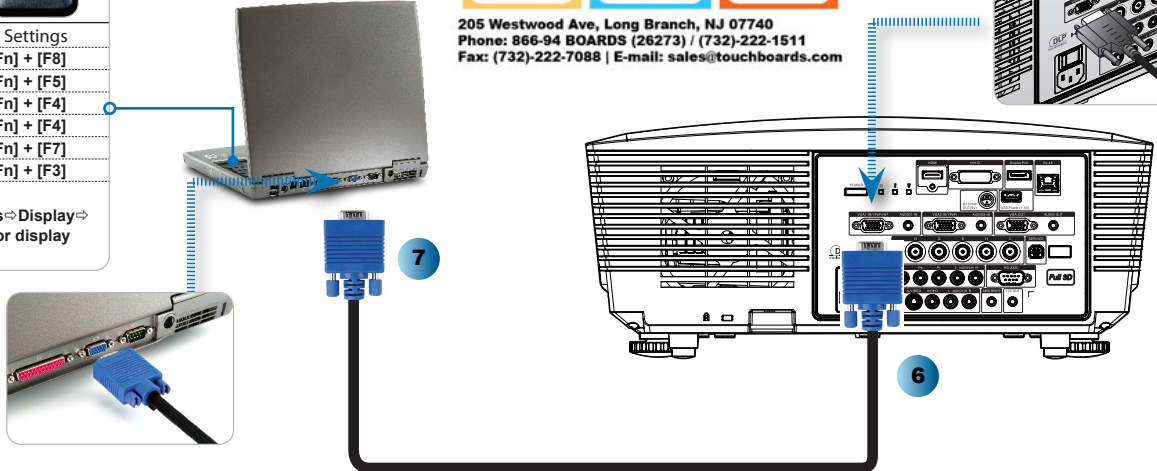

Touchboards

205 Westwood Ave, Long Branch, NJ 07740
 Phone: 866-94 BOARDS (26273) / (732)-222-1511
 Fax: (732)-222-7088 | E-mail: sales@touchboards.com

