

Optoma TH7500-NL Discrete IR Codes

Optoma Code: 32CD

Key	Description	Key code
1	Power On	0002
2	Laser Pointer	-
3	AV Mute	0003
4	Freeze	0006
5	Power Off	002E
6	Function 1	0026
7	Function 2	0027
8	Focus +	0028
9	Zoom in	002A
10	Focus -	0029
11	Zoom out	002B
12	Lens Shift	002F
13	Up (OSD Navigation)	0011
14	Left (OSD Navigation)	0010
15	Enter (OSD Navigation)	000F
16	Right (OSD Navigation)	0012
17	Menu	000E
18	Down (OSD Navigation)	0014
19	Mode	0005
20	Format	0015
21	Keystone	0007
22	12v Trigger On	002C
23	12v Trigger Off	002D
24	Info or #1	0025
25	HDMI1 or #2	0016
26	YPBPr or #3	0017
27	Re-sync or #4	0004
28	HDMI 2 or #5	0030
29	BNC or #6	001A
30	VGA 1 or #7	001B
31	Composite Video or #8	001C
32	S-Video or #9	001D
33	VGA 2 or #0	001E



205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com