

PACE BGA Rework Systems



TF 1700 Optional Items and Replacement Parts

Description	Part Number
Fuse Holder 5 x 20mm	1161-0008-P1
Micro-Positioner	1251-0117-P1
Panel Mount Fitting (vacuum)	1259-0135-P1
Low Pressure Pump	1334-0021-P1
Nitrogen Solenoid	1336-0047-P1
Flowmeter (Manual)	1348-0613-P1
Diaphragm Pump (vacuum) TF 1700 Only	6000-0311-P1
Blower Pump (230 volt)	1360-0320-P1
Blower Pump (120 volt)	1360-0368-P1
Air Flow Sensor	3008-0138-P1
Laser Pointer	6000-0239-P1
Suction Cup (includes 3)	6993-0202-P1
Pre Heater (120 volt) TF 1700	6000-0335-P1
Pre Heater (230 volt) TF 1700	6000-0336-P1
TF 1700 Top Heater 230v with Front Theta Control	6000-0344-P1
TF 1700 Top Heater 120v with Front Theta Control	6000-0343-P1
Nitrogen Solenoid TF 1700	6000-0313-P1
Air Flow Sensor (Systems with Theta adjustment on front)	3008-0280-P1
Auto Control Flow Meter (Systems with Theta adjustment on front)	1198-0019-P1
PV-65 Pik Vac Vacuum Wand	7027-0001-P1
Optical Alignment Kit	4018-0100-P1
Small Vacuum Pik (TF 1700 / TF 2700 only)	1121-0927-P1
Odd Shaped Board Holder Kit	6000-0244-P1
K-Type Thermocouple Pk2	1340-0174-P1
Hex Key Set	6016-0033
Stencil Platform Assembly	6000-0247-P1
Flux Tray Assembly	6000-0245-P1
Cable, RS232	3008-0175-P1
Tool, Nozzle/Chip Assy	1100-0231-P1
PCB Support	6000-0297-P1
Hot Grip Removal Pad	1100-0307-P1
Stencil, Component, Leads	1001-0001-P1
Centering Clamp Assembly	6000-0285-P1

*If current Theta is top-mounted, 6993-0297-P1 must be purchased with replacement heater.