
INSTALLATION INSTRUCTIONS



Display Carts

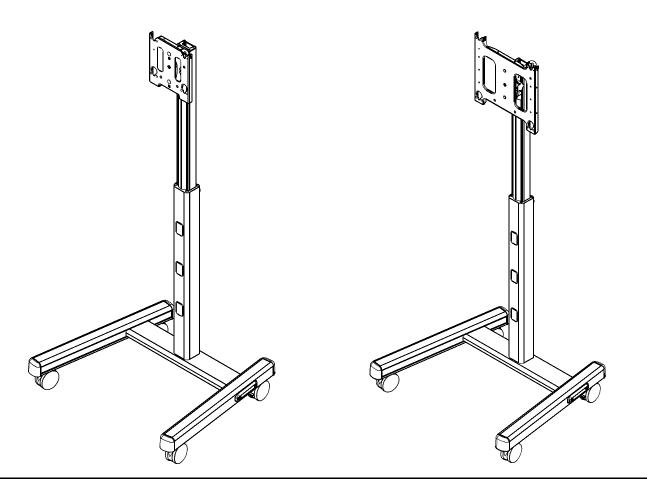

205 Westwood Ave, Long Branch, NJ 07740 Phone: 866-94 BOARDS (26273) / (732)-222-1511 Fax: (732)-222-7088 | E-mail: sales@touchboards.com



MFC, PFC Series

DISCLAIMER

Milestone AV Technologies and its affiliated corporations and subsidiaries (collectively, "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Chief® and ClickConnect™ are registered trademarks of Milestone AV Technologies. All rights reserved.



WARNING: A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.



CAUTION: A CAUTION alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.

WARNING: Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty! It is the installer's responsibility to make sure all components are properly assembled and installed using the instructions provided.




WARNING: Failure to provide adequate structural strength for this component can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which this component is attached can support five times the combined weight of all equipment. Reinforce the structure as required before installing the component.



WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components on the cart does not exceed 125 lbs (56.70 kg) for the MFC, and 200 lbs (90.72 kg) for the PFC.


DIMENSIONS

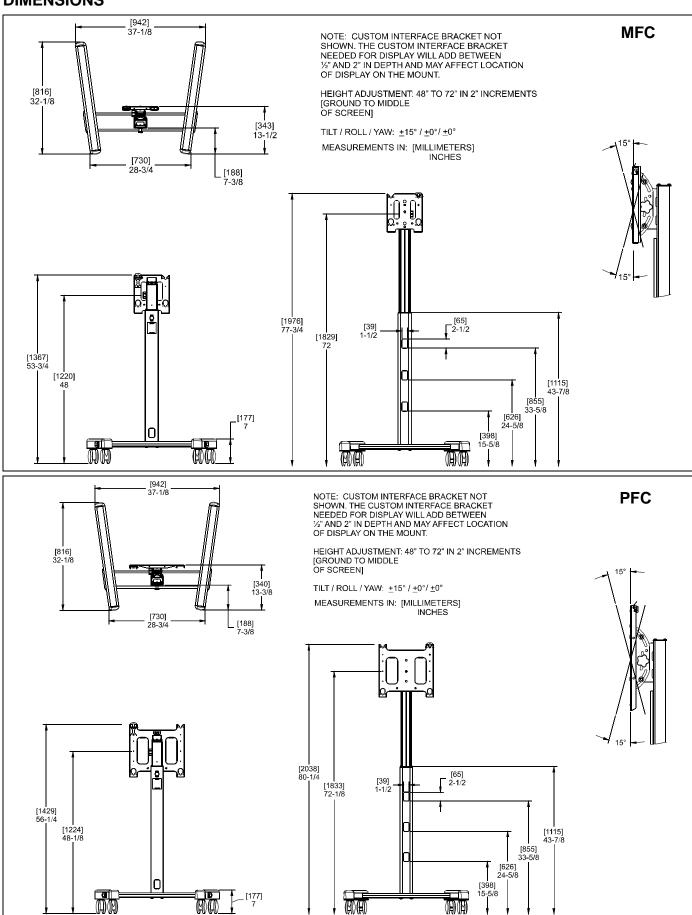


LEGEND

	Tighten Fastener	Pencil Mark
G	Apretar elemento de fijación	Marcar con lápiz
	Befestigungsteil festziehen	Stiftmarkierung
	Apertar fixador	Marcar com lápis
	Serrare il fissaggio	Segno a matita
	Bevestiging vastdraaien	Potloodmerkteken
	Serrez les fixations	Marquage au crayon
O	Loosen Fastener	Drill Hole
	Aflojar elemento de fijación	Perforar
	Befestigungsteil lösen	Bohrloch
	Desapertar fixador	Fazer furo
	Allentare il fissaggio	Praticare un foro
	Bevestiging losdraaien	Gat boren
	Desserrez les fixations	Percez un trou
	Phillips Screwdriver	Adjust
•	Destornillador Phillips	Ajustar
	Kreuzschlitzschraubendreher	Einstellen
	Chave de fendas Phillips	Ajustar
	Cacciavite a stella	Regolare
	Kruiskopschroevendraaier	Afstellen
	Tournevis à pointe cruciforme	Ajuster
	Open-Ended Wrench	Remove
	Llave de boca	Quitar
	Gabelschlüssel	Entfernen
	Chave de bocas	Remover
		Tromovor
	Chiave a nunte aperte	Rimuovere
0	Chiave a punte aperte	Rimuovere
0	Steeksleutel	Verwijderen
0	Steeksleutel Clé à fourche	Verwijderen Retirez
<i>O</i>	Steeksleutel Clé à fourche By Hand	Verwijderen Retirez Optional
	Steeksleutel Clé à fourche By Hand A mano	Verwijderen Retirez Optional Opcional
	Steeksleutel Clé à fourche By Hand A mano Von Hand	Verwijderen Retirez Optional Opcional Optional
(a)	Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão	Verwijderen Retirez Optional Opcional Optional Optional Opcional
	Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano	Verwijderen Retirez Optional Opcional Optional Opcional Opcional Opcional Opcional
	Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand	Verwijderen Retirez Optional Opcional Optional Opcional Opcional Opzionale Opzionale Optie
	Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand À la main	Verwijderen Retirez Optional Opcional Optional Opcional Opcional Opcional Opcional Opcional En option
	Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand À la main Hex-Head Wrench	Verwijderen Retirez Optional Opcional Optional Opcional Opcional Opzionale Optie En option Security Wrench
	Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand À la main Hex-Head Wrench Llave de cabeza hexagonal	Verwijderen Retirez Optional Opcional Optional Opcional Opcional Opzionale Optie En option Security Wrench Llave de seguridad
	Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand À la main Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel	Verwijderen Retirez Optional Opcional Opcional Opcional Opzionale Optie En option Security Wrench Llave de seguridad Sicherheitsschlüssel
	Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand À la main Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel Chave de cabeça sextavada	Verwijderen Retirez Optional Opcional Opcional Opcional Opcional Opzionale Optie En option Security Wrench Llave de seguridad Sicherheitsschlüssel Chave de segurança
	Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand À la main Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel Chave de cabeça sextavada Chiave esagonale	Verwijderen Retirez Optional Opcional Opcional Opcional Opzionale Optie En option Security Wrench Llave de seguridad Sicherheitsschlüssel Chave de segurança Chiave di sicurezza
	Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand À la main Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel Chave de cabeça sextavada	Verwijderen Retirez Optional Opcional Opcional Opcional Opcional Opzionale Optie En option Security Wrench Llave de seguridad Sicherheitsschlüssel Chave de segurança

TOOLS REQUIRED FOR INSTALLATION

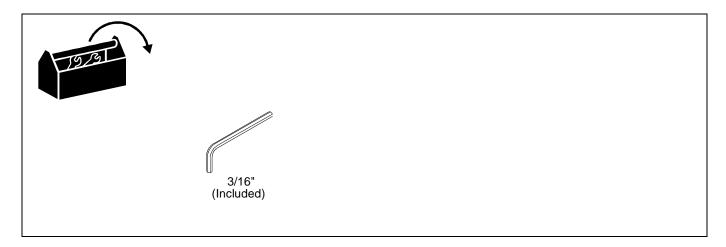

PARTS

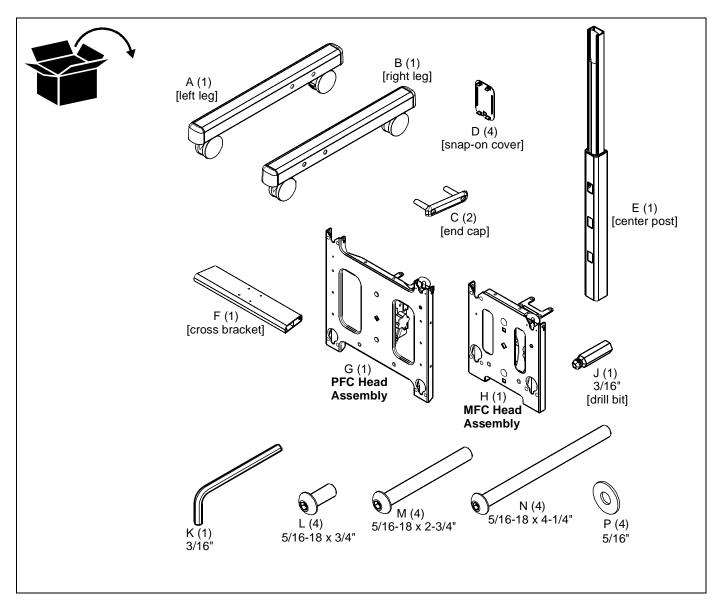

ASSEMBLY



CAUTION: Attachment holes may be damaged if a power drill is used to insert button head cap screws. Screws should first be inserted and turned BY HAND with the hex key or with a handheld screwdriver BEFORE using the hex head drill bit (J) and power drill to complete the attachment.

Assembling Cart

Assemble two legs (A) and (B) to the cart cross bracket (F) using two 5/16-18 x 4-1/4" button head cap screws (N) through one end cap (C) per leg. (See Figure 1)

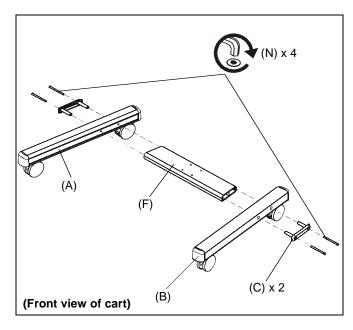


Figure 1



CAUTION: INNER COLUMN IS SHIPPED DISENGAGED and may pinch hands! Hold both inner and outer posts (columns) while removing from box.

IMPORTANT!: Press cable tie tab to loosen and remove cable tie from around knob post. (See Figure 2)NOTE: Disengage knob on center post BEFORE attaching base to the center post.

- Lift up slightly on the inner column of center post and hold firmly toward top of post. (See Figure 2)
- Pull out knob on the center post and turn 90° in either direction to disengage the locking mechanism. (See Figure 2)
- Răise the inner column and turn the knob 90° in either direction to engage the knob and lock the column in place. (See Figure 2)

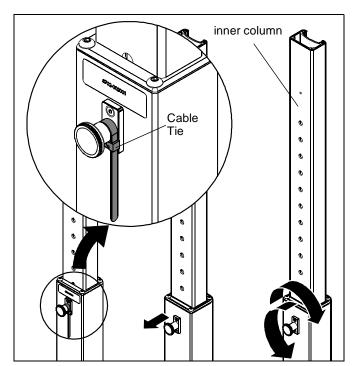


Figure 2

NOTE: Insert and turn screws in order shown (1, 2, 3, 4) in Figure 3.

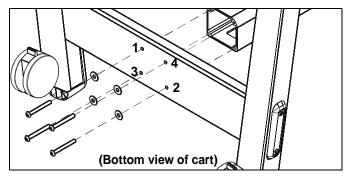


Figure 3

 Attach center post (E) to leg assembly using four 5/16-18 x 2-3/4" button head cap screws (M) and four 5/16" washers (P). (See Figure 3) and (See Figure 4)

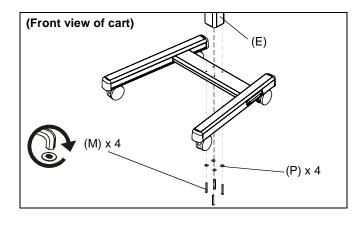


Figure 4

IMPORTANT!: When attaching head assembly ensure that the ClickConnect lock is at TOP of head assembly, and bracket tabs slide into the stand assembly. (See Figure 5)

- Slide head assembly (G) or (H) into the stand assembly. (See Figure 5)
- Attach head assembly (G) or (H) to the cart assembly using four 5/16-18 x 3/4" button head cap screws (L). (See Figure 5)

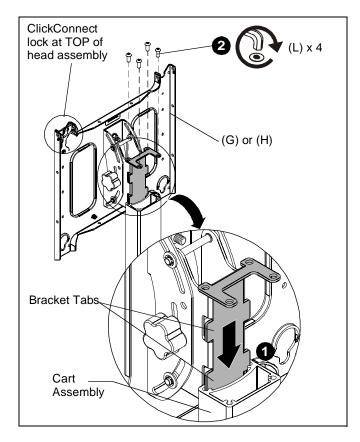


Figure 5

Adjusting Cart Height



CAUTION: ALWAYS remove the display(s) BEFORE adjusting the height of cart.

1. Firmly grasp head assembly. (See Figure 6)

IMPORTANT!: To avoid pinching hands, hold head assembly when adjusting cart height.

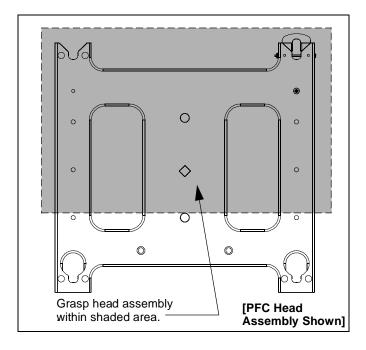


Figure 6

- Adjust the cart to the desired height by slightly lifting the head assembly, pulling out knob on the center post and turning 90° in either direction to disengage the locking mechanism. (See Figure 7)
- Raise or lower the center post, then turn the knob 90° either direction to engage the knob and lock the cart at desired height. (See Figure 7)

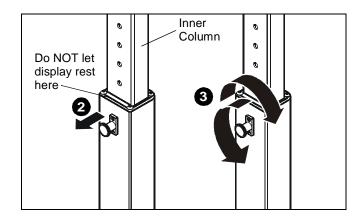


Figure 7

IMPORTANT!: Set the height of the cart so the display does NOT rest on the lower part of the center post. (See Figure 7) Always set the height so the knob is engaged in a hole in the center post.

Attaching Display to Cart

 Λ

WARNING: EXCEEDING MAXIMUM WEIGHT CAPACITY MAY LEAD TO SERIOUS PERSONAL INJURY OR DAMAGE TO EQUIPMENT! It is the installer's responsibility to ensure the total amount of weight placed on the cart does not exceed 125 lbs (56.70 kg) for the MFC, and 200 lbs (90.72 kg) for the PFC.



CAUTION: Before attaching display to cart set the brakes on the back wheels by pressing down on the tab. (See Figure 8)

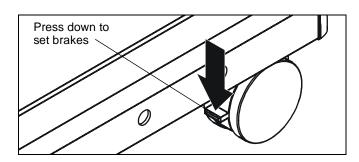


Figure 8

- Attach a PSBU or MSBU interface bracket to the display following the instructions included with the bracket.
- While supporting both sides of display, align four mounting buttons on display or interface bracket with four mounting holes in head assembly. (See Figure 9) and (See Figure 10)

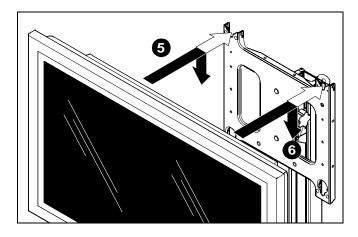


Figure 9

WARNING: DISPLAY MAY WEIGH IN EXCESS OF 40 LBS! Always use two people and proper lifting techniques when installing or positioning display on cart.

 Lower display into place listening for audible "click" to ensure recessed area of mounting buttons are properly seated in lower area of mounting holes. (See Figure 9) and (See Figure 10) WARNING: IMPROPER INSTALLATION CAN LEAD TO CART OR DISPLAY FALLING CAUSING SERIOUS PERSONAL INJURY OR DAMAGE TO EQUIPMENT! Ensure mounting buttons are completely engaged in mounting holes.

NOTE: Holes are provided in the faceplate for use with a padlock or similar locking device, if desired. In addition, the pin and nut may be removed from the upper holes and moved to the lower holes for use as a more permanent locking device. (See Figure 10)

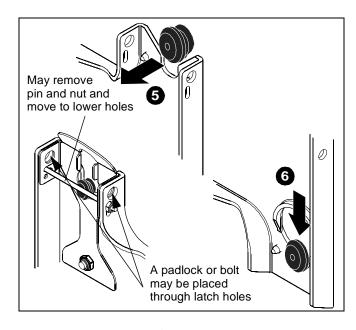


Figure 10

Tilting Display

The display can be tilted up to 15^o either backward or forward from a straight upright position.

 Turn knob counterclockwise on back of head assembly to loosen the tilt. (See Figure 11)

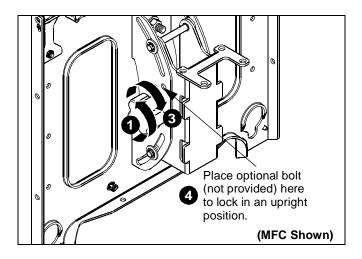


Figure 11

- Tilt display as desired, to a maximum of 15^o either forward or backward.
- 3. Turn knob clockwise to tighten display on head assembly. (See Figure 11)



CAUTION: Tighten knob on back of head assembly to prevent damage when moving the cart and display.

4. If leaving the display in a straight upright position, it is recommended that a bolt (not provided) be placed through the head assembly (See Figure 11) to lock the display into the upright position.

Cable Management

- Signal cables can be run down the front flap of the center post and out the front of the post at any of the openings. (See Figure 12)
- 2. The display power cord can be run through the top and down through the post to exit out the back. (See Figure 12)
- Any accessory power cords can be run through the front and down through the post to exit out the back. (See Figure 12)
- 4. Install the snap-on covers (D) to any opening that is not being used. (See Figure 12)
- To remove the snap-on covers, grip the sides of the cover in the middle and pull off. They can also be removed by inserting a flat-blade screwdriver into the bottom slot and rotating the screwdriver.

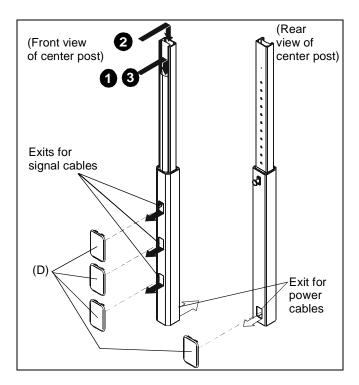


Figure 12

Cart Use and Maintenance



CAUTION: This cart is intended for use only with the products and maximum weights indicated (125 lbs [56.70 kg] for the MFC, and 200 lbs [90.72 kg] for the PFC). Use with other products or products heavier than the maximum weights indicated may result in instability causing possible injury.

WARNING: CART CAN TIP OVER RESULTING IN RISK OF INJURY. Do not allow children under 16 to move cart. Only adults should move this cart. Move cart slowly. Apply moving force on narrow dimension. Never apply force at topalways push near middle. Push, don't pull.

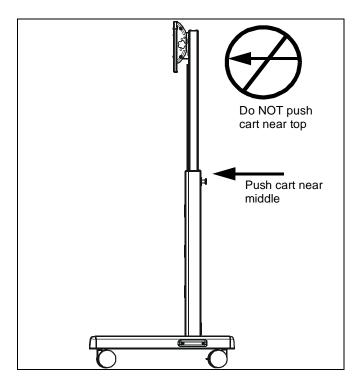


Figure 13

- 1. Always place cart on level surface.
- 2. Always lock the wheels when the cart is not moving.
- Check and tighten the hex nuts on the casters occasionally. (See Figure) These should be checked especially after use on uneven ground.

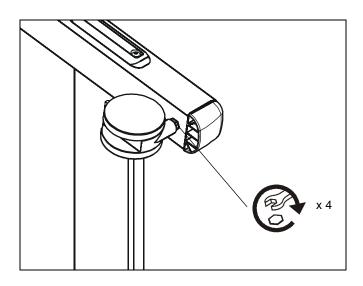


Figure 14

Removing Display from Cart

 Remove bolt or padlock from faceplate (if used). (See Figure 15)

NOTE: The pin may have been used as a more permanent locking device. If so, remove nut and pin and move from the lower holes to the upper holes.

2. Pull back on flag on upper mounting hole and press pin down into "Open" position. (See Figure 15)

WARNING: EACH DISPLAY MAY WEIGH IN EXCESS OF 40 LBS! Always use two people and proper lifting techniques when installing or positioning display on stand.

- 3. Carefully lift display from cart.
- 4. Lift up on pin and place flag back against faceplate to return it to "Closed" position. (See Figure 15)

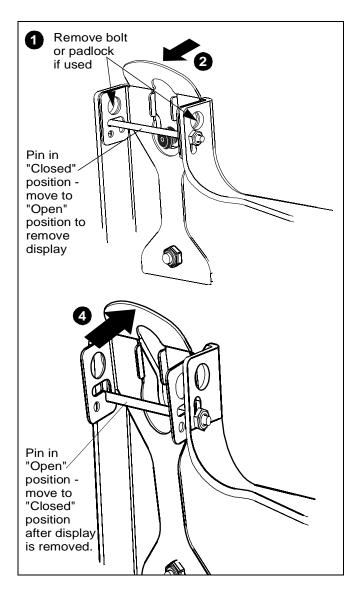


Figure 15



Our Mounts. Your Vision.

08/10

Chief Manufacturing, a products division of Milestone AV Technologies

8809-000038 RevG ©2010 Milestone AV Technologies, a Duchossois Group Company www.chiefmfg.com

Europe

USA/International A 8401 Eagle Creek Parkway, Savage, MN 55378

800.582.6480 / 952.894.6280

F 877.894.6918 / 952.894.6918

Fellenoord 130 5611 ZB EINDHOVEN, The Netherlands

+31 (0)40 2668620

+31 (0)40 2668615

Asia Pacific

A Office No. 1 on 12/F, Shatin Galleria 18-24 Shan Mei Street

Fotan, Shatin, Hong Kong

852 2145 4099

852 2145 4477

