

## INSTALLATION INSTRUCTIONS


Touchboards


205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511

## PSB-2154 LCD DISPLAY MOUNTING BRACKET

Prior to assembly, unpack carton completely and verify contents.

If you are missing any of the following components, please contact Customer Service at 1-800/582-6480

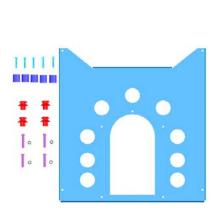

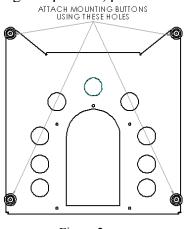

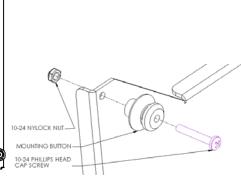


Figure 1

Figure 2

Figure 3

- (1) LCD Bracket
- (4) 10-24 x 1.25" Phillips Head Cap Screws
- (5) M4 x 35mm Phillips Head Cap Screws (longer of the two Phillips Head Cap Screws)
- (4) Mounting Buttons-Black Nylon
- (4) 10-24 Nylock Nuts
- (5) 8.3mm ID x 18mm OD x 20mm Nylon Spacers

BEFORE PROCEEDING, READ INSTALLATION INSTRUCTIONS COMPLETELY

## **CAUTION!** LCD DISPLAYS ARE EXTREMELY FRAGILE.

- 1. Using a 10-24 Phillips head cap screw (shorter of the two sets of Phillips head screws) and Nylock nut, secure mounting button to bracket (four places) (see Figure 2 & Figure 3).
- 2. Place Nylon spacers on mounting holes, aligning hole pattern on brackets with pattern on back of LCD Display (see Figure 4 & Figure 5).
- 3. Using M4 screws, secure brackets to display. Do not over tighten screws.
- 4. With the aid of another person, lift LCD Display up to the Chief Mount, aligning buttons of mounting brackets with slots in the Chief Mount.
- 5. Lower safety latch on the Chief Mount to secure LCD Display, making sure latch is completely engaged.

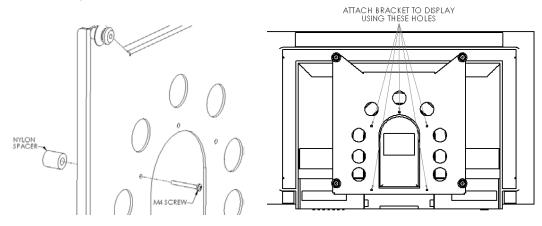


Figure 4 Figure 5

8804-00109 12/16/03