

Menu:	A0,F0,55,FF,4E,B1
Right:	A0,F0,55,FF,05,FA
OK:	A0,F0,55,FF,02,FD
Down:	A0,F0,55,FF,0D,F2
Up:	A0,F0,55,FF,17,E8
Left:	A0,F0,55,FF,0C,F3
Source:	A0,F0,55,FF,01,FE
(1):	A0,F0,55,FF,42,BD
(2):	A0,F0,55,FF,43,BC
(3):	A0,F0,55,FF,0F,F0
(4):	A0,F0,55,FF,1E,E1
(5):	A0,F0,55,FF,1D,E2
(6):	A0,F0,55,FF,1C,E3
(7):	A0,F0,55,FF,18,E7
(8):	A0,F0,55,FF,45,BA
(9):	A0,F0,55,FF,4C,B3
(0)	A0,F0,55,FF,56,A9
Exit:	A0,F0,55,FF,1B,E4
Power On:	A0,F0,55,FF,AE,51
Power Off:	A0,F0,55,FF,AD,52
Power On/Off:	A0,F0,55,FF,0B,F4
Volume +:	A0,F0,55,FF,0A,F5
Volume -:	A0,F0,55,FF,40,BF
Channel +:	A0,F0,55,FF,55,AA
Channel -:	A0,F0,55,FF,5A,A5

Mute:	A0,F0,55,FF,14,EB
Sleep:	A0,F0,55,FF,53,AC
AV:	A0,F0,55,FF,ED,12
VGA:	A0,F0,55,FF,EA,15
HDMI Toggle:	A0,F0,55,FF,EC,13
HDMI1:	A0,F0,55,FF,DE,21
HDMI2:	A0,F0,55,FF,DF,20
HDMI3:	A0,F0,55,FF,E0,1F
S-VIDEO:	A0,F0,55,FF,E4,1B
TV:	A0,F0,55,FF,E8,17
DTV:	A0,F0,55,FF,E9,16
Component:	A0,F0,55,FF,E7,18
USB:	A0,F0,55,FF,57,A8
PMODE:	A0,F0,55,FF,4B,B4
Zoom:	A0,F0,55,FF,51,AE
Surround:	A0,F0,55,FF,C7,38
SMODE:	A0,F0,55,FF,5B,A4
VOL 25%:	A0,F0,55,FF,21,DE
VOL 50%:	A0,F0,55,FF,22,DD
VOL 75%:	A0,F0,55,FF,23,DC
VOL 100%:	A0,F0,55,FF,24,DB
Brightness 25%:	A0,F0,55,FF,26,D9
Brightness 50%:	A0,F0,55,FF,27,D8
Brightness 75%:	A0,F0,55,FF,28,D7
Brightness 100%:	A0,F0,55,FF,29,D6

COM Settings

Baud Rate:	38400
Data Bits:	8
Parity:	None
Stop Bits:	1