



ActivExpression 2

Startup Guide



Touchboards

205 Westwood Ave, Long Branch, NJ 07740
 Phone: 866-94 BOARDS (26273) / (732)-222-1511
 Fax: (732)-222-7088 | E-mail: sales@touchboards.com

Copyright Information

TP1817EN Issue 2 ©2011 Promethean Limited. All rights reserved.

All software, resources, drivers and documentation supplied with the product are copyright Promethean Ltd 2011.

Promethean is owner of a number of trademarks in several jurisdictions across the world. The Promethean products documented in this guide include aspects which are protected under their respective patent, copyright, design copyright, registered design and trademark laws.

Windows, the Windows logo and Excel are registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.

All other trademarks remain the property of their respective owners.

This guide is distributed with the product. It may only be reproduced for use within the institution in which the product is used. For use outside of your institution, no part of this guide may be reproduced, transmitted, stored in a retrieval system or translated into any other language without the prior permission of Promethean Ltd.

Please note that the content in this guide is protected under copyright law. Although every care has been taken in the compilation of this guide, Promethean Ltd accepts no responsibility for errors or omissions, or for damages resulting from the use of information contained within the following pages.

About this guide	4
What is ActivExpression2?	5
Quick Start Guide	8
Setup	8
Registration	9
Voting	13
Voting results	20
Device Guide	21
Display	21
Menu options	24
Text, equation and numeric entry	25
Equation Editor	27
Single response questions	28
Multiple choice questions	28
Sort into order questions	29
Change the device language	32
Upgrade the device firmware	33
Change the device batteries	33
More Information	34
Compliance Statements	35

This guide describes how to set up and use ActivExpression2 devices in voting sessions with ActivInspire or Promethean ActivOffice. It takes you through setup, device registration, voting sessions from both the teacher's and learner's perspectives, as well as voting results.

The guide is in five parts.

1 WHAT IS ACTIVEXPRESSION2?

This section briefly introduces the product and its key features, as well as what is included in the kit and what else you may need.

2 QUICK START GUIDE

This section is for teachers who want to use ActivExpression2 devices in the classroom.

The Quick Start Guide provides information on how to:

- Set up the devices
- Connect the ActivHub
- Register devices in ActivInspire and Promethean ActivOffice
- Run different types of voting sessions; ad-hoc questions, prepared questions and Self-Paced questions
- Display voting results

3 DEVICE GUIDE

This section is for teachers and learners who want to familiarise themselves with how to enter and send responses with the ActivExpression2 device.

It provides information on how to:

- Interpret what you see on the device screen
- Navigate and select menu options
- Use the Equation Editor
- Use different techniques to answer single response questions, multiple choice questions and sort into order questions
- Change the device language
- Upgrade the device firmware
- Replace the device batteries

4 MORE INFORMATION

This section provides links to additional information, help and support available from Promethean.

5 COMPLIANCE

This section contains important information about the international standards with which ActivExpression2 devices and ActivHubs conform.

What is ActivExpression2?

ActivExpression2 is the newest addition to the Promethean family of Learner Response System (LRS) devices; this device is equally at home in the classroom, boardroom, lecture theatre or workshop.

ActivExpression2 allows every student to express themselves in words, phrases, and even natural math equations.

With a full QWERTY * keypad no message is too complex to communicate.

 
Users can send answers of up to 140 characters, or equations that fill the display.

Self-Paced Learning functionality allows teachers to enable learners to work at their own pace and level.

New features include:

- A contemporary look and ergonomic feel
- A mathematical Equation Editor
- A new menu system that provides cursor keys to navigate menu items
- Context specific Hotkeys to select an option, send a response, or return to the previous menu
- A 2.5 inch (6.5 cm) backlit display
- The ability to display both questions and answers on the device
- A Multifunction Key to switch focus from questions to answers and back, to allow scrolling through longer entries

* Variant dependent

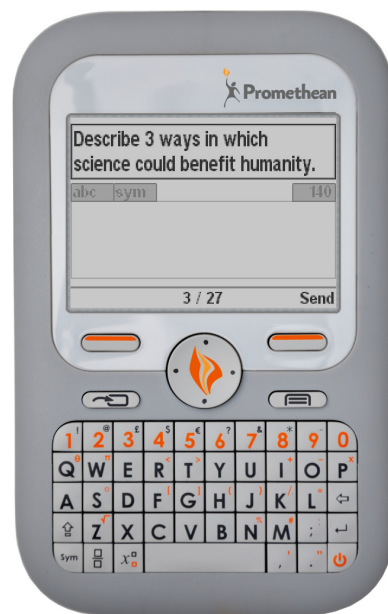

MAIN KEYS AND FUNCTIONS

Multifunction Key

Press to change focus between question and answer, or to display different views of a question set

Numeric/Voting Keys

Press to enter numbers or answer multiple choice questions

Shift Key

Press to change case

Symbol Key

Press and hold to launch symbol table

Fraction Control Key (Equation Editor)

Super-/Subscript Control Key (Equation Editor)

Hotkeys

Functions are context dependent

Cursor Control Key

Press to navigate up, down and sideways

Menu Key

Press to access Settings

Backspace Key

Press to delete preceding character

New Line Key

Power On/Off Key

Press and hold for 1 second to power device on/off



You can switch device backlighting on and off, and control length and intensity of lighting from within ActivInspire. For details, see the later topic [Save Energy!](#)

WHAT IS INCLUDED?

ActivExpression2 devices are available in kits of 5, 24 and 32 devices. All devices are supplied with 3 AA batteries inserted, ready to use.

Your kit includes: *

- ActivExpression2 devices
- Carrying case
- Security screwdriver
- 2.4 GHz ActivHub
- ActivHub holder and 1.8m USB extension cable
- ActivInspire Professional Edition International DVD
- Promethean ActivOffice International DVD
- TP1817EN ActivExpression2 Startup Guide DVD
- TP1821 Compliance Statements for ActivExpression2 and ActivHub

Rechargeable batteries are *not recommended* for use with ActivExpression2 devices.

* Subject to change without notice

WHAT ELSE DO YOU NEED?

To run voting sessions with ActivExpression2 devices, you also need to run presentation software. ActivExpression2 devices are compatible with the following Promethean products:

- ActivInspire Professional Edition **
- Promethean ActivOffice **
- ActivProgress (web based) **

ActivExpression2 devices are also compatible with any 3rd party software that has been developed for use with Promethean LRS devices.

** To use the Equation Editor, or ActivProgress, you need ActivInspire Professional Edition 1.6 or later. The Equation Editor is not currently available in Promethean ActivOffice.

For details of software and hardware requirements for Promethean products, go to www.PrometheanWorld.com, select your language, then click **Our Solutions** and browse for information about the product of your choice.

This part of the Startup Guide is about setting up and registering ActivExpression2 devices in ActivInspire or Promethean ActivOffice, and about running voting sessions. The process is very similar in ActivInspire and Promethean ActivOffice.

Setup

CONNECT THE DEVICE BATTERIES

In new devices the batteries are protected by a small plastic tab. Before you use a device for the first time, pull the tab out of the device to allow the batteries to connect.

Pull out the protective tab



CONNECT THE ACTIVHUB

The ActivHub enables LRS devices, your computer and other Promethean products to communicate with each other. Promethean devices are registered on the ActivHub. The ActivHub must be plugged in before you can use any devices.

Raise the ActivHub antenna

Insert into USB port on
your computer



Use the 1.8m USB extension cable if necessary.

The ActivHub has flashing indicator lights:

- **Red** lights up when you first plug in the ActivHub; at any other time it indicates a problem
- **Green** flashes when data is transmitted or received

Devices remember the last ActivHub to which they were registered. If they were last registered to your ActivHub, you can take the ActivHub to another computer, insert it and use the devices without registering them again.

Registration

Device registration is the process of telling the ActivHub how many devices there are in the classroom, and their names.

 
You need to register devices to your ActivHub *before* you begin a voting session.

For details of language options, see the later section [Change the device language](#).


ON THE COMPUTER

Start registration from the **Voting Browser** in ActivInspire or Promethean ActivOffice.

Make sure **ActivExpressions** is selected.

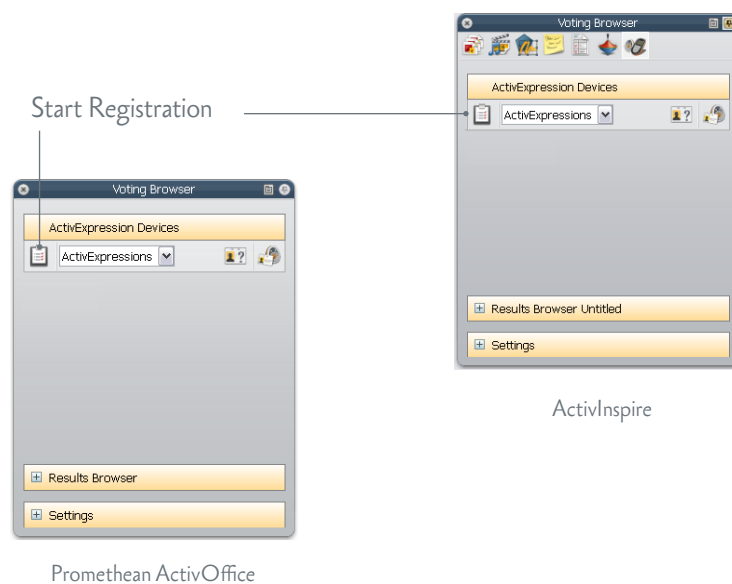

 In Device Registration in ActivInspire or Promethean ActivOffice, make sure that you select your ActivHub, then select **ActivExpressions** before you click **Register**.

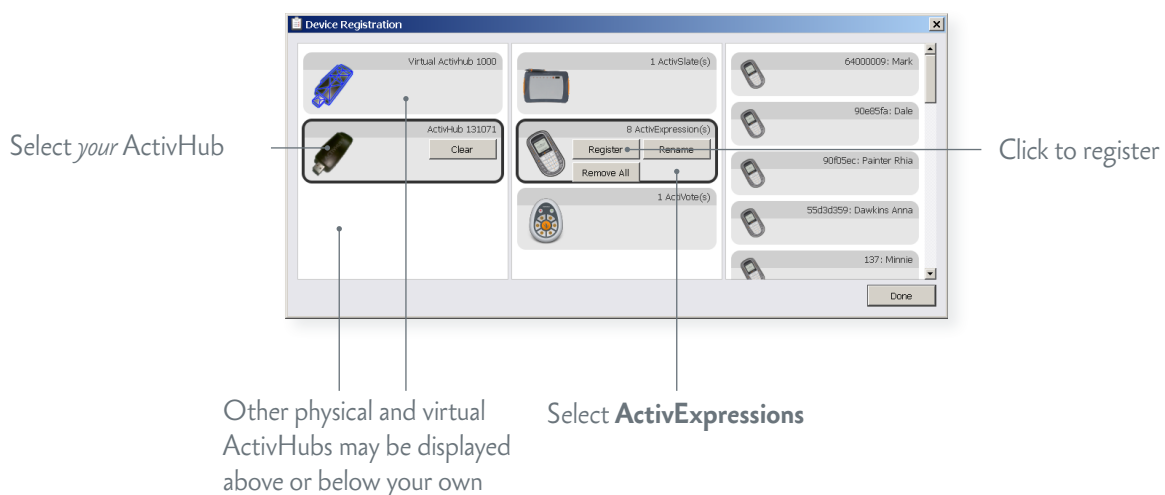


ActivExpression 2

During registration, ActivInspire and Promethean ActivOffice allocate names to devices.


You have two choices at this time:

- The quickest way is to let the software allocate default names during registration.
- Alternatively, you can let your learners name their ActivExpression devices during registration.

 Whichever option you choose, devices must be powered on and within transmission range of the ActivHub.

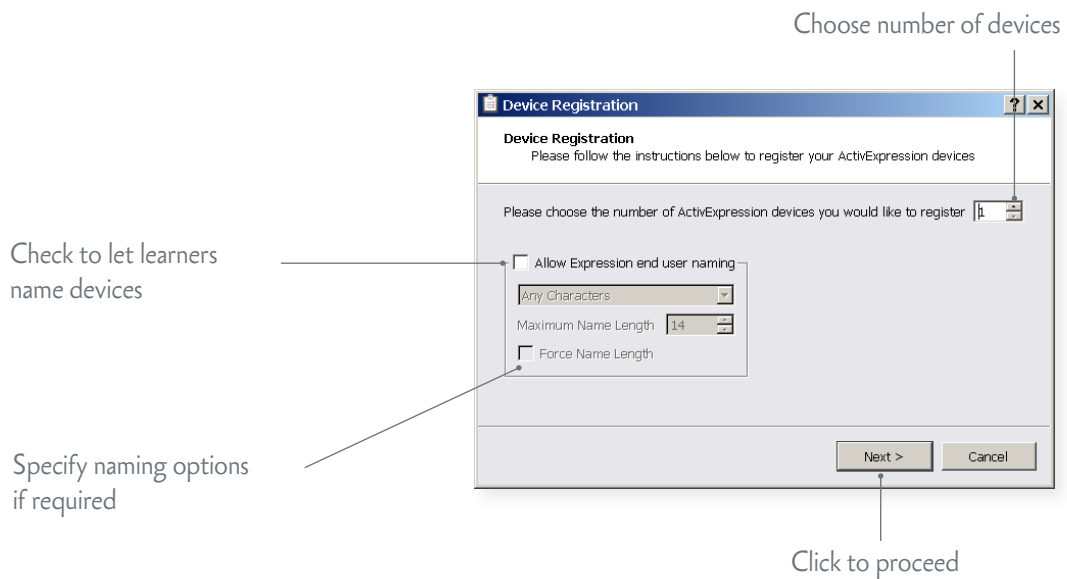

 ActivInspire or Promethean ActivOffice displays a 3-letter PIN code. All learners must enter the correct PIN.

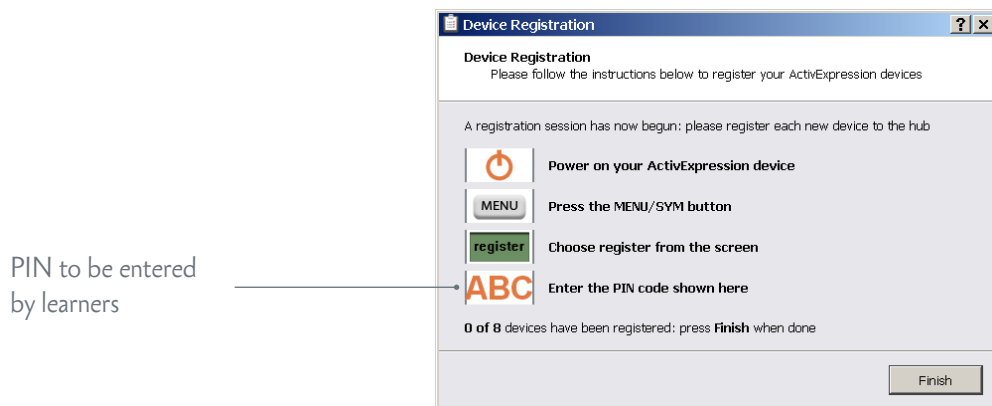

ON THE DEVICES

To register, learners must enter the 3-letter PIN generated in ActivInspire or Promethean ActivOffice on their devices.

 


ON THE COMPUTER

As soon as all required learners send the correct PIN, Device Registration in ActivInspire or Promethean ActivOffice shows their devices as registered.

ActivExpression 2

Each device name is displayed on the right of the Device Registration dialog.

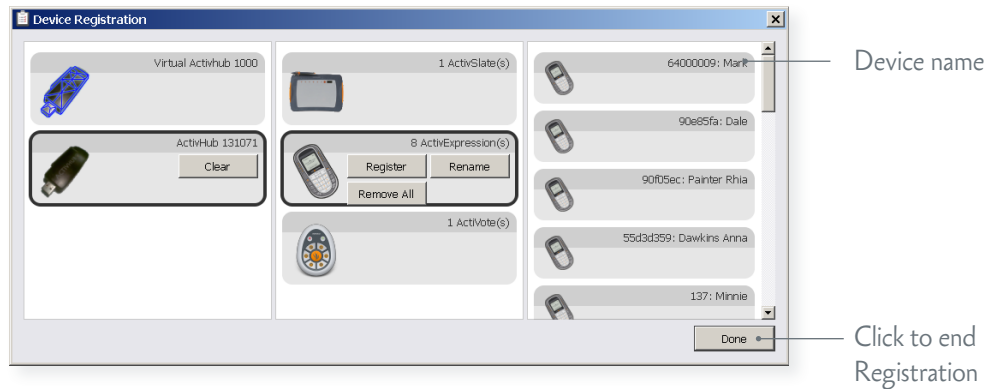


Check the **Voting Browser** in ActivInspire or Promethean ActivOffice at any time to see the list of devices registered to your ActivHub.

You can add more devices to the register as necessary, *but only when there is no voting session in progress.*

Start registration, specify the number of additional devices, then complete the steps as shown before.

 Registered devices

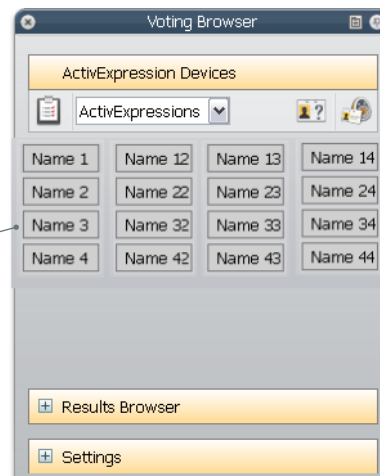


Promethean ActivOffice

Save energy!

With ActivInspire 1.6 or later, you can also switch backlighting on and off, and control length and intensity of lighting of registered devices.

In the **Voting Browser**, click **Settings**. Then adjust the timeout and backlighting as appropriate. Any changes becomes effective immediately.

 If a device is not powered on when you change a setting, the change becomes effective next time the device is powered on while you run ActivInspire.

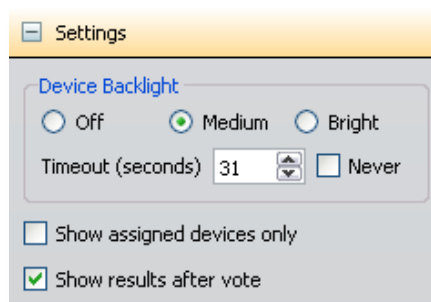

ActivInspire

Once learners have registered, they can use their devices to answer questions you ask in ActivInspire or Promethean ActivOffice.

If you have Promethean ActivEngage Mobile or Desktop clients, you can use these in the same voting session as ActivExpression devices.

VOTING SESSIONS

There are three types of voting session.

Session	Description
ExpressPoll	Learners answer a quick or ad hoc question. You can hold an ExpressPoll at any time, even when there is no flipchart or slide show open. For multiple choice questions, ActivExpression devices and Promethean ActivEngage Mobile or Desktop clients can send multiple responses to a single question.
Prepared Questions	Learners answer prepared questions. You can insert one question and an optional follow-on question into each flipchart page or slide. Questions appear on the flipchart page or slide. All learners answer the same question at the same time.
Self-Paced Questions	Questions are sent to each learner's device one question at a time. Each learner works through the question set at their own pace.

QUESTION TYPES

You can choose from the following question types:

 
 
- Multiple choice
- Sort in order
- Yes/No
- True/False
- Likert Scale
- Text Entry
- Number Entry
- Equation Entry

 
For more information about voting sessions, and how to prepare question pages or slides, see one of the following:

- [ActivInspire WebHelp](#)
- [Promethean ActivOffice WebHelp](#)


EXPRESSPOLL

Use **ExpressPoll** to quickly ask a question and capture learners' responses. For example, to assess confidence at the start, then to check for changes in perception later.

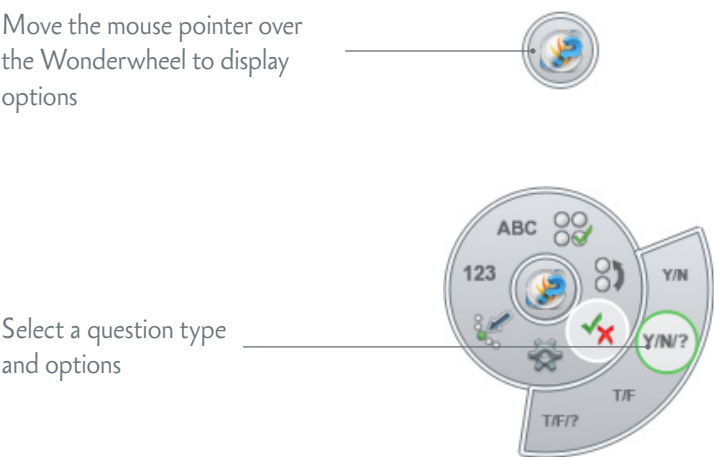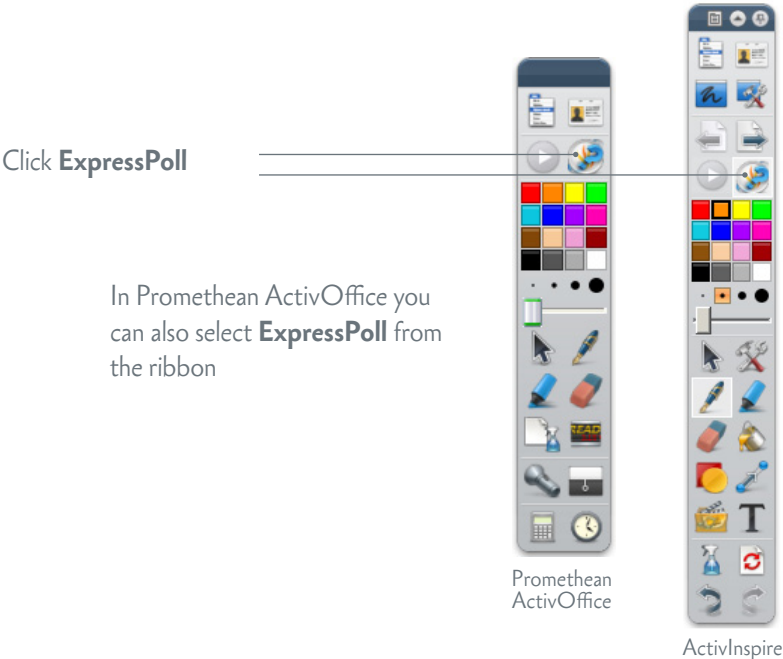

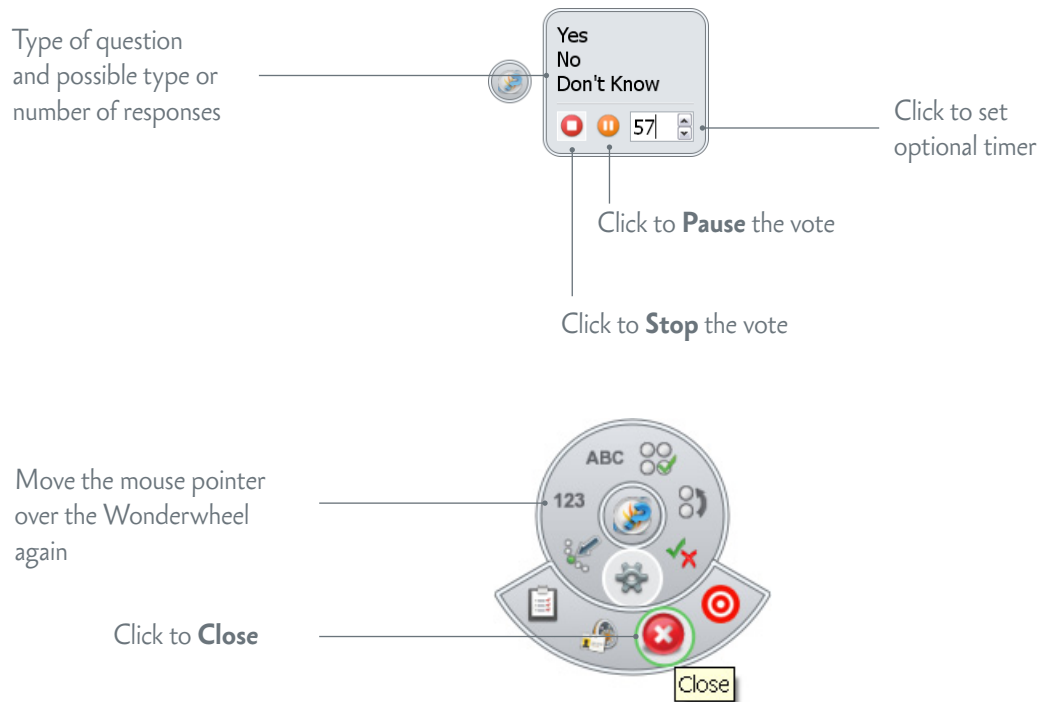

 When you ask a question with **ExpressPoll**, the system copies the question data to a new page or slide at the end of the flipchart or slideshow, together with a snapshot of the original page or slide. This gives you the option to use the question in another session. You can edit the question properties with **Question Manager** and format the page or slide.

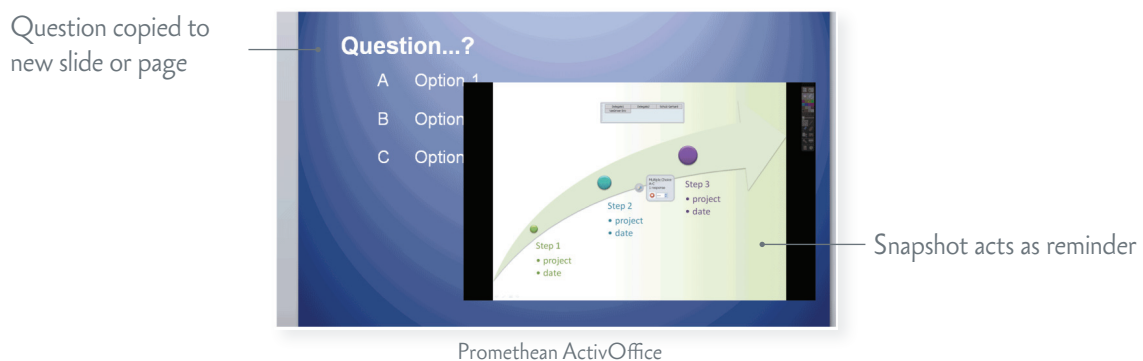

For more information about **ExpressPoll**, see one of the following:

- [ActivInspire WebHelp](#)
- [Promethean ActivOffice WebHelp](#)

PREPARED QUESTIONS

Use the Question Manager in ActivInspire or Promethean ActivOffice to prepare individual questions in advance. The process is identical in both, although there are some small differences in the layout of the Question Manager screen.

Please note the following:

- In ActivInspire you can insert single questions into different flipchart pages in *multiple flipcharts*. In Promethean ActivOffice you can insert single questions into different slides in *a single slide show*.
- In ActivInspire you can also enter mathematical equations and formulae with the Equation Editor.
- In both ActivInspire and Promethean ActivOffice — Make sure you only insert *one question* into each slide or page. Two or more questions are a Self-Paced Question Set and are not displayed.

ActivInspire only:
Launch **Equation Editor**

Go to another page

Enter **Question Properties**

Go to another flipchart
Select **Question Type**

Optional:
Include a follow-on question

Choose how the question will appear on the page or slide

ActivInspire

 
Click to **Close**

Click to discard any changes since last **Apply**

Click to apply changes and continue working in Question Manager.


Make sure that your learners have powered on their devices.

Navigate to a page or slide that contains a prepared question

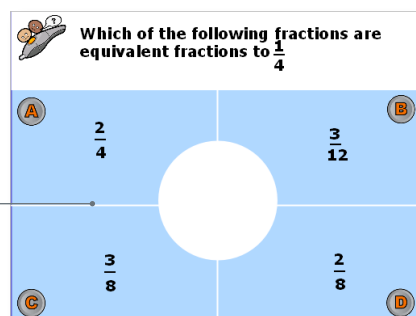

The **Start Vote**  button is now enabled

 Click to **Start** the vote

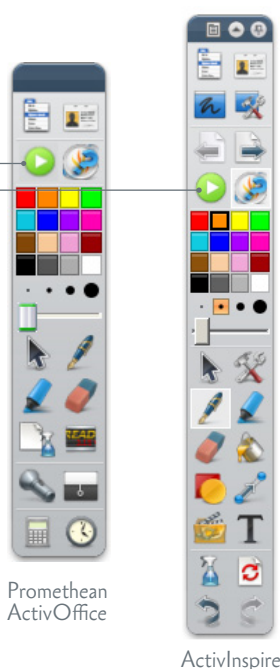

Click to **Stop** the vote



Click to set optional timer

The voting session stops in one of three ways:

- All learners answer the question.
- You click **Stop Vote** .
- The timeout is reached.

For more information about prepared questions see one of the following:

- [ActivInspire WebHelp](#)
- [Promethean ActivOffice WebHelp](#)

SELF-PACED QUESTION SETS

Unlike prepared questions, where all learners respond at the same time, Self-Paced Question Sets allow individuals to progress at their own pace. During a voting session, questions are *not* displayed on the page or slide. Instead, learners receive each question on their device, one question at a time.

You can:

- Enter as many questions as you wish into a question set.
- Group questions into up to 9 levels of difficulty.
- Choose how many questions each learner must answer correctly before they can progress to the next level.
- Shuffle questions to change their order.
- Randomise questions, so that each learner receives all questions in a different order from the others.
- Auto-generate basic numeracy questions with the Question Generator.

In ActivInspire you can also allow students to retry incorrect answers.

Use the **Question Manager** to prepare Self-Paced Question Sets. The process is almost identical to the process of creating single questions.

Quickly insert a number of questions

Choose to send feedback to learners

Choose look and feel of page or slide

Question Generator
Enter Test Properties

Promethean ActivOffice

 
Each response is displayed in ActivInspire or Promethean ActivOffice as soon as it has been sent.

You can choose between three display formats:

- Timeline.
- Level Summaries.
- Incorrect Answers.

These show you at a glance:

- How well learners are doing individually and as a group.
- If anyone is struggling or racing ahead.

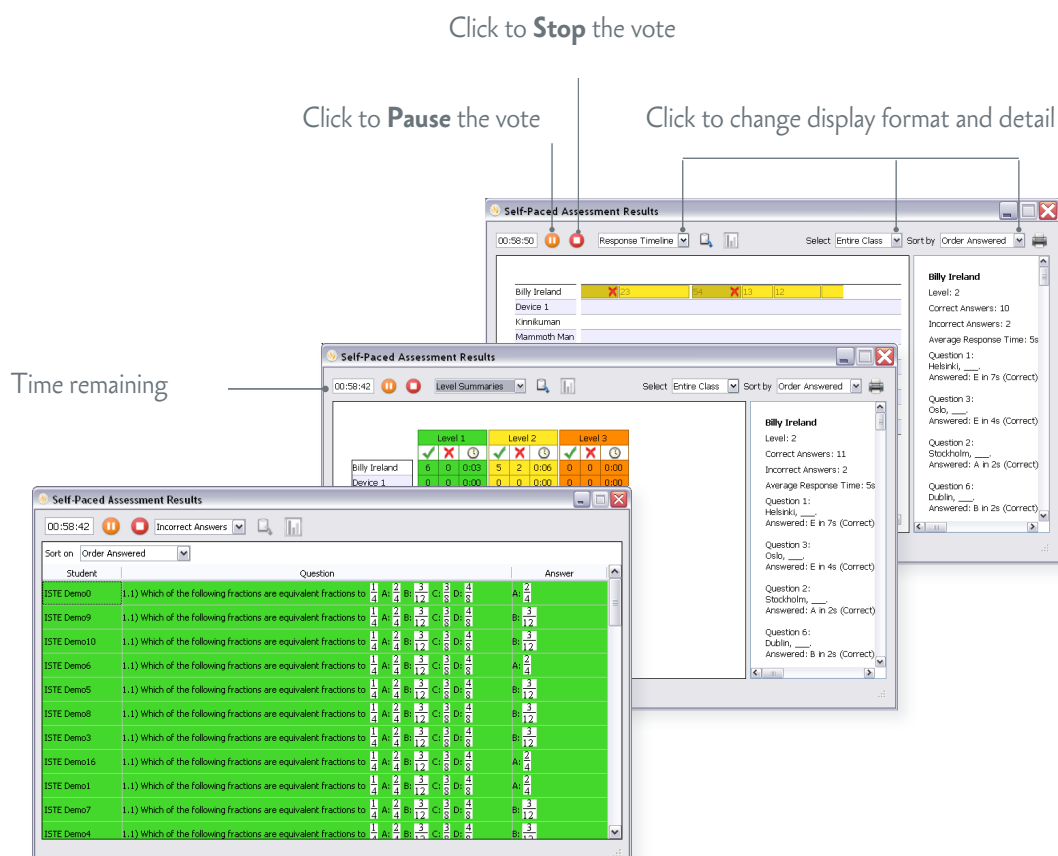

You can pause a session at any time to clarify matters, to provide additional information, or to open a discussion.

Learners cannot respond while the vote is paused.

When you resume the vote, the device displays the previous question again.

For more information about Self-Paced Question Sets, see one of the following:

 
- [ActivInspire WebHelp](#)
- [Promethean ActivOffice WebHelp](#)

You can display voting results at any time from the **Voting Browser**. Results are displayed in pop-up windows in ActivInspire or Promethean ActivOffice.


You can:

- Display results in eight different formats.
- Paste results into your flipchart or slide show.
- Identify correct answers.
- Access results later with the **Results Browser**.
- Export voting results to Microsoft Excel *.


* ActivInspire users require version 1.4 or later to export Self-Paced Question Set results.

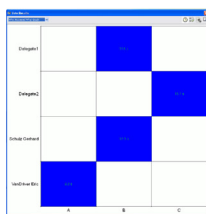


Who Answered
What Graph

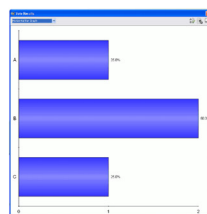 

Horizontal
Bar Graph

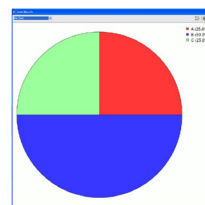 

Pie Chart

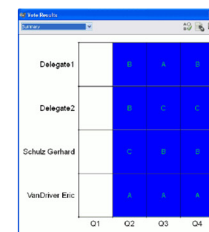 

Summary

Name	Response	Time
Delegate1	B	11.0 s
Delegate2	C	18.9 s
Schulz Gerhard	B	13.2 s
VanDriver Eric	A	9.2 s


Who Answered
What List

User	Score	%
Delegate1	0	0.0
Delegate2	0	0.0
Schulz Gerhard	0	0.0
VanDriver Eric	0	0.0

Overall Instructor
Paced Score

Question	Percentage
A	25.00%
B	50.00%
C	25.00%

 Text Report

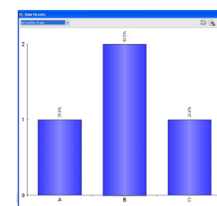

Vertical Bar Graph

For more information about voting results and how to display and interpret them, see one of the following:

- [ActivInspire WebHelp](#)
- [Promethean ActivOffice WebHelp](#)

This section contains more detailed information about how to use the device.

 
You can use the device to answer individual questions as well as work your way through Self-Paced Question Sets.

Display

When you answer questions, the device display is divided into several areas. What you see depends on the type of question and whether it is a single prepared question, or one of a Self-Paced Question Set.


SINGLE PREPARED QUESTIONS

Single prepared questions are displayed in ActivInspire, Promethean ActivOffice or compatible presentation software. The questions do not appear on the ActivExpression2 device.

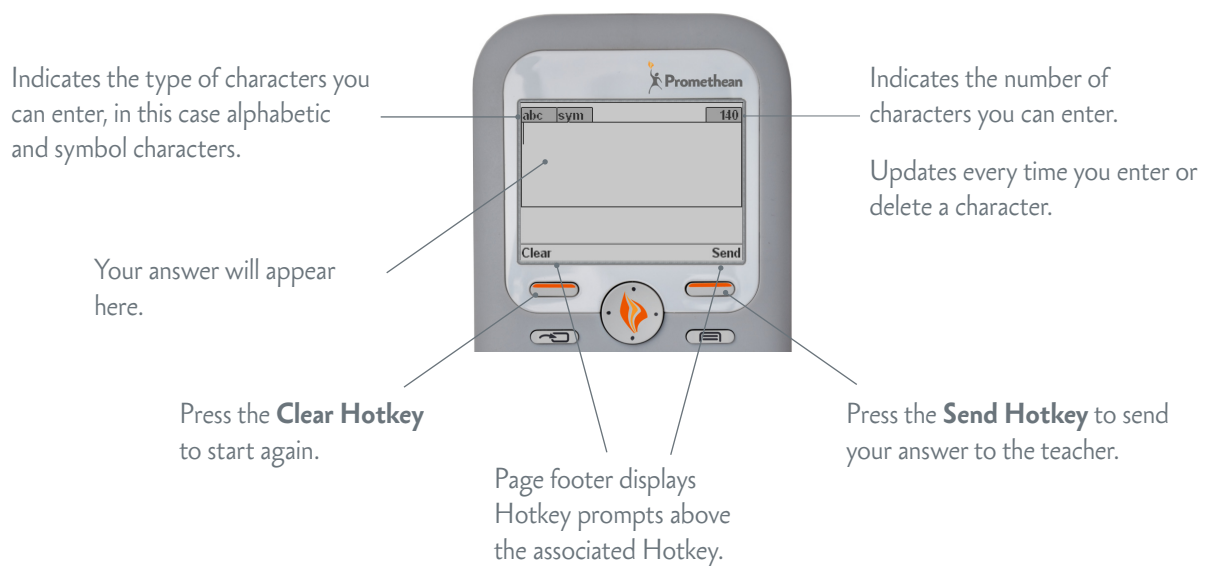

SELF-PACED QUESTIONS

 
Unlike single prepared questions, where only the answer appears on the device screen, questions and answers are both displayed on the device.

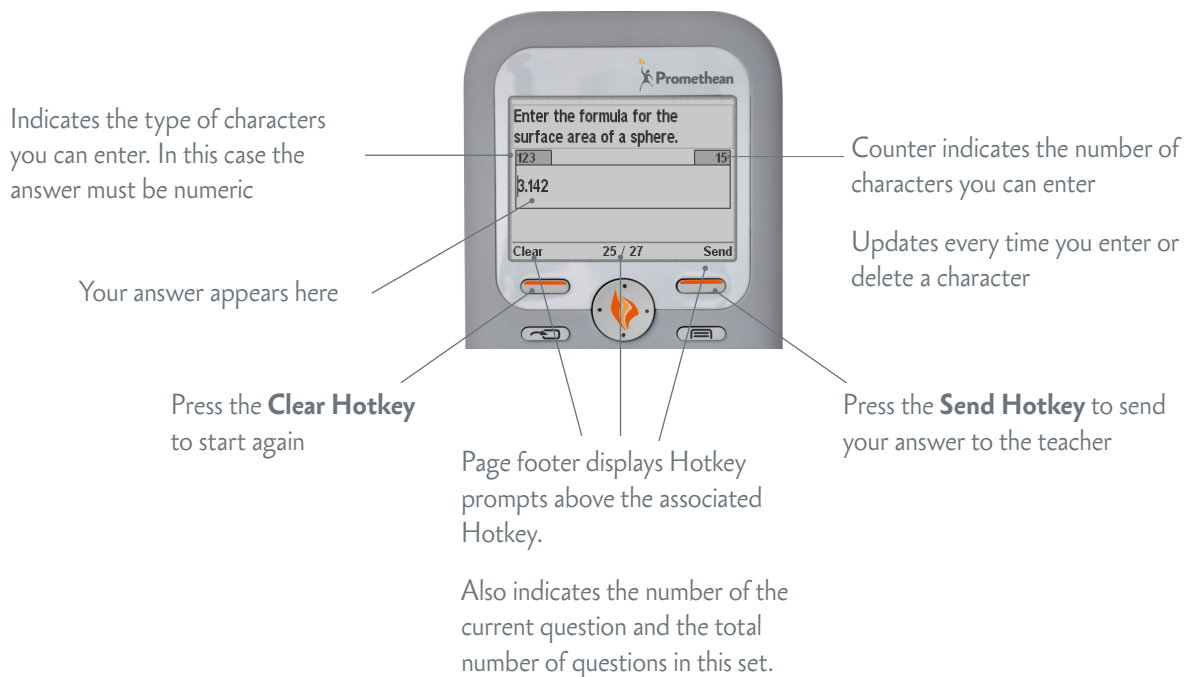


If a question or answer is long, it may not be possible to display the entire question and answer together. In that case you can toggle between question and answer by pressing the **Multifunction Key**.

The following rules apply:

 
- The display area that does not have the focus is grayed out and cannot receive keypad input.
- When the answer is grayed out, you can press any of the main keypad keys to change the focus to the answer. If the key is applicable to the answer, the character is inserted into the response.

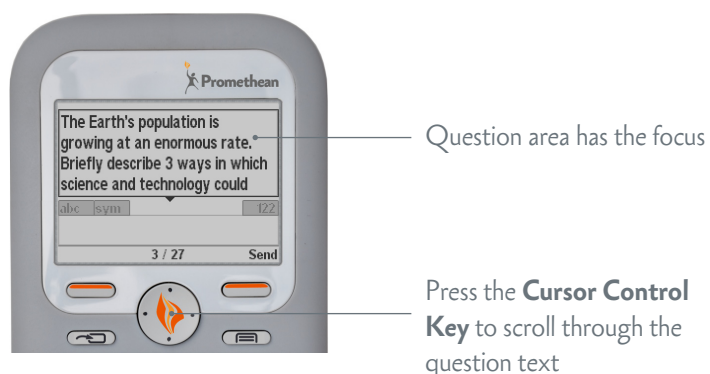

 Press the **Multifunction Key** to activate the answer area

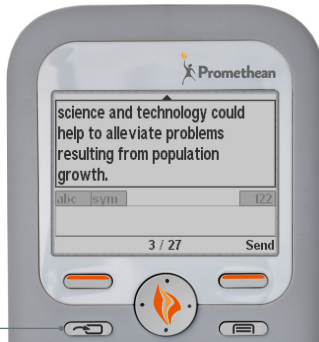

 The question is minimized and the answer area is expanded and has the focus

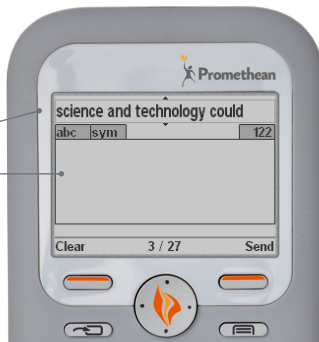

Teachers can allow learners to choose the order in which they answer questions by enabling navigation when they create or edit a Self-Paced Question Set in **Question Manager**.

For question sets where navigation is enabled the **Multifunction Key** has a secondary function when you press it for one second. The Navigation screen displays all the question numbers in a grid. The questions are shaded if they have already been answered.

Grayed out questions have already been answered

Press to **Abort** the selection process



Currently selected question is highlighted.

Press to **Select** the highlighted question and display it

Press the **Cursor Control Key** to navigate to another question

When you are not answering questions, you can browse device menus and select options.

To browse menus, use the round **Cursor Control Key**.

To select an option or return to the previous menu, use the **Select** or **Exit Hotkeys**.



Register your device to the ActivHub

Change the device language or the length of time to auto-power off

Run **Diagnostics**

Press to return to the previous menu

Use the **Cursor Control Key** to scroll up and down

Only displayed when a firmware upgrade has been started in ActivManager

Press to **Select** the highlighted menu option



Text, equation and numeric entry

Like other mobile devices each key on the keypad has both a primary and secondary function. In cases where there are multiple characters associated with a key, for example, foreign accents, each key has its own symbol table which is invoked by pressing the key for one second.

Two keys control the selection of primary, secondary, uppercase and lowercase characters. Each key has three settings:

Press Shift Key Displays Selects

once	abc	Lower case
twice	Abc	Upper case for next key press (then drops back to lower case)
three times	ABC	Upper case permanently

Press Sym Key Displays Selects

once	sym	Primary key functions
twice	Sym	Secondary key functions (applies to next key press, then drops back to primary)
three times	SYM	Secondary key functions permanently

LAUNCH SYMBOL TABLE

To launch the main symbol table, press and hold the **Sym Key**. Press the **Sym Key** again to toggle between different symbol tables.

Use the **Cursor Control Key** to navigate through the symbols, and the **Hotkeys** to select or discard a symbol.

 


ActivExpression 2


CLEAR AND UNDO

If you press the **Clear Hotkey** by mistake, press the **Undo Hotkey**, but note that *it is only valid for one key press*. So if you press the **Clear Hotkey**, followed by another key, the **Undo Hotkey** is no longer enabled.

Use the **Clear Hotkey** to clear your answer and start again

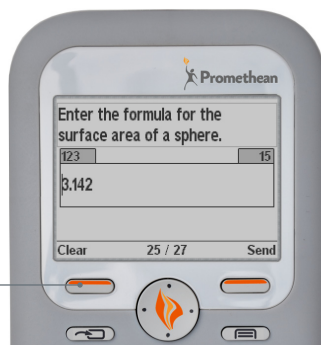

 The **Undo Hotkey** is enabled after you clear your answer

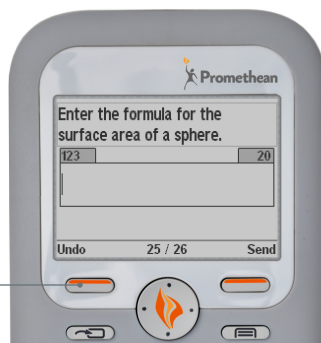

AUTO REPEAT

Alphanumeric keys *do not* auto repeat when you press and hold them.

All other edit keys do auto repeat when held, for example, the **Cursor**, **Delete**, and **Enter** keys.

NUMERIC ENTRY

In numeric entry mode, you can only enter numbers and the following characters:

 
- + (plus)
- - (minus)
- , (comma)
- . (full stop)

Equation Editor

The **Equation Editor** is only enabled when you have to enter an equation. When the device is in equation entry mode all answer content is centred.

Entering equations is a two-stage process. First you create visible equation placeholders with the **Fraction**, **Subscript** or **Superscript Keys**. Once you have created the placeholders, you can enter their parameters.

For example, when you create a fraction, two rectangular placeholders are drawn above and below the dividing line. When you edit a fraction, an outline is displayed around the dividend or divisor, and you use the **Cursor Control Key** to navigate between the two.

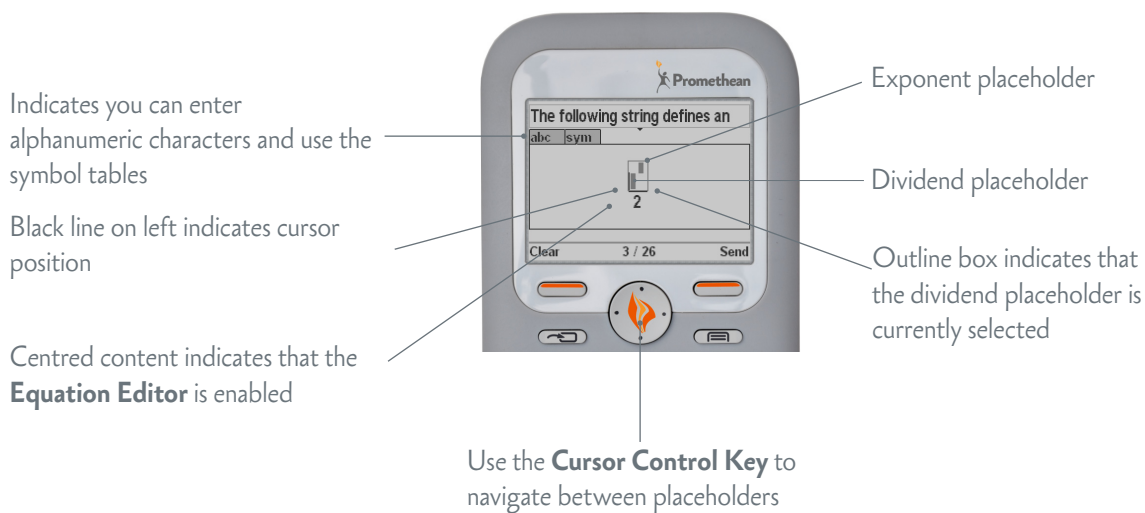

Other equation functions include square root, nth root, integral, sum and product. Most of these can only be accessed from the main symbol table.

If an equation grows beyond the limits of the screen, all further additions to the equation are blocked until you have deleted enough objects to allow the equation to fit in the available space.

When you want to delete one or more objects from an equation, you must first delete all of the objects' parameters. Once an object has no parameters, and you have reduced it to a set of placeholders, then the next time you press **Delete**, the object is removed.

There are two ways to answer questions that require a single response (Yes/No, True/False, Likert and single-response multiple choice questions).

METHOD 1

1. Press the 1-6/A-F keys which are mapped to the response options. For example, press the 1/A key to select the first option, the 2/B key to select the second option and so on.
2. Press the **Send Hotkey**.

METHOD 2

1. Use the **Cursor Control Key** to navigate to the desired response option.
2. Press the **Send Hotkey**.

Multiple choice questions

There are also two ways to answer multiple choice questions that require more than one response.

METHOD 1


Similar to single response questions, you can use the 1-6/A-F keys which are mapped to the response options as described above.

1. Press the 1-6/A-F keys which are mapped to the response options. For example, press the 1/A key to select the first option, the 2/B key to select the second option and so on.
2. When a sufficient number of items have been selected, and you are ready to send your answer, press the **Send Hotkey**.

METHOD 2

Similar to single response questions, you:

 1. Use the **Cursor Control Key** to navigate to the desired response option.
2. Press the **Select Hotkey** to select an item, and the **Deselect Hotkey** to deselect a previously selected item.

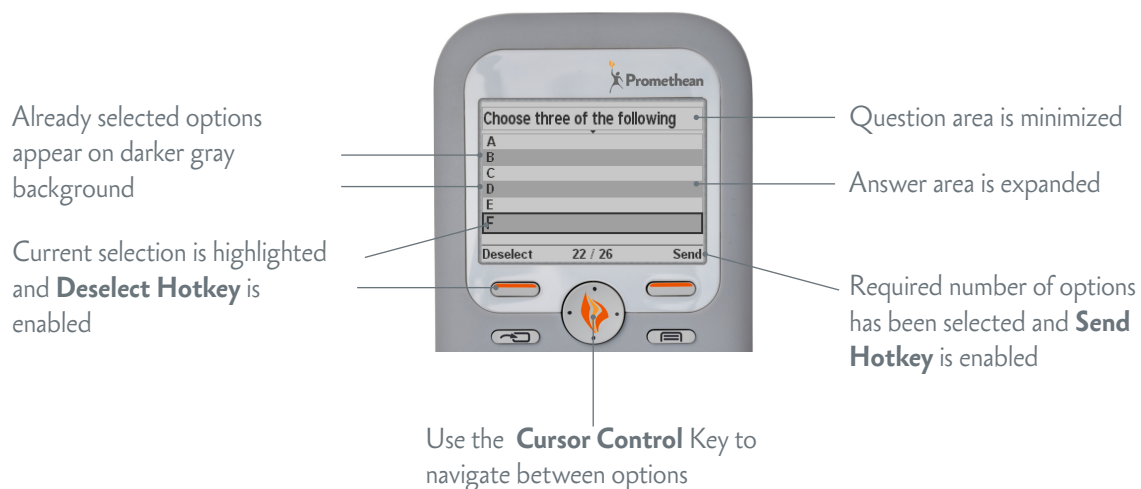

- When a sufficient number of items have been selected, and you are ready to send your answer, press the **Send Hotkey**.

Sort into order questions


For this type of question, the **Send Hotkey** is always enabled, because you can send the list in its current order at any time.

There two ways to answer this type of question.

METHOD 1

Similar to single and multiple response questions, the 1-6/A-F keys, are mapped to the response options.

 When you press a key, the order of response items changes, so that the newly selected item appears in the order of the key press. For example, consider a question with six response items which you need to sort into the correct order.

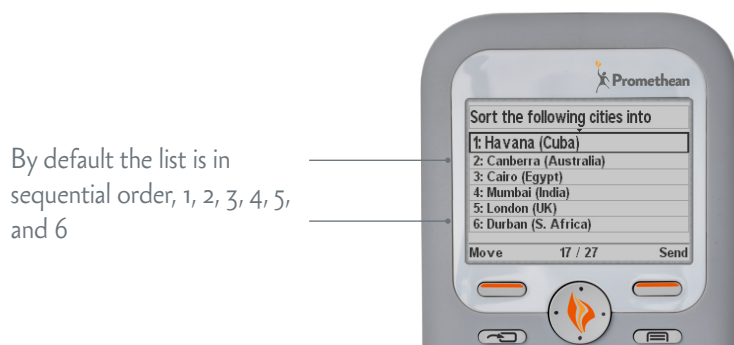

ActivExpression 2

When you press a key, the order of response items changes, so that the newly selected item appears in the order of the key press. For example, consider a question with six response items which you need to sort into order.

To promote item 4 to position 1 in the list, press 4.

Item 4 has been promoted to position 1



Remaining items have been demoted by one place

Next press 3. This results in a list order of 4, 3, 1, 2, 5, and 6.

Item 3 has been promoted to position 2



Remaining items have been demoted by one place

Once all required selections have been made, press the **Send Hotkey**.

When you enter items in this way, the list indicates the position of the next selection by outlining the relevant item.

For example, if the fifth item is highlighted then the next selection will be inserted into fifth position.

METHOD 2

You can also use the **Cursor Control Key**, with the **Move** and **Place Hotkeys** to navigate to a response option, pick it up, move it and place it in the correct position.

1. Press the **Move Hotkey** to select the currently highlighted option



Currently highlighted option

3. Press the **Place Hotkey** to drop the selected item into its new position



New position

2. Use the **Cursor Control Key** to move the selected item to its new position

Once all required selections have been made, press the **Send Hotkey**.

SWITCHING FROM ONE METHOD TO THE OTHER

If you change from the first input method to the second the answer count is reset to start again at 1.

For example, if you are half way through reordering your list using the 1-6/A-F keys, then press the **Move Hotkey** or the **Cursor Control Key**. The next time you press 1-6/A-F the selected item is inserted into the first position on the list.

1. **Power On** the device
2. Press **Menu**
3. Use the **Cursor Control Key** to scroll to **Setup**
4. Press the **Select Hotkey**
5. Press the **Select Hotkey**
6. Use the **Cursor Control Key** to scroll to your chosen language
7. Press the **Select Hotkey**

8. Press the **Exit Hotkey** twice to return to the default screen



Upgrade the device firmware

Firmware is a small, permanent program on Promethean devices that controls basic functionality.

Although all devices are ready to use when you take them out of the box, we strongly recommend that you check if a firmware upgrade is available. To get the most out of your devices, check periodically for firmware upgrades on the Promethean Knowledgebase.

For instructions on how to check which firmware version you are using, and how to upgrade, go to www.PrometheanKB.com and search for '10720'.

Change the device batteries

Use the security screwdriver included in the kit to unscrew the back of the ActivExpression2 device. Slide the back panel upwards and off the device. Device batteries must be replaced only with alkaline batteries.

Caution: Risk of explosion if batteries are replaced by an incorrect type. Rechargeable batteries are *not recommended* for use with ActivExpression2 devices.

Dispose of used batteries according to the instructions

Please dispose of device batteries responsibly by recycling them. Recycle or dispose of batteries in accordance with the battery manufacturer's instructions and any local or regional regulations for disposal and recycling. If in doubt, please contact your Promethean reseller.

ACTIVPROGRESS

ActivProgress is an integrated web-based data management and social learning solution, combining real-time assessment and reporting. This makes it the ideal assessment solution to develop a 21st Century educational environment.

To find out more about Promethean's ActivProgress or to learn about what ActivProgress can offer you, visit <http://www.PrometheanWorld.com/ActivProgress>.

ACTIVENGAGE CLIENT AND SERVER EDITIONS

ActivEngage is a software-based Learner Response System that you can use side-by-side with ActivExpression2 devices.

For more information about the ActivEngage Client and Server Editions that are available for different operating systems and devices, go to <http://www.PrometheanWorld.com>, select your language and then browse to the ActivEngage page.

ACTIVINSPIRE

If you are new to ActivInspire or want to quickly refresh your memory, read [Get Started with ActivInspire](#).

For more detailed information about ActivInspire, and how to prepare questions and run voting sessions with ActivInspire, see the [ActivInspire WebHelp](#) that is provided with the software.

PROMETHEAN ACTIVOFFICE

If you are new to Promethean ActivOffice or want to quickly refresh your memory, read the [Promethean ActivOffice Quick Start Guide](#).

For more detailed information about Promethean ActivOffice, and how to prepare questions and run voting sessions with Promethean ActivOffice, see the [Promethean ActivOffice Webhelp](#) that is provided with the software.

ACTIVLEARNING

To take advantage of our FREE online training courses, go to:
<http://learning.PrometheanPlanet.com>

TECHNICAL SUPPORT

For online support, self-help solutions and further support contact information, please visit the Promethean Knowledgebase at: www.PrometheanKB.com

PROMETHEAN PLANET

Promethean Planet is the fastest growing online community for interactive whiteboard users.

- Download over 40,000 FREE lesson resources.
- Download the latest ActivInspire or Promethean ActivOffice software.
- View ActivTips, Teacher Features and access ActivLearning training materials.
- Connect with over 1 million teachers worldwide and share your ideas and advice.
- Find out about the latest research into teaching and learning from educational experts around the world.
- Access hundreds of publisher created resources in the Planet Store from Publishers such as National Geographic, Dorling Kindersley and Scholastic.
- Join now for FREE! www.PrometheanPlanet.com

Compliance Statements

COMPLIANCE STATEMENTS FOR ACTIVEXPRESSION2 AND ACTIVHUB

United States of America

These devices comply with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. These devices may not cause harmful interference.
2. These devices must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this equipment not expressly approved by Promethean may void the user's authority to operate this equipment.

For non-intentional radio parts, this equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Canada

These devices comply with RSS-210 of Industry Canada and are subject to the following two conditions:

1. These devices may not cause harmful interference.
2. These devices must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this equipment not expressly approved by Promethean may void the user's authority to operate this equipment. This Class B digital apparatus complies with Canadian ICES-003.

Singapore

Complies with
IDA Standards
DA103548



205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com

Europe

Declaration of Conformity

Promethean hereby declare that the devices are in compliance with the essential requirements of the RTTE directive 1999/5/EC. Please contact Promethean for a copy of the Declaration of Conformity if required.

Radio Interface

The radio interface on these products is intended for use with other Promethean radio devices for operation in the following countries: Austria, Belgium, Bulgaria, Cyprus, Czech Republic, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Iceland, Indonesia, Ireland, Italy, Latvia, Lithuania, Luxembourg, Malta, Netherlands, Norway, Poland, Portugal, Romania, Slovak Republic, Slovenia, Spain, Sweden, Switzerland, United Kingdom

Waste Electrical and Electronic Equipment (WEEE)

For more information concerning the correct disposal of these products, please contact your Promethean reseller.

