

# BAR CODE SCANNER

PROGRAMMING BAR CODE SCANNER - LS SYMBOL /  
MOTOROLA

USER MANUAL

ITKU-94-01-11-16-EN



**RADWAG** RADWAG BALANCES AND SCALES  
ADVANCED WEIGHING TECHNOLOGIES

## Table of contents

<b>1. Setting the Prefix and Suffix according to standard RADWAG .....</b>	<b>3</b>
1.1. Setting the Prefix - Hex: 01 .....	3
1.2. Setting the Suffix - Hex: 0d .....	4
<b>2. Activation / Enable Prefix and Suffix .....</b>	<b>5</b>
<b>3. Deactivation / Disable Prefix and Suffix .....</b>	<b>5</b>
<b>4. Setting HID keyboard USB standard .....</b>	<b>6</b>
<b>5. Setting USB/RS323 Emulation (Windows 32bit).....</b>	<b>6</b>
<b>6. Setting USB/RS323 Emulation (Windows 64bit).....</b>	<b>6</b>
<b>7. Setting the RS232 interface .....</b>	<b>6</b>

# 1. Setting the Prefix and Suffix according to standard RADWAG

## 1.1. Setting the Prefix - Hex: 01



Scan Prefix  
(07h)



1



0



0



1

## 1.2. Setting the Suffix - Hex: 0d



Scan Suffix 1  
(06h)



1



0



1



3

## 2. Activation / Enable Prefix and Suffix



**Scan Options**



**<PREFIX> <DATA> <SUFFIX>**



**Enter**

## 3. Deactivation / Disable Prefix and Suffix



**Scan Options**



**\*Data As Is**



**Enter**

#### 4. Setting HID keyboard USB standard



**\*HID Keyboard Emulation**

#### 5. Setting USB/RS323 Emulation (Windows 32bit)



**Simple COM Port Emulation**

#### 6. Setting USB/RS323 Emulation (Windows 64bit)



**USB CDC Host**

#### 7. Setting the RS232 interface



**\*Indicates Default**      **\*Baud Rate 9600**      **Feature/Option**



**RADWAG BALANCES AND SCALES**  
ADVANCED WEIGHING TECHNOLOGIES

