

Be sure to read and understand all instructions before installation. For best results have installation completed by a qualified technician.

# CAUTION:

To reduce the risk of fire or electric shock: Use only insulated staples or plastic ties to secure cords Not intended for recessed ceiling installation or soffits Cords should be visible and examined regularly

205 Westwood Ave, Long Branch, NJ 07740 Phone: 866-94 BOARDS (26273) / (732)-222-1511 Fax: (732)-222-7088 | E-mail: sales@touchboards.com

## Installation instructions:

For best results, have lighting professionally installed by a qualified licensed Electrician Disconnect the mains supply before installing. Do not turn on/off from output port.

Power Source must conform to the requirements of the fixture, all NEC and local electrical codes.

### WARNING:

Fixtures are for use in DRY locations only.

DO not install over a heat source.

DO not install directly over water


Mount a minimum of 12 inches from any object located under fixtures and 1/2" space around fixture

Do not exceed the maximum wattage by connecting more lights than prescribed, or damage may result.

Do not cut or splice wiring or the lighting system may be damaged and manufacturer's warranty is voided.

The power cord has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified technician. Never use an extension cord unless the plug can be fully inserted. Do not alter the plug. Not for use with dimming system or controls.

Mounting Screw

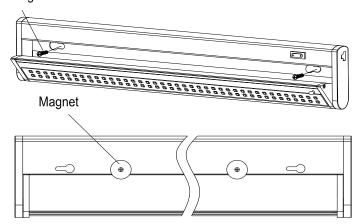

# **Screw Hole Mounting Instructions**

- 1. Disconnect power before installing or servicing fixture.
- 2. To reduce the possibility of injury, mount the fixture on a surface that is structurally sound.
- 3. Mark screw locations.
- 4. Drill pilot holes. Insert mounting screws in each hole and tighten.
- 5. Loosen each screw 1 turn for fixture mounting.
- 6. Rotate adjustable lamp-housing exposing the two mounting holes on frame.
- 7. Lift fixture into place over screws, slide fixture so screw heads are in the keyholes.
- 8. Insert "IN" plug of 9 power cord into the "IN" plug of the fixture. Plug into desired polarized outlet.



NOTICE for Magnetic version: The light is installed in top & level of furniture other degree is not allowed



# **Adding fixtures**

Multiple fixtures can be linked together for continuous runs with linking cable. Do not connect more than 100W per run / 12 fixtures in total

Do not connect more than 100W per run / 12 hxtures in total

Canada: 1800 361-6000 États-Unis: 1800 619-5446 (US) 1800 619-5446 www.richelieu.com