

Access Adapters

90° Style Adapters

Solid brass fitting is ideal for tight spots or locations where making connections is difficult.

10469A – 1/4" MFL x 3/16" FFL.

40563A – 1/4" MFL x 1/4" FFL.



40563A

Straight Style Adapters

Straight adapter is versatile and easy to use. Made of solid brass.

10468A – 1/4" MFL x 3/16" FFL.

40560A – 1/4" MFL x 1/4" FFL.



10468A

Flexible Adapters

Flexible adapters feature brass fittings and a durable neoprene-coated hose, 6" long.

10293 – 1/4" MFL x 1/8" FFL, blue.

10470A – 1/4" MFL x 3/16" FFL, red.

10778 – 1/4" MFL x 1/4" FFL, yellow.



Hose Adapters

These six inch adapters connect to any 1/4" FFL charging hose for convenient in-line control of refrigerant flow.

18501 – 1/4" MFL x 1/4" FFL, Blue.

18512 – 1/4" MFL x 1/4" FFL, Red.

18513 – 1/4" MFL x 1/4" FFL, Yellow.

18514 – 1/4" MFL x 1/4" FFL, Blue, Red and Yellow (set of 3).

18511 – 1/4" MFL x 3/16" FFL, Red.

Quick Seal™ Adapters

Quick Seal fittings automatically shut off the charging hose when you disconnect it from the system, so any refrigerant left in the hose is not released. Made of solid brass.

10292 – 1/4" MFL to 1/4" FFL.

10296 – 1/4" MFL to 3/16" FFL.

10250 – 1/4" MFL to 1/4" FFL, 90°.



10292

Quick Seal Repair Kits

18451 – 45° 1/4" Quick Seal™ kit.

40302 – 1/2" Acme Quick Seal™ kit.

18180 – 1/4" Quick Seal™ o-rings.



18451

Brass Caps

40572 – 1/4" solid brass Quick Seal™ caps have knurled ridges for easy gripping. pkg/6.



40572

Refrigerant Side Can Tap

10102 – Hinged design means no inserts to lose. R-12 and R-134a port fittings with Shrader valves.



FFL Coupling

40410 – 1/4 MFL with core x 1/4 FFL with copper gasket, pkg/6.



Quick Couplers with Depressors

40553 – 1/8 FPT x 1/4 FFL, ea.



General Purpose Valves

Straight Type

40464 – Straight Type
1/4 MFL x 1/4 MFL.



40464

13144 – Straight Type
1/4 MFL x 1/4 FPT.
Quick Coupler
Style Valve



40380

40380 – Quick Coupler
Style Valve 1/4 FFL Coupler x 1/4 MFL.

Tube Piercing Valves

Piercing Valves with Flow Control and 1/4 S.A.E. Connector Size.

40288 – Fits 3/16, 1/4, 5/16, 3/8 OD.

13139 – Fits 1/2, 9/16, 5/8 OD.

40291 – Gaskets for 40288/40330, pkg/3.



40228

Piercing Valves with Valve Cores

40330 – Fits 3/16, 1/4, 5/6, 3/8 OD.

40336 – Fits 1/2, 5/8 OD.



40330

40472

Straight Line Top Valves

Fits 1/4, 5/16, 3/8 OD.



General Purpose Fittings Tees/Fittings

40384 – 1/4 MFL Branch with core x 3/8 OD tube or 1/2 OD solder, pkg/3. Comes with 40535 Valve Core Remover.

40386 – 1/4 MFL run x 1/4 FFL run with depressor x 1/4 MFL Branch with core, pkg/3.

40396 – 1/4 MFL Branch with core 1/4 MFL run x 1/4 FFL swivel run, pkg/3.

40398 – 1/4 FFL Swivel Branch with depressor x 1/4 MFL run with core x 1/4 MFL run, pkg/3.



40386



40396



40398

Pump Intake Fittings

R-12/R-134a Dual Inlet Fittings Convert your pump to R-12 and R-134a. Solid brass tees replace inlet fittings on pump; includes a branch with a 1/4" MFL fitting for R-12 (and other refrigerants).



13110



13066



15195



15495

15555

Pump Intake Fitting Adapters:

13110 – Adapter, 3/8" FFL to 1/4" MFL.

13066 – Adapter, 1/2" FFL to 3/8" MFL.

15555 – Screw-on inlet adapter converts any pump, 1/4" FFL coupler x 1/4" MFL x 1/2" Acme.

15195 – 1/4" MFL/1/2" Acme combination inlet fitting for 15200 series vacuum pumps.

15495 – 1/4" MFL/1/2" Acme combination inlet fitting for 15400/15600 series vacuum pump.

1/4" Valve Core Remover/Installer

13145 – Valve core remover/installer with 6 valve cores.




Valve Core Remover/Installer

18560 – Remove and install valve cores from a 1/4" male flare access fitting without the loss of refrigerant. Durable, solid brass tool has a ball valve that can be opened or closed in just a quarter-turn. Stainless steel ball and brazed side fitting for durability and long life.



Valve Core Remover/Installer

18561 – Replace leaking valve cores quickly and easily, or remove the valve core and hold it out of place for evacuation or charging. The 18561 features a solid brass body with convenient handle that opens and closes in a quarter-turn to speed service.

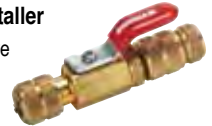

Vacuum

Valve Assembly

Valve assemblies give the service technician maximum control during evacuation and recharging. Installed directly to the vacuum pump, they connect the pump, manifold and thermistor gauge, providing one central control. Saves time – no need to connect/disconnect hoses. Made of durable forged brass for long life.



13047A – 1/2" FFL Coupler x 1/4" MFL x 3/8" MFL, Large internal porting for high CFM-flow.



40421

40427

40422

Access Fittings Solder Union Type

40416 – 1/4 MFL x 1/8 OD Copper Tube Ext., pkg/6.

40417 – 1/4 MFL x 3/16 OD Copper Tube Ext., pkg/6.

13142 – 1/4 MFL x 1/4 OD Copper Tube Ext., pkg/6.

40419 – 1/4 MFL x 5/16 OD Copper Tube Ext., pkg/3*.

40420 – 1/4 MFL x 3/8 OD Copper Tube Ext., pkg/3*.

13143 – 1/4 MFL x 1/4 OD or 3/8 ID Solder with cap and chain*.

40427 – 1/4 MFL x 1/4 OD or 3/8 ID Solder, pkg/6*.

* Comes with 40535 Valve Core Remover.

Elbow Access Fitting

40422 – 1/4 MFL with core x 1/8 MPT Elbow, pkg/6.



14774

14773

Pick Extractor and Thread Chaser

14774 – For use with No. 18560 or 18561, valve core remover/ installer, lets you remove damaged cores in the service line while the system is fully charged. No release of refrigerant into the atmosphere.

14773 – For use with No. 18560 or 18561, valve core remover/ installer. This item actually repairs damaged threads on valve cores in the service line, without releasing refrigerant into the atmosphere.