

INSTALLATION INSTRUCTIONS


SLB-034 and SLM-034 Interface Brackets

SLB and SLM series Interface brackets are designed for use with Chief RPA, RPM, and Smart-Lift series projector mounts. See the specific installation instructions provided with the mount for additional installation information.

Unpack carton and verify kit contents. If any listed parts are missing, immediately contact a Chief Customer Service representative by calling 1-800-582-6480.

⚠ WARNING: IMPROPER INSTALLATION CAN LEAD TO EQUIPMENT FALLING CAUSING SERIOUS PERSONAL INJURY AND DAMAGE TO EQUIPMENT! DO NOT substitute hardware. Use only hardware supplied by manufacturer!

- | | |
|-------------------------------------------|-------------------------------------------------------|
| (1) Interface Bracket | (3) Screw, Philips Flat Head, Machine, M4 x 16mm **** |
| (4) 10-24 Thumb Nuts ** | (3) 1/2" x .218" x 1/4" Round Spacer **** |
| (1) All-Points Security Kit | (1) Screw, Philips Flat Head, Machine, M4 x 12mm **** |
| (2) 1/2" x .316" x 1/2" Round Spacer **** | (1) .320" x .500" x .250" Nylon Spacer **** |

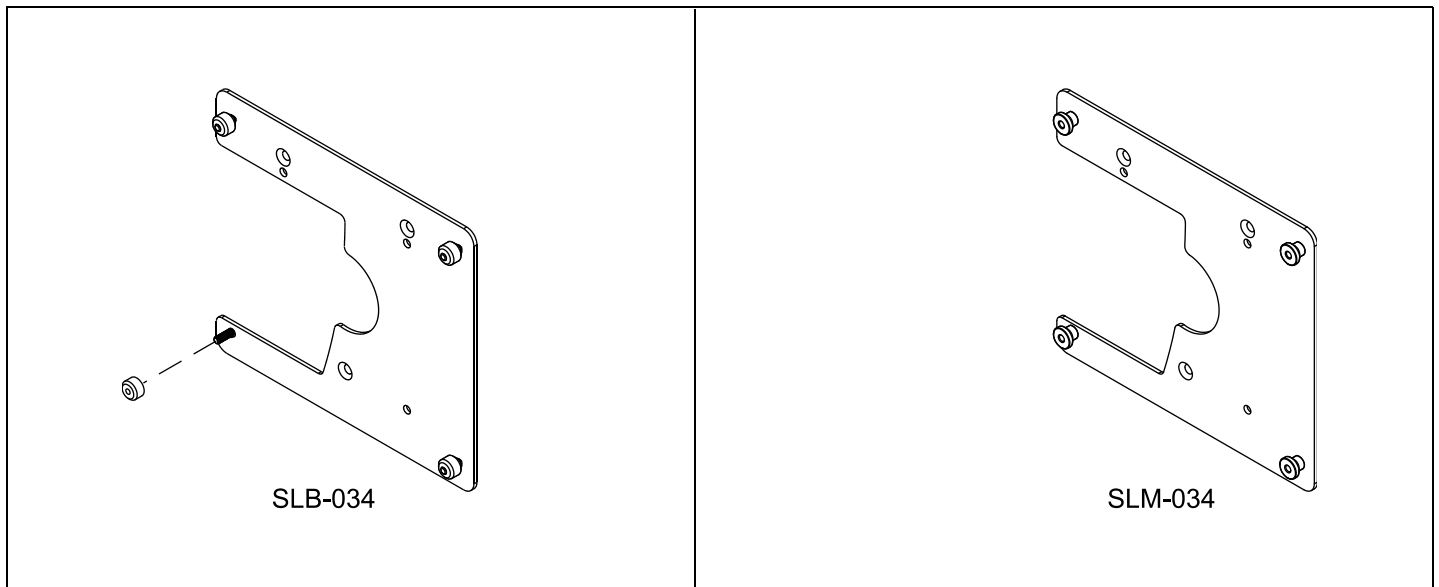

**Only used when installing SLB Interface brackets.

****Used when mounting surface of projector is recessed.

Installation:

⚠ WARNING: OVERTIGHTENING OF SCREWS CAN DAMAGE PARTS AND LEAD TO SERIOUS PERSONAL INJURY AND DAMAGE TO EQUIPMENT! DO NOT over tighten screws when installing Interface bracket.

NOTE: Step 1 is only required when installing an SLB Interface bracket. If an SLM bracket is being installed proceed to step 2.

1. Screw four thumb screws onto four 10-24 x 5/8" Philips pan head screws. DO NOT fully tighten thumb screws at this time.
2. Turn projector upside down.
3. Place three, 1/4" spacers over three threaded inserts in bottom of projector.
4. Place Interface bracket onto projector, aligning spacers and mounting holes.

Touchboards
205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com

Continued...

CSAV, Inc., and its affiliated corporations and subsidiaries (collectively, "CSAV"), intend to make this manual accurate and complete. However, CSAV makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. CSAV makes no representation of warranty, expressed or implied, regarding the information contained herein. CSAV assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

INSTALLATION INSTRUCTIONS

Continued

5. Secure Interface bracket to projector, using three Philips flat head screw and flat washers.

Version #2 install with off set bottom:

1. Screw four thumb screws onto four 10-24 x 5/8" Philips pan head screws. DO NOT fully tighten thumb screws at this time.
2. Turn projector upside down.
3. Place 1/4" spacer over front threaded insert and two, 1/2" spacers over two rear threaded inserts in bottom of projector.
4. Place Interface bracket onto projector, aligning mounting holes and spacers.
5. Secure Interface bracket to projector using, M4 x 12mm Philips flat head screw in front and two M4 x 16mm Philips flat head screws in rear of projector.

NOTE: Security screws can be substituted when mounting Interface bracket to projector by using the parts and installation instructions in the All-Points Security Kit.