

**LCD Monitor Management Software** 

## e-Signage S

# OPERATION MANUAL PN-SS21

## Contents

ntroduction	
Points to note before using e-Signage S	6
Trademarks	6
How to read this manual	7
■ Notation	7
Definitions	8
Workflow through display of distribution data	
■ Distribution using SDSS Launcher	10
System operation precautions	
Points to note when creating content and programs	
■ e-Signage S Player A1 limitations	13
Installation	14
System requirements	14
Installing e-Signage S	16
■ Settings after installation	
■ Configuring player device settings	17
Uninstalling e-Signage S	22
Server Settings	23
WEB Server Settings (Initial Setup Wizard)	23
WEB Server Settings	26
■ Setting the automatic logout time	
■ Distribution Scheduler	27
Logging in	
Logging In	29
Logging in to WEB Server	29
Description of the screen	30
■ Toolbar	
■ Dashboard	30

## Content

Content Folder Management	32
Main window	32
Managing content folder groups  ■ Content folder group management area  ■ Creating a content folder group	33
Managing content folders  ■ Content folder management area	
Creating content folders	36
Basic flow for creating a content folder	36
Creating a content folder	36
Editing a content file in a content folder  ■ Edit Content File window  ■ Files that can be saved in content folders	38
Uploading content files ■ Uploading files to the "Media" folder	
Creating a scroll message  ■ Uploading files to the "Scroll Message" folder or "Audio" folder	
Downloading content files	49
Playback Condition Setting	50
Setting playback conditions	
Program	
Program Management	53
Main window	53
Managing program groups  ■ Program group management area ■ Creating a Program Group	54
Managing programs  ■ Program Management area	



Creating a Program	57
Main window	57
Creating programs	58
■ Setting the layout	
■ Assigning content folders	60
■ Setting the PIP frame	
Setting the position of the screen	
■ Setting the screen size	02
Schedule	
Schedule Management	64
Main window	64
Managing schedule groups	65
■ Schedule group management area	65
■ Creating schedule groups	66
Managing schedules	67
■ Schedule management area	67
Creating Schedules	68
Main window	68
■ Schedule creation area	69
Creating a schedule	70
■ Adjusting an assigned content folder, program, or panel control command	
■ Saving a timetable for synchronization	
■ Synchronize Timetable ■ Panel control commands	
Distribution	
Distribution	74
Main window	74
■ Distribution data selection area	74
■ Panel area	75
Distributing / Scheduling distribution	78
Distribution Status	80
USB Memory / SD Card Distribution	81

System Log	
Viewing the System Log	83
Main window	83
Viewing a system log  ■ Outputting a system log (TXT format / CSV format)	
Player	
Receiving Schedules and Displaying Programs	87
Client Scheduler	
■ Launching Client Scheduler  ■ Client Scheduler menu	
Program Viewer	95
e-Signage S Player A1 settings  ■ e-Signage S Player A1 settings window	
Key/Mouse Linkup	98
Key/Mouse Linkup Tool window  ■ Launching Key/Mouse Linkup Tool  ■ Key/Mouse Linkup Tool menu	98
SDSS	
SDSS Launcher	103
Appendix	
License information for this product	105
Software components	105

## Introduction

Thank you for purchasing LCD Monitor Management Software (e-Signage S).

## Points to note before using e-Signage S

- This product has undergone exacting quality control processes prior to shipment. In the unlikely event that a failure or malfunction occurs, contact your retailer.
- Please understand that SHARP CORPORATION bears no responsibility for errors made during use by the
  customer or a third party, nor for any other malfunctions or damage to this product arising during use, except
  where indemnity liability is recognized under law.
- Under copyright law, the use of this product to duplicate, edit or otherwise alter copyrighted material is only
  permitted in cases where such duplicated or edited material is for individual or home use.
   If material is duplicated and/or edited beyond this scope, and if such duplicated or edited material is used
  (except in cases where the user themselves holds the copyright for the object of the duplicated material or
  where the user has received permission from the copyright holder), this will constitute a violation of copyright
  law and may lead to the copyright holder or other parties claiming compensation for damages. Such use
  should therefore be strictly avoided.
  - When using photo image data, DVD images, TV broadcasts or similar material with this product, the above uses that constitute copyright violation must be strictly avoided. Using, modifying, or otherwise altering images of other people without permission constitutes a violation of portrait rights, and must also be strictly avoided.
- To show TV, DVDs, or similar copyrighted programs and/or material, you must obtain the permission of the copyright holder or copyright holders.
- Transcribing or duplicating part or all of this manual and/or this software without permission from our company is not permitted.
- As a part of our policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice.

## **Trademarks**

- Microsoft, Microsoft Edge, Windows, Windows Media, Windows Server, PowerPoint, and Internet Explorer
  are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other
  countries.
- Adobe and Flash are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- · Google, Android, and Google Chrome are trademarks of Google LLC.

Names of products and other proper nouns are the registered trademarks or trademarks of their respective copyright holders.

## How to read this manual

## ■ Notation

· Keyboard keys are indicated with square brackets.

Example: [Shift], [Ctrl]

· Menus, windows, dialog boxes, buttons, and tabs are indicated with square brackets.

Example: 4 Click [Save changes].

Return to the [Power Options] dialog box.

• Items, checkboxes, and option buttons are indicated with quotation marks.

Example: "Coordinate-X", "Preset Screen Size" option button

· This manual assumes that e-Signage S has been installed in the following folder.

If you have installed the software in a different folder, substitute the other folder as necessary.

C:\Program Files (x86)\SHARP\e-Signage (default)

• The screens and procedures in this manual are examples.

These may vary depending on your monitor, screen settings, operating system, browser, and browser version.

The content files and fonts in this manual are examples. Not all of these are included with the software.

This manual does not contain instructions for basic use of Windows or Android.


## **Definitions**

This chart provides definitions of terms used in this manual.

Term	Definition	
Management PC	This is used to set the overall screen layout and order of playback of content, and to create and distribute playback schedules.	
Player device	This is a device that plays content according to the distributed schedule.	
Server software	Software that is installed on the management PC.	
Player software	Software that is installed on a player device.	
Content (files)	Files such as videos, still images, and audio that are played. These are usually prepared by the user.	
Content folders	Folders that contain content files. Panels, programs, and schedules can be assigned.	
Playlist	A list of content files to be played.	
Frame	The screen can be divided into multiple sub-screens, each of which is called a frame.	
Program	Programs consists of a frame layout and the content folder information assigned to each frame.	
Timetable	This assigns content folders and programs to the time period each is to be played during one day.	
Schedule	This assigns content folders and programs to the date each is to be played.	
Panel	Display (LCD monitor on which content data is displayed)	
Scroll message	A message that scrolls on the screen. Up to two scrolling messages can be displayed with this software.	
Attached files	A collective term for image and other files that are required when displaying files such as HTML files.	
Assigning	Specifying which files (schedules, etc.) are to be distributed to each panel.	
Distribution	Sending content data created on a management PC to player devices. In the SHARP e-Signage S Standalone Edition, the management PC and the player device are same.	
Distribution data	Content data that is distributed to player devices.	
Tenant	This is a group by which users, panels, schedules, and programs are managed.	

## Workflow through display of distribution data

This chart indicates the workflow from selection of content to be displayed through display of the content on player devices.

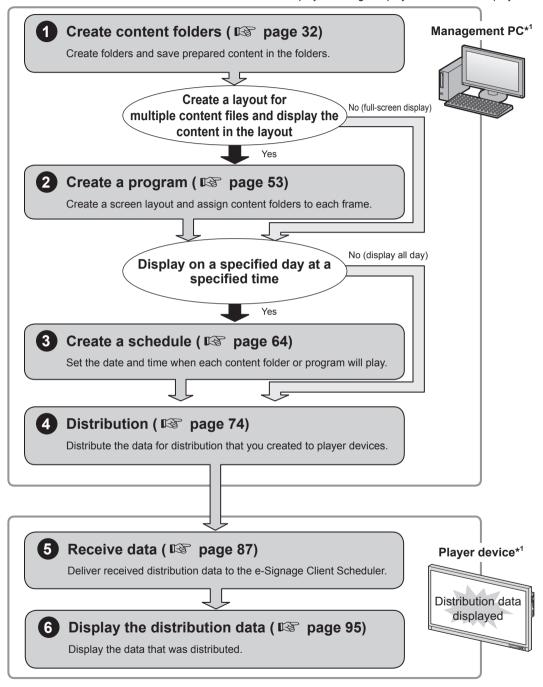


**TIPS** 

Client Scheduler manages program viewers so that received distribution data are played at the scheduled time.

<sup>\*1</sup> In the SHARP e-Signage S Standalone Edition, the management PC and the player device are same.

## ■ Distribution using SDSS Launcher

The sequence of steps from program creation to display of programs on a panel is indicated below. For information on SDSS Launcher, see page 103.

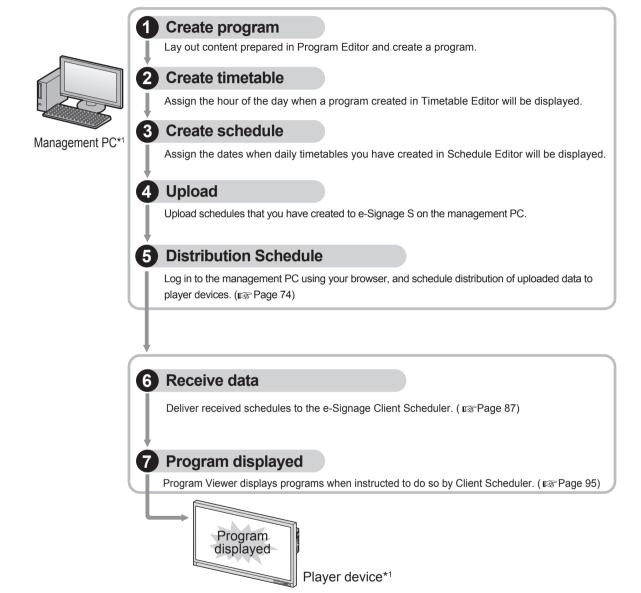

#### **TIPS**

Client Scheduler manages program viewers so that received schedules are played at the scheduled time.

<sup>\*1</sup> In the SHARP e-Signage S Standalone Edition, the management PC and the player device are same.

## System operation precautions

## Points to note when creating content and programs

Before operating the system, run a test using the actual content to be displayed on the panel. If the computer does not have sufficient processing power, content may not be play correctly.

### Playing videos

Playing multiple videos simultaneously is not recommended.

Windows Media Player generally places a heavier load on the CPU than Flash Player (although this depends on the content).

#### **TIPS**

• For some content, it may be necessary to install a codec or player software. For codecs and software that are not indicated as being operable on the installed operating system, test operation prior to introduction.

#### · Flash content

Take care when playing content that makes frequent use of image transparency processing (image fade-in/fade-out), as this may place an extremely heavy load on the CPU.

### · Enlarging/reducing still images and video

As image size and display size increase, so does the load placed on the CPU. CPU load also increases when images are displayed at an enlarged or reduced size. Keep the size of the content display area (frame size) as small as possible. Content should be created using the same image size as the display size.

### Still image slideshow

Using slideshow for still images will increase the load on the CPU. Effects depend on the performance of the video card.

### Scroll messages content

Displaying scroll messages requires significant CPU processing power. When using scroll messages, programs should be tested by actually displaying them before operation.

- Making the background color transparent will increase the load.
- Scroll messages with a larger display area place a larger load on the computer. Do not make the scroll message display area unnecessarily large.
- If there are many characters in a scroll message line, the display may become distorted. In this event, start a new line. (Up to 100 characters per line is recommended.)

### PowerPoint

To display PowerPoint content, e-Signage S requires PowerPoint Viewer. Even if Microsoft PowerPoint is installed on your computer, PowerPoint Viewer must be installed separately. If the 64-bit version of Office is installed on your computer, you will not be able to install PowerPoint Viewer.

Set the PowerPoint file to play repeatedly, and use automatic slideshow.

PowerPoint Viewer is not able to display multiple files at the same time. Do not assign PowerPoint files to multiple frames in the same program.

When PowerPoint content is displayed, you cannot use a mouse or other tool to click other display frames. It takes time for PowerPoint Viewer 2010 to start playback. Time is especially required to start the first playback after the computer is started. Be sure to allow time for startup in the overall playback time. Although it is possible to play files with a .pptx or .ppsx extension using PowerPoint Viewer 2007, it will take time to start playback. It is recommended that files with a .ppt or .pps extension be used for playback on PowerPoint Viewer 2007.

#### Operation in a browser

Do not use the [Back] key of your browser. This may cause the browser to stop operating normally. Do not select the "Prevent this page from creating additional dialogs" checkbox that appears in the browser. Confirmation screens may not appear, and some actions such as deleting may not be possible. If this is inadvertently selected and messages do not appear, restart your browser.

### Continuous operation of player device

Player devices are not designed for continuous 24-hour-a-day operation. Be sure to shut down and restart player devices every day. (Refer to [Power Control] tab on page 90)

## Continuous operation of management PC

The management PC should be operated continuously no more than one week.

## Computer internal clock

The software executes schedules based on the computer's internal clock. You should ensure that your computer's internal clock is always accurate by such means as synchronizing it with an internet time server.

## Accuracy of program display time

Program display is controlled by a timer that starts at 0 seconds every minute. Programs can only be switched on the minute.

Note that there may be a delay before content is actually displayed. This depends on the time taken to launch applications that display content and the time taken to load content files.

#### Backup

e-Signage S does not have a data backup function. Regularly back up the tenant data folder (under C:\ ProgramData\SHARP\e-Signage\GroupData\) according to the data update frequency during operation.

#### Daisy chain configuration

e-Signage S cannot send different panel control commands (panel power ON/OFF and panel input source selection commands) to LCD Monitors (PN Series) connected in a daisy chain.

#### Still images

Displaying a still image in the background or in a frame in the same position for a long time may leave a residual image on the monitor. When creating programs, change still images and layouts at set intervals or take other measures to avoid this problem.

## ■ e-Signage S Player A1 limitations

The following limitations apply to e-Signage S Player A1 (for Android player devices). Note these limitations before using this player.

Function	e-Signage S Player A1 limitations		
Content	File types that cannot be used	The following file types cannot be used on e-Signage S Player A1.  • PowerPoint  • Flash  • Executable file  • Video files in unsupported formats ( page 40)  • Signage widget content file  • Conditional content file	
	Screen size	Maximum 1920 × 1080 or 1080 × 1920	
	Specification of player device path	Cannot be used.	
	Screen division by PIP		
	Still image slideshow (Transition Direction)	Usable slideshow effects are different on e-Signage S Player and e-Signage S Player A1. On e-Signage S Player A1, the following slideshow effects can be used. [Wipe / Expand / Slide / Fade / Round / Perspective / Pulse / Rotate / Transform / Random]	
	Playing videos	You cannot play multiple videos simultaneously.	
Distribution	Storage required for distribution (player device)	(Size of distributed file) x 3 + 200 MB	
	Player device power ON/OFF	Cannot be used.	
Player device settings	Default FTP port number	2121 If changed from the default setting, the port number must be set within the range 1024 to 32000.	
Key/Mouse Lir	nkup Tool	Not supported.	
Client Schedu	ler	Not included. The Client Scheduler functions "View the Log", "Pause to View Program", "Delete Schedule Information", and "Get data from management PC" cannot be used.	

- After mounting or unmounting a USB memory (USB flash drive) or SD memory card, restart e-Signage S
  Player A1 before distributing data. Data distribution may fail if attempted without restarting.
- · Only one USB memory or SD memory card can be used at a time.
- · If you uninstall e-Signage S Player A1 from the player device, all settings and distributed data will be lost.
- e-Signage S recognizes content types by the file extension. Even if a content type is indicated as being
  usable, it may not play correctly due to an unsupported codec or other reason. Verify that video and audio
  files play correctly in advance.
- · Scrolling messages may not scroll smoothly in some instances. Check operation before placing signage in operation.
- The screen may flicker when changing programs or adjusting the clock on a player device.
- · If a large amount of data has been distributed, it may take time to change programs.
- Changing of played data will occur when the time on the player device reaches 12:00 AM. Even if the same data will be played, playback will restart from the beginning of the data at 12:00 AM.

**E** 13

## Installation

This chapter explains the system requirements and procedures for installing e-Signage S. Be sure to read this chapter before using the software.

## System requirements\*1

Name		Nome	SHARP e-Signage S Standalone Edition	
Name		Name	PN-SS21	
	Installed computer		Management PC / Player device	
	CPU		1.6 GHz or higher	
	Operating	Microsoft Windows 7/8.1/10*3	0	
Computer	system *2	Microsoft Windows Server 2008 / 2008 R2 / 2012 / 2012 R2 / 2016	0	
	Memory		2 GB or higher	
Hard disk			500 MB or more of free space (additional space required to save data)	
Monitor		Resolution	1280 × 1024 dots or higher	
(for mana	for management)*4 Number of colors		Full color	
Compatible browsers (operation window)		(operation window)	Microsoft Internet Explorer 11 / Microsoft Edge / Google Chrome	
Panel (for player device) *5		ce) * <sup>5</sup>	LCD Monitor (PN Series)	
()ther settware			Microsoft Internet Explorer / Microsoft PowerPoint Viewer / Microsoft Windows Media Player* <sup>6</sup> / Adobe Flash Player	

## Turn off user account control on the player device. \*7

- \*1 The minimum requirements for the operating system to operate must also be met. Some content may require performance greater than that indicated to play correctly.
- \*2 Applicable versions are the 32-bit version and 64-bit version.
- \*3 Use Windows 10 in desktop mode.
- \*4 The monitor of the computer used to create/edit programs and schedules.
- \*5 The player device can control the panel. To control the panel, the player device and the panel must be connected with an RS-232 cable, or the panel must be connected to the LAN.
  - For the specifications of the panel and procedures for connection and settings, see the panel's operation manual.
- \*6 Some content may require installation of a codec or player software. For codecs and software that are not indicated as being operable on the installed operating system, test operation prior to introduction.
- \*7 How to turn off user account control on the player device.

#### In Windows 7

- (1) Select "User Accounts and Family Safety" in Control Panel.
- (2) Select "User Accounts".
- (3) Select "Change User Account Control settings".
- (4) Move the slider to the bottom.

#### In Windows 8.1/10

#### (Caution)

#### Note that when this setting is selected, the Windows Store application will not run.

After you install e-Signage S Player, you can turn off user account control from Client Scheduler.

- (1) Right-click the e-Signage Client Scheduler icon, and click [Setting] in the pop-up menu to display the [Setting of Client Scheduler] dialog box.
- (2) Click the [UAC Settings] tab and click [Turn off User Account Control].
- (3) A confirmation message will appear. Click [OK].
- (4) The [User Account Control] dialog box will appear. Click [Yes].
- (5) A message indicating that the user account control has been disabled will appear. Click [OK] to restart the computer.

### TIPS

- · Flash Player, Windows Media Player and PowerPoint Viewer must be installed on player device.
- If a message prompting you to install a program appears because the program is not installed or the wrong version is installed, download and install the program from an appropriate website.
- For some content, it may be necessary to install a codec or player software. For codecs and software whose operation has not been demonstrated on the installed operating system, check operation prior to installation.

## Installing e-Signage S

- · You must log in as an administrator to install the software.
  - 1 Start your computer.
  - **2** Exit all applications.
  - 3 Launch the e-Signage S setup program (Setup.exe).
    - Double-click Setup.exe to launch the setup program.
    - If a security warning ("The publisher could not be verified.") appears during the installation, click [Run]. If the [User Account Control] window appears, click "Yes".
  - 4 In the [Welcome to the InstallShield wizard...] window, click [Next].
  - **5** The software license agreement will appear.

Read the entire software license agreement.

- 6 If you agree to the terms of the agreement, select the "I accept the terms of the license agreement" option button, and click [Next].
- 7 Follow the instructions on the screen to complete the installation.
- 8 If a dialog box prompting you to restart appears after installation is finished, click [Yes].

## ■ Settings after installation

Double-click the e-Signage S shortcut icon on the desktop. The server settings window appears. ( 🖾 Page 23)

## ■ Configuring player device settings

Once the installation is complete, change the settings of the player device before using e-Signage S.

## **Auto login settings**

If the player device is to be used without an operator, enable Windows auto login.

1 From the Windows Taskbar, click [Start] - [All Programs] - [Accessories] - [Command Prompt]. In Windows 8.1 or 10, press the [Windows] key and [X] key at the same time, and click [Command Prompt] in the context menu.

The [Command Prompt] window will appear.

- **2** Type in "control userpasswords2" (without the quotation marks) and press the [Enter] key.
- **3** If the [User Account Control] window appears, click [Continue].

The [User Accounts] dialog box will appear.

- 4 Clear the "Users must enter a user name and password to use this computer." checkbox.
- **5** Click [OK].
- 6 In the [Automatically Log On] window, enter the "User Name" and "Password", and click [OK].
- 7 Type in "exit" and press the [Enter] key.

## Screen saver settings

Disable the screen saver so that it does not appear on the panel when distributed content is played.

- In Windows 7 or 8.1
  - 1 Right-click on an empty area of the desktop, and select [Personalize] [Screen Saver] from the menu that appears.

The [Screen Saver Settings] dialog box will appear.

- 2 Select "(None)" from the "Screen saver" list.
- **3** Click [OK].
- In Windows 10
  - 1 Right-click on an empty area of the desktop, and select [Personalize] [Lock screen] [Screen Saver] from the menu that appears.

The [Screen Saver Settings] dialog box will appear.

- 2 Select "(None)" from the "Screen saver" list.
- **3** Click [OK].

#### **Power Management**

Adjust settings so that the panel and hard disk do not turn off or enter system standby while distributed content is playing.

#### • In Windows 7

1 From the Windows taskbar, select [Start] - [Control Panel] - [System and Security] - [Power Options].

The [Power Options] dialog box will appear.

- **2** Click "Show additional plans", select "High performance", and click [Change plan settings].
- 3 Select "Never" from the "Turn off the display" and "Put the computer to sleep" pull-down menus.
- 4 Click [Save changes].

  Return to the [Power Options] dialog box.
- **5** Close the [Power Options] dialog box by clicking the button in the upper right corner of the window.

#### In Windows 8.1

1 Press the [Windows] key and [C] key at the same time, and click [Settings] - [Control Panel] - [System and Security] - [Power Options].

The [Power Options] dialog box will appear.

- **2** Select "High performance" and click [Change plan settings].
- 3 Select "Never" from the "Turn off the display" and "Put the computer to sleep" pull-down menus.
- 4 Click [Save changes].

  Return to the [Power Options] dialog box.
- **5** Close the [Power Options] dialog box by clicking the button in the upper right corner of the window.

#### In Windows 10

Press the [Windows] key and [X] key at the same time, and then select [Control Panel] - [System and Security] - [Power Options] from the context menu.

The [Power Options] dialog box will appear.

- **2** Click "Show additional plans", select "High performance", and click [Change plan settings].
- 3 Select "Never" from the "Turn off the display" and "Put the computer to sleep" pull-down menus.
- 4 Click [Save changes].

Return to the [Power Options] dialog box.

5 Close the [Power Options] dialog box by clicking the X button in the upper right corner of the window.

### IME toolbar settings

Move the IME toolbar into the taskbar so that it does not appear when distributed content is being played.

Right-click on the IME toolbar and click [Minimize] in the menu that appears.

Or click \_\_\_.

EN English (United States) 📾 US 🕐 Help 🗀

## **Notification settings (Windows 10 only)**

Adjust the settings so that notifications from applications are not displayed when distributed content is being played.

1 Press the [Windows] key and [A] key at the same time, and enable "Quiet hours" in ACTION CENTER.

## Windows Update settings

Set Windows Update so that it does not update automatically and display popup messages (dialog boxes, etc.) while distributed content is being played.

#### **TIPS**

If you have disabled automatic updates, be sure to check the Windows Update website (http://windowsupdate. microsoft.com/) regularly and download and install updates manually. Not installing the latest updates is a security risk and may also lead to performance related issues.

- In Windows 7 / 8.1
  - Windows 7: From the Windows Taskbar, click [Start] [Control Panel] [System and Security] [Turn automatic updating on or off].

Windows 8.1: Press the [Windows] key and [C] key at the same time, and click [Settings] - [Control Panel] - [System and Security] - [Turn automatic updating on or off].

The [Change settings] dialog box will appear.

- 2 Select "Never check for updates (not recommended)" from the "Important updates" menu.
- **3** Click [OK].
- 4 If the [User Account Control] window appears, click "Yes".

The [Change settings] dialog box will close.

- In Windows 10
  - 1 Press the [Windows] key and [X] key at the same time, and click [Command Prompt] in the context menu.
  - Type in "gpedit.msc" and press [Enter].
  - **3** If the [User Account Control] window appears, click [Continue].
  - 4 In the tree on the left side of the [Local Group Policy Editor], click [Computer Configuration] [Administrative Templates] [Windows Components] [Windows Update].
  - **5** Double-click [Configure Automatic Updates] on the right side of the [Local Group Policy Editor].

The [Configure Automatic Updates] dialog box will appear.

- **6** Select the "Disabled" option button and click [OK].
- Click the X button in the upper right corner to close the [Local Group Policy Editor] dialog box.
- **8** Type "gpupdate" at the [Command Prompt] and press the [Enter] key.
- **9** Make sure that the messages "User Policy update has completed successfully." and "Computer Policy update has completed successfully." appear, and then click the  $\times$  button in the upper right corner to close the [Command Prompt] dialog box.

## TIPS

In Windows 10 Home Edition, Windows Update cannot be disabled.

#### Resident application settings

Adjust the settings of resident applications so that they do not display popup messages (dialog boxes, etc.) while programs are playing.

## Uninstalling e-Signage S

- Uninstalling the server software will not delete any tenants or users that have been created or data that was uploaded to the server. After you reinstall the server software, you will be able to use the data again.
  - 1 Start your computer.
  - **2** Exit all applications.
  - 3 Launch the e-Signage S setup program (Setup.exe).
    - Double-click Setup.exe to launch the setup program.
    - If a security warning ("The publisher could not be verified.") appears during the installation, click [Run].

If the [User Account Control] window appears, click "Yes".

- 4 Select the "Remove" option button and click [Next].
- 5 Click [Yes].

Uninstallation will start.

### TIPS

If Distribution Scheduler, Client Scheduler, or HTTP Server is already running, a message will appear. In this case, click [Yes]. Distribution Scheduler, Client Scheduler, or HTTP Server will be forcibly terminated and uninstallation will continue.

## 6 Click [Finish].

This completes uninstallation.

## **Server Settings**

After installing e-Signage S, configure the server settings. The settings that must configured depend on the software you installed.

## **WEB Server Settings (Initial Setup Wizard)**

1 Double-click the e-Signage S shortcut icon on Desktop.

Configuration Tool will launch. When launching the tool for the first time, follow the instructions in the setup wizard to configure the WEB server.

From the taskbar, click [Start] - [All Programs] - [SHARP e-Signage S] - [Server Management Tool].

#### TIPS

• After initial setup has been completed, the dashboard screen ( page 30) will appear when you click the e-Signage S shortcut icon.

## 2 Click [Next].



## 3 Create a tenant.

Create a tenant that will be used to manage users, panels and schedule data. Enter a tenant name and tenant ID (up to 30 alphanumeric characters).

#### "Data Folder for Tenant"

This folder contains the user, panel and schedule data. To use a different folder, click [Ref] and specify the folder.

When you have finished entering, click [Next].




## 4 Register an initial user.

Register user information for server login.

Enter a user name, login ID (up to 30 alphanumeric characters) and password (up to 30 alphanumeric characters).

To skip the login screen when starting, select the "Skip the login screen for local operation" checkbox.

When you have finished entering, click [Next].

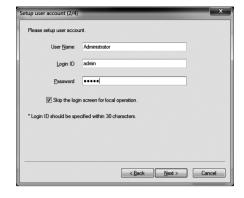

## **5** Configure HTTP Server setting.

Set the port number.

When you have completed the settings, click [Next].


## **6** Review the settings.


The settings are shown in the window. To finalize the settings, click [Finish]. To make changes, click [Back]. If you need to make changes after finalizing the settings, you can use Server Management Tool.

After checking the settings, click [Finish].

The e-Signage S Server Management Tool window will appear.

7 Click [Yes].

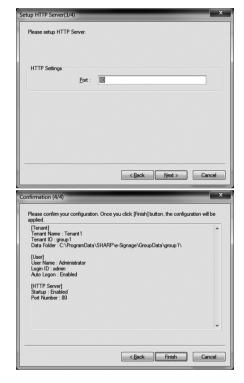

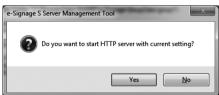

## **8** Click [OK].

HTTP Server will launch.



## **WEB Server Settings**

1 From the Windows taskbar of the management PC, click [Start] - [All Programs] - [SHARP e-Signage S] - [Server Management Tool].

Configuration Tool will launch and e-Signage S Server Management Tool window will appear.

- **2** Click the "HTTP Server" tab of the Server Management Tool window.
- 3 Check the "Start HTTP Server Automatically" checkbox.

HTTP Server will automatically launch when the management PC is started.


**4** Enter a port number in "HTTP Settings". 80 is set by default.

5 Click [Ref] in "PULL type distribution folder" and specify a folder.

Set the folder that will be used to store the distribution data for PULL type distribution.

6 Click [Launch HTTP Server now].

HTTP Server will launch.

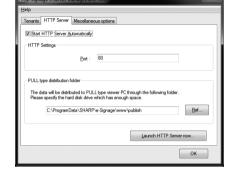


### **TIPS**

Server programs of the WEB Server will run as user processes and cannot be run as services. Log in to Windows using a user account with administrator privileges, and use WEB Server programs (HTTP Server and Distribution Scheduler) that launch from startup.

## ■ Setting the automatic logout time

Set the time after which automatic logout takes place if no actions are performed after logging in. The default setting is 30 minutes.

- 1 Click the "Miscellaneous options" tab in the Server Management Tool window.
- Select a timeout time from the pull-down menu.
  If you do not want to be logged out automatically, select "(none)".
- 3 Click [OK].

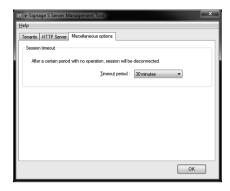

## ■ Distribution Scheduler

Distribution Scheduler is a tool for managing e-Signage communication. Distribution Scheduler will launch automatically from "Startup" when you log in to Windows.

When Distribution Scheduler launches, an icon ( ) is displayed (and resides permanently) in the Task Tray. Do not exit Distribution Scheduler unnecessarily.



## Logging In

## Logging in to WEB Server

1 Double-click the e-Signage S shortcut icon on Desktop.

If a tenant has not been created, the server settings open. ( Page 23)

## **TIPS**

- For Internet Explorer installed on Windows Server 2008 / 2008 R2 / 2012 / 2012 R2 / 2016, functions such as page redirection are restricted to increase security.
- If WEB Server does not operate, add the URL for WEB Server (http://(IP address of the server:Port number)/) to "Trusted Sites". This can be accessed by clicking "Internet Options" "Security" in Internet Explorer.

## **Description of the screen**

## ■ Toolbar



## (1) Home button

Use this to return to Dashboard from other screens.

### (2) Function selection button

You can select and display functions.

## (3) User

Shows the currently logged in user. You can change the password.

## (4) Logout button

Click to log out from the server.

This will not appear if the login screen is skipped. ( Page 24)

## ■ Dashboard

 


## (5) Function buttons

Tab	Description		Page
Content Folder Management	Create and manage content folders and lists of content (video/ images, audio, scroll messages) stored in content folders.		<b>1</b>
Program Management	Create and manage programs that display content in an arranged layout.		<b>ເ</b> ≊ 52
Schedule Management	Create and manage content folders and program playback schedules.		<b>1</b> 63
Distribution	Distribute content folders, programs, and schedules.  You can check distribution schedules and distribution statuses.  Click   to display the following menus.		<b>1</b> 3 73 €
	USB memory / SD Card Distribution	You can use USB memory (USB flash drive) or an SD memory card for distribution.	<b>₽</b> 81
System Log	View logged operation and distribution information.		<b>₽</b> 82

## (6) Show data usage button

Show e-Signage S data usage.




## **Content Folder Management**

## Main window

Content to be played is managed using folders (content folder).

When you click a content folder group in the content folder group management area, the content folders in that group appear in the content folder management area.

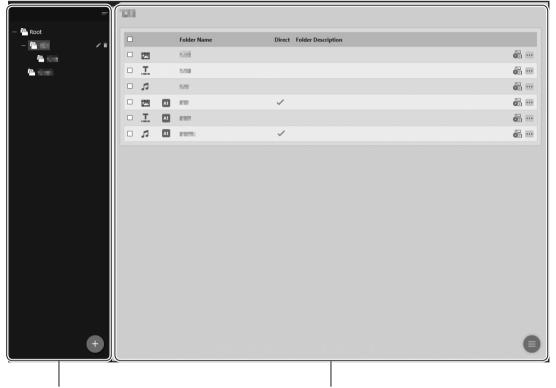

Content Folder group management area

**Content Folder management area** 

## Managing content folder groups

## ■ Content folder group management area



(1) Less button

Click to show less of the menu.

## (2) Edit button

Edit the information saved in a content folder group.

## (3) Delete button

Delete a content folder group.

## (4) Add button

Add a content folder group.

## ■ Creating a content folder group

1 Click in the content folder group management area.

The Create Content Folder Group window will appear.

2 Enter each item.




Menu option	Explanation
Folder Group Name (required)	Name of the group.
Parent Group (required)	Set the folders that will belong to the group.

**3** Click [Add].

## **Managing content folders**

## ■ Content folder management area

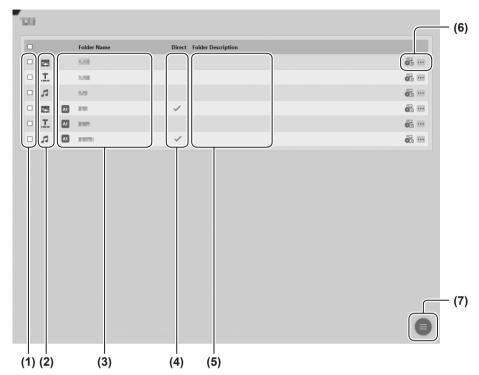

## (1) Checkbox

Use to delete multiple content folders.

### (2) Content folder type icon

Indicates the content folder type.

#### (3) Folder Name

Indicates the content folder name.

appears next to the folder names of Player A1 files.

### (4) Direct

A checkmark appears when "Direct Mode" is selected for the folder mode.

## (5) Folder Description

Shows the detailed information entered when the content folder was created.

## (6)

Click to add content to a content folder, or delete content.

Click ••• to display the following buttons.

(Property Settings button)

(Delete button)

(Preview button)\*1,2,3

(Open Windows Folder button)\*1,4

- \*1 Only on the management PC.
- \*2 Exit the preview with the [Esc] key.
- \*3 When previewing Player A1 data on the computer, there may be some differences from actual playback. Some video files and audio files cannot be previewed.
- \*4 Only when the folder mode is "Direct Mode".

#### (7) Menu button

Use to add a content folder.

When this is selected with multiple checkboxes selected, the Delete menu will appear.

## **Creating content folders**

## Basic flow for creating a content folder

(1) Create a content folder. ( See below)

Specify the content folder type based on the player software and type of content to be played.

(2) Upload the content files to the content folder you created. (12) Page 38)

Assigned to use the content folder with the following functions.

- Program management ( page 53)
- Schedule management ( page 64)


## Creating a content folder

Create content folders to manage content.

- 1 Select the content folder group to which you want to add a content folder.
- 2 Click in the content folder management area.
- 3 Click [Add].

The Add Content Folder window will appear.

4 Specify the items.

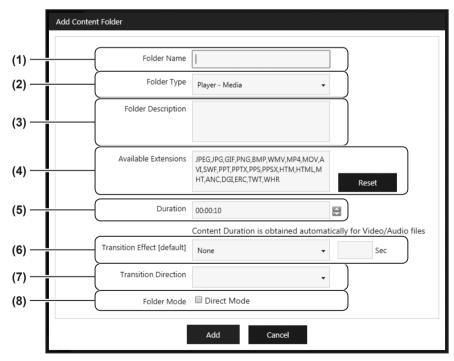

<sup>\*</sup> Example of "Player - Media" window.

	Menu option		Explanation
(1)	Folder Name	Enter the conte	ent folder name.
(2)	Folder Type		tent folder type based on the player software to which the distributed and the combination of content.
		Media	You can assign this to the background frame / frames 1 to 4 when creating a program, and by schedule or distribution. (   Pages 60, 70, 78)
		Scroll Message	You can assign a scroll message to the message frame when creating a program. ( 🖾 Page 60)
		Audio	You can assign this to the audio frame when creating a program. ( Page 60)
(3)	Folder Description	You can enter a description.	
(4)	Available Extensions	Enter the file extensions of content that can be uploaded to the content folder.  An extension cannot be entered when the content is a scroll message. To reset to the default settings, click "Reset".	
(5)	Duration	Enter the default playback duration that is set when content is added.	
(6)	Transition Effect	Select the default transition effect for still image content.  Also set the time that the transition effect is applied.  * "Media" only	
(7)	Transition Direction	Select the default transition direction for still image content.  Some transition effects do not have a transition direction setting or have varying types.  * "Media" only	
(8)	Folder Mode	the "Direct Moe  * When "Dire	nage content folder content using the Explorer window, select de" checkbox. ct Mode" is selected, content cannot be edited from the lder Management window.

# **5** Click [Add].

# TIPS

An added content folder cannot be copied.
 In addition, the folder name and folder type cannot be changed.
 Add a content folder again.


# Editing a content file in a content folder

Upload content files to a content folder you added, and create a playlist.

To edit a content file in a content folder, click in the content folder management area.

## ■ Edit Content File window


#### "Media" folder

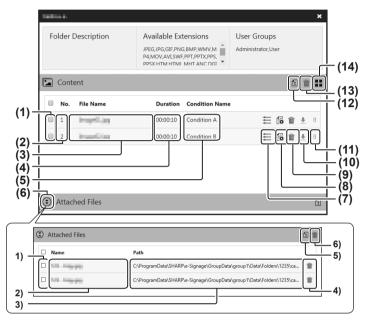

## "Scroll Message" folder



## "Audio" folder

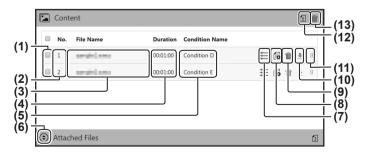

	Menu option	Explanation
(1)	Checkboxes	Use to delete multiple files.
(2)	No.	Shows the number of each file.
(3)	File Name	Shows the filename of each file.
(4)	Duration	Shows the playback duration of each file.

	Menu option		Explanation
(5)	Col	ndition Name	Shows the name of the playback conditions.
(3)	Condition Name		* "Media" and "Audio" folder only
(6)	Vie	w toggle button	Shows details on attached files.
	1)	Checkboxes	Use to delete multiple attached files.
	2)	Name	Shows the filename of the attached file.
			Shows the path of the attached file.
			TIPS
	3)	Path	<ul> <li>When using HTML content, always place the images, video, and other files used internally in HTML in the same Windows folder as the HTML file, or in a subfolder of that folder.</li> <li>Make sure that all attached files are defined by their relative paths in the HTML file.</li> </ul>
	4)	Delete button	Delete an attached file.
	5)	Upload button	Upload attachment files to a specified content folder.
	6)	Delete All button	Delete multiple attached files.
(7)	Play Condition Setting button		Set playback conditions. ( Read Page 50)  * "Media" and "Audio" folder only
(8)	Edi	t button	Edit the properties of the content.  * Only when the folder mode is not set to "Direct Mode".
(9)	Del	lete button	Delete a file.
(10)	Do	wnload button	Download a file. ( 🖙 Page 49)
(11)	Sort button		Drag to change the file playback order.  * Only when the folder mode is not set to "Direct Mode".
(12)	Upload button		Upload a file. ( Region Pages 41, 48)  * This does not appear when the folder type is "Player A1 - Scroll Message".
(13)	Del	lete All button	Delete multiple files.
(14)	View toggle button		Switch the file view between thumbnails and list.  In thumbnail view, the Select All button appears.  * "Media" folder only
(15)	Scroll Message Setting button		Edit the content of scroll messages.  * "Scroll Message" folder only
(16)	Cre but	eate Scroll Message ton	Create a scroll message. ( Page 45)  * "Scroll Message" folder only

## ■ Files that can be saved in content folders

File types that can be used as content are as follows:

#### e-Signage S Player content folders

Folder Type	File type
Media	MPEG, MPEG1, MPEG2, WMV (Windows Media Video (types playable in Windows Media
	Player)), Flash (types playable in Flash Player), MOV, MPEG4 (types playable in Windows Media
	Player), PowerPoint, HTML, JPEG, BMP, GIF, PNG, executable files (.exe)
Scroll message	Scroll messages created in Scroll Message Editor
Audio	WAVE, MP3, AU, AIFF, WMA (Windows Media Audio (types playable in Windows Media Player)),
	MOV, MPEG4 (types playable in Windows Media Player), MIDI

## e-Signage S Player A1 content folders

Folder Type	File type
Media	MPEG2, MPEG4, WMV, WEBM, HTML, JPEG, BMP, GIF, PNG
Scroll message	Scroll messages created in Scroll Message Editor (.tlp)
Audio	WAVE, MP3, WMA, MPEG4

## TIPS

- · Audio files are assigned to the audio frame. Audio files are used as audio or music (background music) that plays while a program is played.
- Windows player devices require a codec to play mpeg files.

Content files are recognized by their file extensions.

On Windows player devices, some file types require the installation of associated software.

	F	ile exter	nsion		Content type	Required software
.avi	.mpeg	.mpg	.wmv	.asf	Video	Windows Media Player
.mov	.mp4				Video	Williaows Media Flayer
.swf					Flash	Flash Player
.ppt	.pps	.pptx	.ppsx		PowerPoint	PowerPoint Viewer
.htm	.html				HTML	Internet Explorer,
						e-Signage WEB browser
.tlp					Scroll message	None
.wav	.mp3	.au	.aif	.aiff		
.wma	.mid	.midi			Sound	Windows Media Player
.mov	.mp4					
.exe					Executable file	None
.jpeg	.jpg	.gif	.png	.bmp	Still image	None

For codecs and software whose operation has not been demonstrated on the installed operating system, check operation prior to installation.

#### **TIPS**

- · JPEG files support RGB. CMYK is not supported. JPEG 2000 is not supported.
- · Animation GIF is not supported.
- Two or more PowerPoint files cannot be displayed at the same time.
- The following actions are not supported in PowerPoint content. Execution of macros, execution of programs, display of link objects, display of embedded objects
- If too many animations are used in PowerPoint content, displayed characters may become illegible.
- The font used in the content must also be installed on the player device.
- HTML files and web pages cannot be enlarged or reduced.
- · The playback volume can be adjusted for video and audio. Volume adjustment is not supported in Flash and PowerPoint.

# **Uploading content files**

Upload files to the content folder you created.

- "Media" folder ( ເ See below)
- "Scroll Message" folder ( ISS pages 45, 48)
- "Audio" folder ( repage 48)


# ■ Uploading files to the "Media" folder

1 Click in the Edit Content File window.


The Add Content Folder window will appear.

2 Specify the items.


"Content" tab

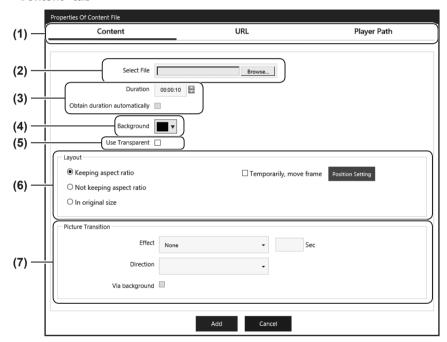

## "URL" tab

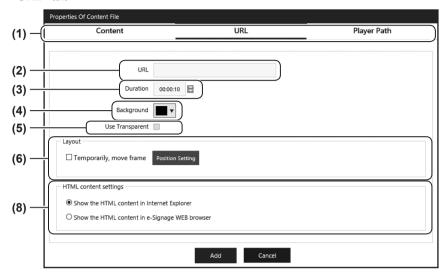

## "Player Path" tab (Player only)

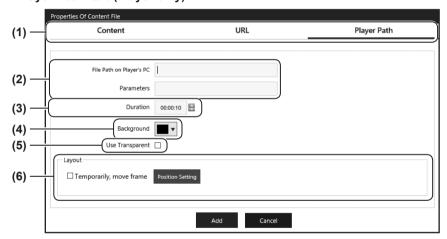

Menu option			Explanation
(1)	File type	Select the type of file you want to upload.	
Content Select to upload content such as an image file		Select to upload content such as an image file or video.	
URL Select to display a specified URL as co		Select to display a specified URL as content.	
		Player Path	Select to show content files and executable files (.exe) that have
	Flayer Fatti		been sent to the player.

Menu option		Explanation	
(2)	Select File	Select the file you want to upload.  * "Content" tab only	
		Enter the URL of the HTML you want to show.  * "URL" tab only Enter a URL that can be accessed by the player device.	
	URL	TIPS	
		<ul> <li>Use discretion, as websites are copyrighted.</li> <li>If the page you want to display contains errors, it will not display correctly.</li> <li>If the page you want to display requires a plug-in, the player device must have the plug-in installed.</li> </ul>	
		Specify the path of the executable file to be displayed.  * "Player Path" tab only You can specify an EXE file. Enter a path that can be referenced by the player device. For an EXE file, "Parameters" can be added.	
		TIPS	
	File Path on Player's device	<ul> <li>When displaying large content files that are not frequently updated, you can save the files on the player device in advance and then only send the paths to the files. This will help reduce the time it takes to send program content.</li> <li>Specify the absolute path of the player device, or the relative path from the My Contents folder ( page 88).</li> <li>When specifying an executable (.exe) file, you can use the following parameters.</li> <li>%L: X coordinate of top left corner of frame</li> <li>%T: Y coordinate of top left corner of frame</li> <li>%W: Width of frame</li> <li>%H: Height of frame</li> </ul>	
This software only launches or ends specified executable files at a The software does not guarantee the actions of any executable file. The specifications of some executed programs may prevent the program.		<ul> <li>This software only launches or ends specified executable files at a specified time. The software does not guarantee the actions of any executable files it launches.</li> <li>The specifications of some executed programs may prevent the programs from launching or ending correctly, or displaying windows in the correct position.</li> </ul>	
(3)	Duration	Set the playback duration.	
		Obtain duration automatically  In the case of video files, the playback duration is obtained automatically.  * "Content" tab only	
The	following setting	ngs can be specified when the folder mode is not "Direct Mode".	
(4)	Background	Select the background color.  The background can be filled in using a specified color.  Click the color swatch to display the dialog box and change the background color.	
		Select this checkbox to make blank parts of content transparent.	
(5)	Use Transparent	TIPS  Do not set to transparent if the content folder is assigned to the "Background Frame" of a program.	

N	lenu option	Explanation			
		Set the layout of th	e content.		
(6)	Layout	When the content type is Still Image or Flash, you can select "Keeping as			
		"Not keeping aspec	ct ratio", or "In original size".		
		Temporarily, move frame	To temporarily change the screen position of the content when the content folder is assigned to a program frame, select this checkbox and click [Position Setting]. The position and size of the frame can be specified for each content item. The screen position must be set within the background frame.		
(7)	Picture	Select image trans	ition settings.		
(')	Transition	* "Content" tab or	nly		
		Effect	Select the transition effect.		
		Lilect	Also set the time that the transition effect is applied.		
			Select the transition direction.		
		Direction	Some transition effects do not have a transition direction setting or have varying types.		
		Via background	Select whether or not transition is via the background.		
(8)	HTML content settings	Select the browser * "URL" tab only	that will be used to display content.		
		Show the HTML content in Internet Explorer	Show HTML content using Internet Explorer.		
		Show the HTML content in e-Signage WEB browser	Show HTML content using the e-Signage WEB browser.		

# 3 Click [Add].

# 4 Repeat steps 1 to 3 as needed to create the playlist.

Playlist content is played in order starting with the content file at the top of the list.

If the folder mode of the content folder is set to "Direct Mode", the files will play in ascending order of the filenames.

## TIPS

• When the folder mode is "Direct Mode", you can add a playback duration to the end of a filename to specify the playback duration.

## Example:

image1\_30s.jpg: 30 seconds

image2\_1m15s.jpg: 1 minute and 15 seconds

image3\_1h.jpg: 1 hour


• When using the e-Signage WEB browser for display, preloading is not performed, even if HTML is set to be preloaded. In addition, the data is displayed at the front, regardless of the frame.

# Creating a scroll message

1 Click I in the Edit Content File window.

The screen for creating a scroll message appears.

2 Specify the items.

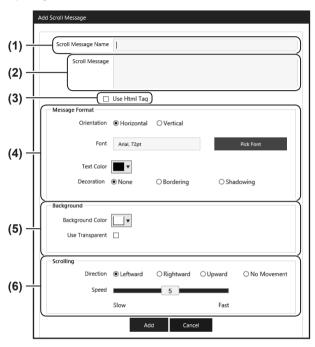

N	Menu option		Explanation
(1)	Scroll Message Name	Enter a name for the scroll message.	
		Enter the mes	sage.
(2)	Scroll	TIPS	
	Message		e number of characters in each line, the more memory will be used. We reaking lines at a suitable point so that they do not become too long.
			eckbox to use the following HTML tags in the "Scroll Message" in order font color, size and other effects.
		Tag	Explanation
		<font></font>	Defines the text. Takes the COLOR, SIZE and FACE attributes which respectively define the text color, text size and typeface.
(3)	Use Html Tag	<b></b>	Defines bold text.
		< >	Defines italic text.
		<u></u>	Defines underlined text.
		<s></s>	Defines strikethrough text.
		<big></big>	Defines bigger text.
		<small></small>	Defines smaller text.

Menu option		Explanation			
(4)	Message	Set the messag	ge format.		
	Format	Orientation	Select horizontal or vertical for the text orientation.		
			Change the font.		
			TIPS		
		Font	You must have the same font installed on the player device.		
			With some font types, scrolling may be interrupted because the text size cannot be acquired.		
		Text Color	Set the text color.		
		Decoration	Select "None", "Bordering", or "Shadowing" for the text decoration. When "Bordering", or "Shadowing" is selected, the decoration color can be set.		
(5)	Background	Set the background.			
		Background Color	Set the background color.		
			Select this checkbox to make the background color transparent.		
			Drag the Rate slider to the left or right to set the transparency.		
			TIPS		
		Use Transparent	<ul> <li>Do not select this checkbox if you do not want to make the background color transparent. Even if the slider is set to opaque at the right end, the background does not become completely opaque.</li> <li>When the checkbox is selected, the color set for the background is made transparent. For this reason, if "Text Color" and/or "Decoration Color" are the same as "Background Color", "Text Color" and/or "Decoration Color" will also become transparent.</li> <li>If transparent or semi-transparent scroll messages are positioned over a video, the desired effect may not be obtained.</li> </ul>		

Menu option		Explanation
(6) Scrolling	Set the scroll d	irection and speed.
		Select the "Direction" from "Leftward", "Rightward", "Upward" and "No Movement".
		TIPS
	Direction	When "Vertical" is selected in "Message Format", neither "Leftward" nor "Rightward" can be selected.
		<ul> <li>When "No Movement" is selected, scroll messages are displayed at the center of the specified range line by line. (Any parts outside this range are not displayed.)</li> </ul>
		Drag the Speed slider to the left or right to set the scroll speed.  * This does not appear when "No Movement" is selected.
		TIPS
	Speed	<ul> <li>The actual speed of a scroll message may vary slightly from the set speed due to variations in computer performance.</li> <li>When the "Use Transparent" checkbox is selected, the scroll speed may be slower than opaque scroll messages. It is recommended that the actual display of scroll messages be tested before operation.</li> </ul>
	Use fading in/out when message switches	When "No Movement" is selected, set whether messages will fade-in and fade-out.  To have the currently displayed scroll message fade out and the next scroll message fade in when switching scroll messages, select the checkbox.
		TIPS
		If fade-in/fade-out scroll messages are positioned over a video, the desired effect may not be obtained.
	Display Time of Each Line	When "No Movement" is selected, scroll messages are displayed line by line. Set the display time.

# 3 Click [Add].

# ■ Uploading files to the "Scroll Message" folder or "Audio" folder


## TIPS

- Only the player can be used to upload files to the "Scroll Message" folder. Upload files are created in SDSS ( Reg Page 103).
  - 1 Click in the Edit Content File window.


The Add Content Folder window will appear.

# **2** Specify the items.

## "Scroll Message" folder

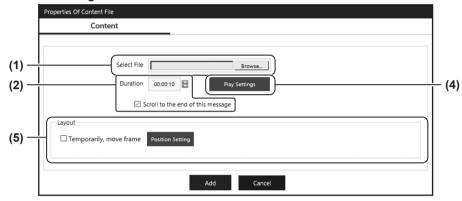

#### "Audio" folder

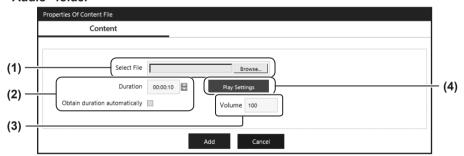

Menu option		Explanation		
(1)	Select File	Select the file you want to up	oload.	
(2)	Duration	Set the playback duration.		
		Scroll to the end of this message	When selected, the message will be displayed to the last line even if the playback time is exceeded.  * "Scroll Message" folder only	
		Obtain duration automatically	The playback duration is obtained from the file information.  * "Audio" folder only	
(3)	Volume	Select the playback volume.  * "Audio" folder only		

	Menu option	Explanation		
(4) Play Settings		Select the action performed after playback finishes.		
		TIPS		
		<ul> <li>You can set the action to be performed if playback of content finishes before the specified playback duration elapses. To select this setting, click [Play Settings].</li> <li>When the "Scroll to the end of this message" checkbox is not selected, playback of scroll messages is forcibly terminated after the specified duration elapses even if playback is not finished (this applies when the content type is scroll message).</li> </ul>		
		Repeat this content	Repeat the content.	
		Stop with background color/ Stop	Stop playback and show the background color. / Stop playback.	
		Play next content	Play the next content file.	
(5)	Layout Set the layout of the content.  * "Scroll Message" folder only			
		Temporarily, move frame	To change the screen position of the content temporarily, select this checkbox and click [Position Setting]. The position and size of the frame can be specified for each content item. The screen position must be set within the background frame.	

- 3 Click [Add].
- 4 Repeat steps 1 to 3 as needed to create the playlist.

# **Downloading content files**

Download files from the content folder.

1 In the Edit Content File window, click 👤 next to the file you want to download.


# **Playback Condition Setting**

You can set playback conditions for content files. (Only for content folders whose "Folder Type" is "Media".) If you have set multiple conditions, the content will play when all conditions are met.

# **Setting playback conditions**

- 1 In the Edit Content File window, click = next to the file whose settings you want to configure.
- 2 Specify the items.

Select the checkboxes of conditions you want to enable.

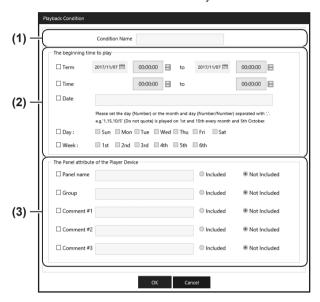

Menu option			Explanation
(1)	Condition Name	You can assign a name to playback conditions.	
(2)	Playback Condition	You can set the	e playback duration.
		Term	You can set the beginning and end dates.
		Time	You can set the beginning and end times.
		Date	You can set the playback date.
		Day	You can set a day of the week for playback. (Multiple days can be selected.)
		Week	You can set playback on a certain week of every month. (Multiple weeks can be selected.)
(3)	The Panel	Set playback co	onditions in the attributes set for the panel.
	attribute of the Player Device	Panel Name	You can set playback to take place on panels with names that contain or do not contain characters that you enter.
		Group	You can set playback to take place by groups that contain or do not contain the characters that you enter.
		Comment 1 to 3	You can set playback to take place on panels with comments that contain or do not contain characters that you enter.

**3** Click [OK].

## TIPS

- The Panel Name, Group, and Comment playback conditions reference the panel attribute information in the player device at the time of playback.
- By setting panel attribute information on player devices in advance, you can distribute identical content to multiple player devices, and play the content on each player device.
- For information on how to set panel attribute information on player devices, refer to pages 88, 95.




# **Program Management**

## Main window

This window is used to manage programs displayed on panels.

By assigning content folders to program frames, you can divide the screen.

When you click a program group folder in the program group management area, the programs in that program group appear in the program management area.

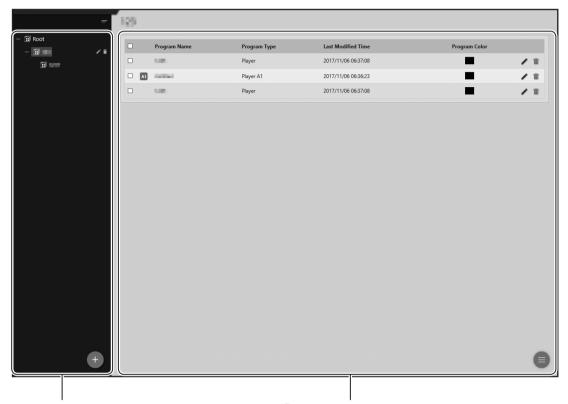


Program group management area

Program management area

# Managing program groups

# ■ Program group management area

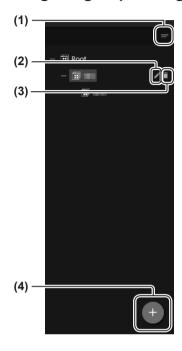

(1) Less button

Click to show less of the menu.

(2) Edit button

Edit the information saved in a program group.

(3) Delete button

Delete a program group.

(4) Add button

Add a program group.

# ■ Creating a Program Group

1 Click in the program group management area.

The Create Program Group window will appear.

2 Enter each item.




Menu option	Explanation
Program Group Name (required)	Name of the group. (1 to 50 characters)
Parent Group (required)	Set the folders that will belong to the group.

# 3 Click [Add].

# **Managing programs**

# ■ Program Management area

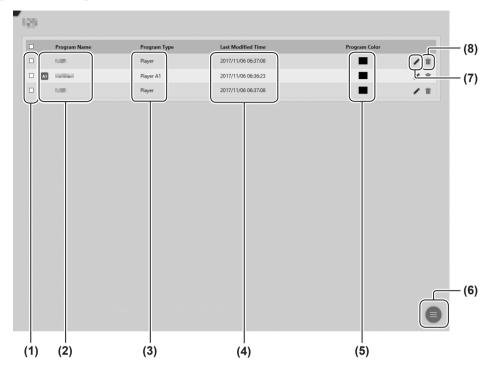

## (1) Checkboxes

Use to delete multiple programs.

## (2) Program Name

Indicates the program name.

## (3) Program Type

Indicates the program type.

## (4) Last Modified Time

Indicates the date and time the program was last modified.

## (5) Program Color

Indicates the color set for the program.

## (6) Menu button

Use to add a program.

When this is selected with multiple checkboxes selected, the Delete menu will appear.

## (7) Edit button

Edit a program.

## (8) Delete button


Delete a program.

# **Creating a Program**

## Main window

Create programs to be played on panels.

You can drag a content folder from the content folder selection area to a broken-line frame (Frame, Message Frame, Audio Frame, Background Frame) in the program creation area to assign that content folder to the frame.

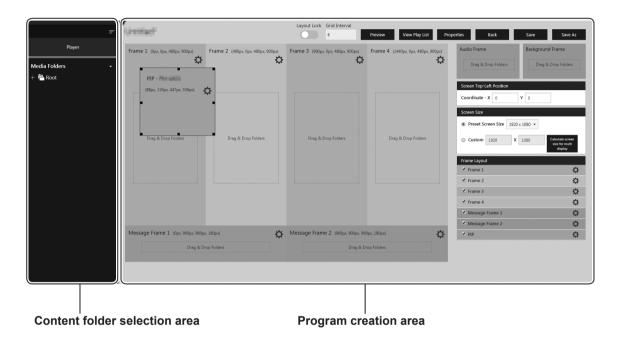


# **Creating programs**

# ■ Setting the layout

Set the layout of the overall screen.

- 1 Click in the program management area and select "Add".
- 2 Select the type of player software to which the content will be distributed.
- 3 Specify the items.

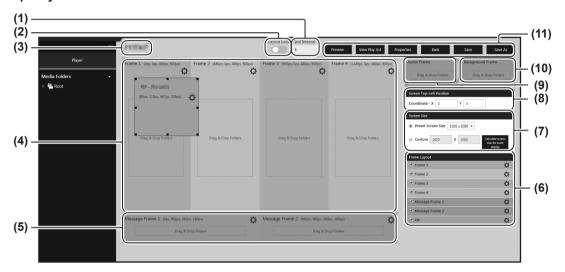

Menu option		Explanation
(1)	Grid Interval	Set the interval between the grid lines. Using the grid makes it easy to position items precisely. You can drag items with your mouse and snap them to a grid line.
(2)	Layout Lock	Use this option to prevent accidental changes to the layout.
(3)	Program Name	The name of the program appears here. If the content of an opened program is changed, an asterisk (*) will appear after the program name.
	Frame 1 - 4	Set the content displayed in frames 1 to 4 and the positions of the content.
(4)	PIP	Set the content displayed in the PIP frame and the position of the content.  (INST Page 61)  * To display a PIP frame, add a checkmark to the frame layout.
(5)	Message Frame 1 - 2	Set the content displayed in scroll message frames 1 and 2 and the positions of the content. ( 🖙 Pages 45, 48)
(6)	Frame Layout	Select whether each frame is shown or hidden.
(7)	Screen Size	Set the size at which the program is displayed on the panel. ( 🖼 Page 62)
(8)	Screen Top-Left Position	Set the position of top-left corner of the screen. ( Page 62)

	Menu option	Explanation
(9)	Audio Frame	Set the audio or music that plays while a program is displayed. ( 🖙 Page 48)
(10)	Background Frame	Set the background of the program.
	Preview	Show a preview of the program you created. Exit the preview with the [Esc] key.  * Save the program with [Save] before showing the preview.  * Select the preview method (ORIGINAL SIZE or FIT TO SCREEN).  * If you preview e-Signage S Player A1 data on a computer, some parts may differ from actual playback. It may not be possible to preview some video and audio files.
(11)	View Play List	You can view the details of the content folders assigned to the frames. (Frame 1 - 4, Message Frame 1 - 2, Audio Frame, Background Frame, PIP Frame)
	Properties	Set the program properties (Program Name, Program Color).
	Back	Return to the main screen of program management without saving your changes.
	Save	Save the program currently being edited.
	Save As	Save the program currently being edited under a different name.

# 4 Adjust the size of each frame.

For the frame, message frame, and PIP frames, click , change the settings, and click [OK].


Item	Description	
Coordinate - X	Cat the display position	
Coordinate - Y	Set the display position.	
Width	Out the address of a	
Height	Set the display size.	
Background	Set the background color for when	
color in case of	content is not used.	
no content	* Frame only	
Show Frame	Select whether the frame is shown or hidden.	



## TIPS

- Click a frame to select it. Eight resize handles will appear around the border of the frame. You can drag these handles with your mouse to resize a frame while viewing the result.
  - You can also drag any part of the frame other than a resize handle to move the frame.
- You can hold down [Shift] while dragging to maintain the same aspect ratio as you resize a frame.
- You can use the "Grid Interval" to move or resize frames precisely to the grid lines. (


   Page 58)
- The PIP frame cannot be moved in increments of 1 point. Placeable positions vary by LCD monitor.

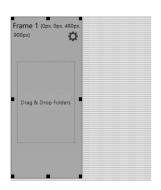

# 5 Click [Save As].

The Save As window will appear.

Item	Description
Program Name	Set the program name.
Program Color	Set the program color.

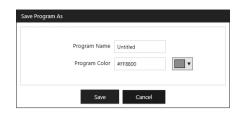

# 6 Set each item and click [Save].

## ■ Assigning content folders

1 From the menu in the content folder selection area, select the appropriate content folder type for the frame to which the content folder is being assigned.

For a frame or background frame, select "Media Folders". For a message frame, select "Scroll Message Folders". For the audio frame, select "Audio Folders".

- Select the folder group, and drag and drop the content folder to be assigned.
  - For the file types that can be used, refer to page 40.
  - You can place multiple content folders in one frame. The content folders and content that have been placed can be viewed using "View Play List".
- 3 Repeat steps 1 to 2 as needed to create the program.

For information on the PIP frame, see page 61.

4 Click [Save].

## TIPS

Assigned content folders can be deleted using "View Play List".



# ■ Setting the PIP frame

Set the PIP frame size, Input Source, Audio Source, and other parameters. This function can be used only with a LCD monitor (PN series).

This function is only for Player.

1 Select the "PIP" checkbox in [Frame Layout].

# 2 Click and set each item.

Item	Description	
Monitor model name	Set the monitor model.  * The items that appear vary by model.	
Size	Select the size. Sizes vary by aspect ratio.	
Aspect ratio	Select the aspect ratio of the screen.     Select this according to the video or images that you want to display.	
Input Source	Select the Input Source.	
Audio Source	Select the Audio Source.	
Direction	Select the orientation in which the panel is installed.  * The settings on the LCD monitor cannot be changed. Select settings that match the monitor settings.	







# 3 Click [OK].

## ■ Setting the position of the screen

# 1 Set "Screen Top-Left Position".

Set the coordinates (-99999 - 99999) for the desired position of the top left hand corner of the background in the panel.

"Coordinate - X" and "Coordinate - Y" are normally both set to "0".



## ■ Setting the screen size

## 1 Set the "Screen Size".

The screen size is the size of the background. Select the "Preset Screen Size" option button, and choose a size from the pull-down menu.

The screen size is normally set to the panel size (resolution).

#### TIPS

- If the desired size is not in the list, select the "Custom" option button and enter the size.
- If you want to combine multiple panels into a single display, select the "Custom" option button, click [Calculate screen size for multi display], and set the monitor installation direction (orientation) of each panel.



X 1080

Preset Screen Size 1920 x 1080 ▼

Custom 1920

 
## Display priority order

If frames overlap when a program is displayed, programs will be displayed in the following order from foreground to background.

"PIP Frame" → "Message Frame" → "Frame4" → "Frame3" → "Frame2" → "Frame1" → "Background Frame"

#### **TIPS**

- If the content of a frame or background is a PowerPoint file, EXE file, or e-Signage WEB browser, the frame will be displayed in the foreground regardless of the display order.
- If a video is displayed in the background, the video may appear in front of other frames.
   Set the video in one of frames 1 to 4, not the background.




# **Schedule Management**

## Main window

You can manage "Schedules" for display of content folders and programs on panels.

When you click a schedule group name in the schedule group management area, the schedules in that schedule group appear in the schedule management area.

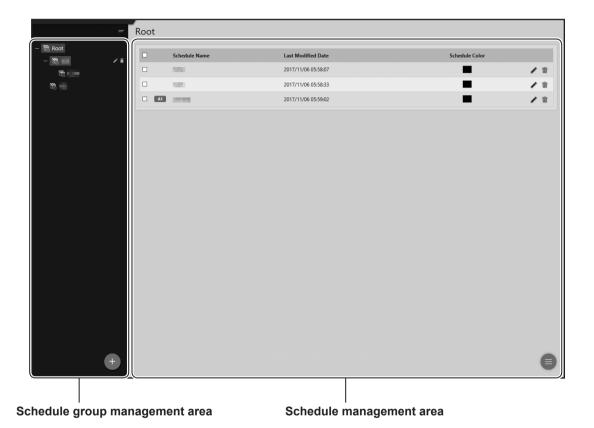

# Managing schedule groups

# ■ Schedule group management area



(1) Less button

Click to show less of the menu.

(2) Edit button

Edit the information saved in a schedule group.

(3) Delete button

Delete a schedule group.

(4) Add button


Add a schedule group.

# ■ Creating schedule groups

1 Click in the schedule group management area.

The Create Schedule Group window will appear.

2 Enter each item.

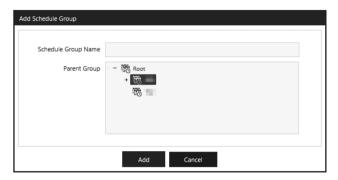


Menu option	Explanation
Schedule Group Name (required)	Name of the group.
Parent Group (required)	Set the folders that will belong to the group.

3 Click [Add].

# Managing schedules

# ■ Schedule management area

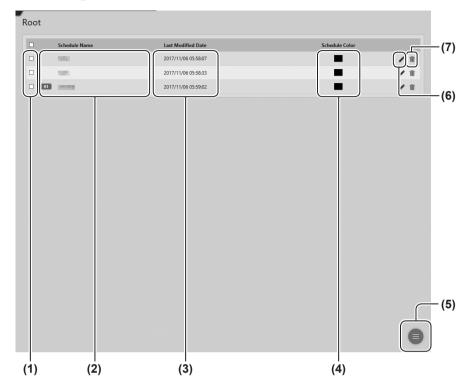

## (1) Checkboxes

Use to delete multiple schedules.

## (2) Schedule Name

Shows the name of the schedule.

## (3) Last Modified Date

Indicates the date and time the schedule was last modified.

## (4) Schedule Color

Indicates the color set for the schedule.

## (5) Menu button

Use to add a schedule.

When this is selected with multiple checkboxes selected, the Delete menu will appear.

## (6) Edit button

Edit a schedule.

## (7) Delete button


Delete a schedule.

# **Creating Schedules**


## Main window

Use this window to create "Schedules" for the display of content folders and programs on panels.

You can drag content (a content folder, program, or panel control command) from the content selection area to the schedule area, and set the time span for display/control.

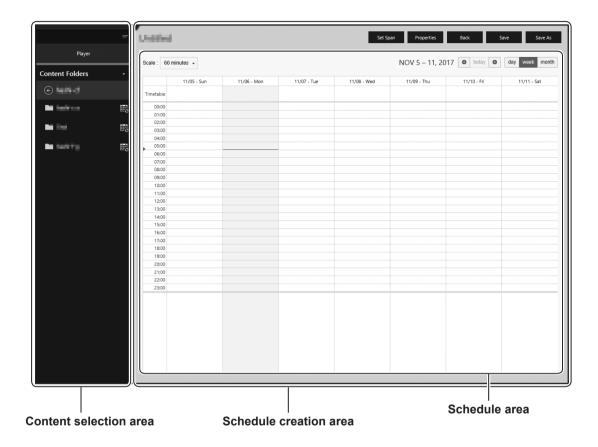

# ■ Schedule creation area

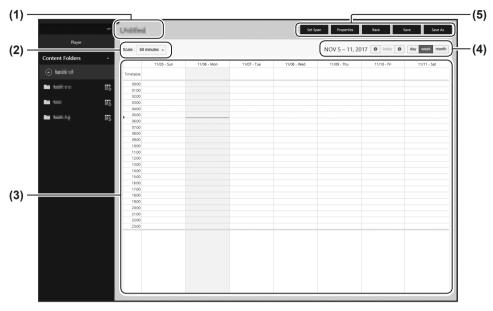

\* Example of "Week" window.

	Menu option	Explanation	
(1)	Schedule Name	Shows the name of the schedule. If the content of an opened schedule is changed, an asterisk (*) will appear after the schedule name.	
(2)	Scale	You can select the display scale of the schedule area.	
(3)	Schedule area	Set a playback schedule. ( 🖼 Page 70)	
	Display Range	Set the display range of the schedule area.	
(4)	day week month	Move the display range.  Move back to the previous display range.  Move to the display range that includes today's date.  Move to the next display range.  "day", "week", or "month" can be selected for the display range increment.	
	Set Span	Set the time span displayed in the schedule area.	
	Properties	Set the schedule properties (schedule name, schedule color).	
(5)	Back	Return to the main screen of schedule management without saving your changes.	
	Save	Save the schedule you are currently editing.	
	Save As	Save the schedule you are currently editing under a different name.	

# Creating a schedule

- 1 Click in the schedule management area and select "Add".
- 2 Select the type of player software to which the content will be distributed.
- 3 Select the content to be assigned from "Content Folders", "Programs", or "Panel Control Commands".

For "Content Folders" or "Programs", select the group and display the content to be assigned.

4 Drag the content to the schedule area.

In the case of "month" display, or when the content is dragged to timetable frame above the time span frame, playback will be all-day.

For details on panel control commands, refer to page 72.

You can set conditions for recurring playback of content (content folder / program). Click in the content selection area and set the recurring conditions on the "Recurring" tab.

Start Time: Start time of recurring playback
End Time: End time of recurring playback

Repeat Interval: Interval at which content playback starts

Duration: Duration of content playback

#### TIPS

- A playback instance that will not end by the "End Time" will not be registered. Playback instances that will finish by the "End Time" will be registered.
- **5** Change the time span as needed.

Drag or click a placed item to change it.

- 6 Repeat steps 3 to 5 as needed to set the schedule for the day.
- 7 To use the day schedule for other days, save the schedule as a timetable. ( Page 71)
- 8 Click [Save As].

The Save As window will appear.

Item	Description
Schedule Name	Set the schedule name.
Schedule Color	Set the schedule color.



9 Set each item and click [Save].

## ■ Adjusting an assigned content folder, program, or panel control command

## Changing the playback start time

You can drag a content folder, program, or panel control command assigned to the schedule area to move it.

## Changing the playback end time

You can hover your mouse cursor over a content folder or program assigned to the schedule area to display a handle at the bottom.

You can drag this handle to visually adjust the playback end time of the content folder or program.

#### Changing/deleting the playback period

You can click a content folder, program, or panel control command assigned to the schedule and change it using the screen that appears. You can also delete the item in that screen.

## Saving a timetable for synchronization

You can save a schedule created for one day as a timetable in order to use that schedule for another date (synchronized schedule).

Click the timetable frame above the time span frame of the date for which you want to save the timetable.

The Save As window will appear.

Item	Description
Timetable Name	Set the timetable name.
Timetable Color	Set the timetable color.






2 Set each item and click [OK].

# ■ Synchronize Timetable

1 Click the timetable frame of the date for which you want to synchronize the timetable.

The Synchronize window will appear.

Item	Description
Existing Timetable	Select the name of the timetable to be synchronized.
Playback period	Select the period to be synchronized.
Overwrite	To overwrite a previously schedule with synchronized timetable, select this checkbox.

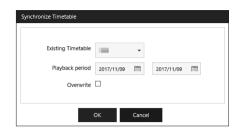


2 Set each item and click [OK].

## ■ Panel control commands

## Table of panel control commands

Command	Description
Turn On Panel	Turns the panel (monitor) power ON.
Turn Off Panel	Puts the panel (monitor) in standby mode.
Input "No."	Switches the panel (monitor) input source.
TV	Switches the input source of the panel (monitor) to "TV input".  The channel cannot be specified. The channel previously selected on the TV is displayed.

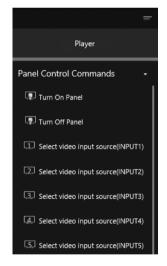




# **Distribution**


This chapter explains how to assign, and distribute or recurring distribute data to panels.

# **Main window**

You can view distribution information in this window.

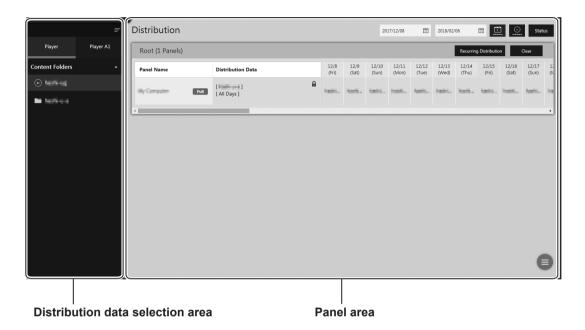

# ■ Distribution data selection area

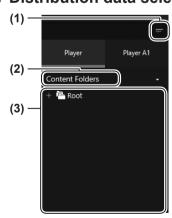

(1) Less button

Click to show less of the menu.

(2) Category selection button


Select from content folders, programs, schedules, or SDSS schedule for the category of data to be assigned to a panel.

(3) Selection area

Select the distribution data to be assigned.

Only the selected category of distribution data is shown.

# ■ Panel area

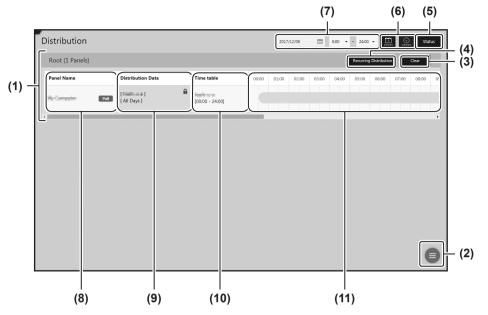

\* Example of hourly window.

# (1) Display area

You can assign distribution data to panel. ( Reg Page 78)

## (2) Menu button

Click to show a menu consisting of the following items.

画	Finalize a distribution schedule and schedule distribution. Select the panel for which you want to finalize the schedule and click this icon.
盡	Cancel finalization of the schedule that was assigned to a panel. Select the panel for which you want to cancel finalization and click this icon.
<u></u>	Resend distribution data to a panel for which a distribution error occurred.

#### TIPS

To cancel a schedule that is waiting for distribution or being distributed, click

## (3) Clear button

Clear an assigned schedule from a panel.

Select the panel from which you want to clear the schedule assignment and click this icon. Cancel the schedule finalized distribution and operate.

# (4) Recurring Distribution button

Set recurring distribution for the panel. Select the day of the week and time, and click "Add".

# (5) View toggle button (Distribution Screen / Status)


Toggle between distribution view and distribution status view.

#### (6) Display units

Toggle the Distribution Schedule window between day display ( ) and hourly display ( ) and hourly display (

#### (7) Display range

Select the distribution schedule range that is displayed.

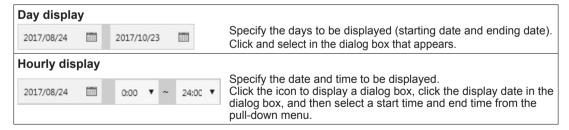

# (8) Panel Name

Displays the panel names.

The distribution type is indicated next to the panel name by icons.

# (9) Distribution data

Shows information on the assigned distribution data.

# (10) Time table (only in hourly display)

Shows the timetable set for the specified day.

# (11) Distribution schedule

Shows information on the distribution schedule assigned to the panel.

# **Distributing / Scheduling distribution**

Assign and distribute distribution data to a panel, or schedule distribution.

1 Display the distribution data that you want to assign in the distribution data selection area. ( Page 74)

TIPS

You can assign data by uploading a schedule in SDSS format. ( ு Page 103)




**2** Click a panel to put it in the selected state.



- **3** Drag distribution data to the panel name in the panel area to which the data is to be distributed.
- 4 Click  $\longrightarrow$   $\longrightarrow$   $\bigcirc$ .

The settings window appears.

# **5** Select distribution options as needed.

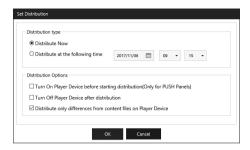

Menu option	Explanation
Turn On Player Device before starting distribution	If the player device is not on, turn on before distributing. This option is not available in PULL type distribution.
Turn Off Player Device after distribution	Turn off the player device after distribution is completed.
Distribute only differences	Distribute only content that has not yet been distributed (data with a different
from content files on Player	file name, different file creation date/time, different data size, etc.). Content
Device	that has already been distributed is not distributed.

# 6 Click [OK].

The distribution is finalized and a finalized mark ( $\bigcirc$  ) appears on the assigned content.

# TIPS

- Check if the distribution was completed properly in the Status window. ( Reg Page 80)
- · Distribution may take time.
- Past distribution data is not distributed. Only distribution data for the current day (and after) is distributed.

# **Distribution Status**

You can check the status of distribution and cancel or resend.

1 Click the view toggle button (5) (Distribution Screen / Status) in the panel area.



# 2 Check the status of distribution.

Phase 1 (Confirm Distribution)	Shows assigned distribution data and the date and time of finalization of distribution.
Phase 2 (Distribution Schedule)	Shows the date and time distribution is scheduled.
Phase 3 (Distribution Start)	Shows the date and time distribution was started.
Phase 4 (Distribution Complete)	Shows the date and time distribution was completed.  If distribution was not completed properly, the reason will be indicated.

3 If needed, click and perform an action below.



Cancel the distribution finalized status of a panel to which distribution has been completed. Or, stop distribution that has not been completed and cancel finalization. Select the panel to which you want to stop distribution, and click this icon.



Resend distribution data to a panel for which a distribution error occurred. Select the panel to which you want to resend data and click this icon.

# **USB Memory / SD Card Distribution**

- 1 Select "Player" or "Player A1" in the left area.
- 2 Select "Content Folders", "Programs", or "Schedules".
- **3** Display the data to be distributed.
- 4 Drag the data to be distributed into the broken-line frame in the right area.
- 5 Click the [Refresh] button in the upper right.
- 6 Click the icon that appears on "Launch Utility".

Depending on distribution data, it takes time may not be displayed immediately. In that case, please click the [Refresh] button again.

- 7 Select the destination drive and click [OK].
- 8 A stop device confirmation screen appears. Click [Yes] and remove the device.
- 9 Insert the external storage device to which you copied the data into the player device.

The content is distributed automatically. When distribution finishes, the USB memory or other external storage device stops automatically. Check the message and remove the device.

#### **TIPS**

- Do not remove the USB memory (USB flash drive) or other external storage device from the PC before copying is completed.
- · Distribution may not be possible with some types of USB memory or other external storage devices.
- Regarding e-Signage S Player A1, USB memory/SD card distribution will not work if you insert USB memory/SD card when screen of other application is displayed. Launch e-Signage S Player A1 and display e-Signage S Player A1's setting screen or playback screen first. After that, you may insert USB memory/SD card.


**System Log** 

# Viewing the System Log

You can view the Audit Log, Content Edit Log, and Panel Distribution Log.

# **Main window**

Select and click the system log you want to view and the log will appear in the system log area.

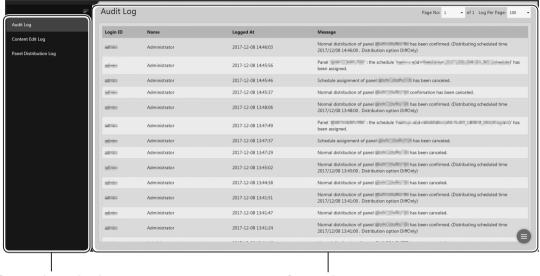


System log area

# Viewing a system log

1 Select the log you want to view in the system log selection area.

Audit Log	This shows a log of actions performed by users other than content editing.
Content Editor Log	Log of content editing performed by users.
Panel Distribution Log	Log of distribution to panels.

**2** Check the information that appears.

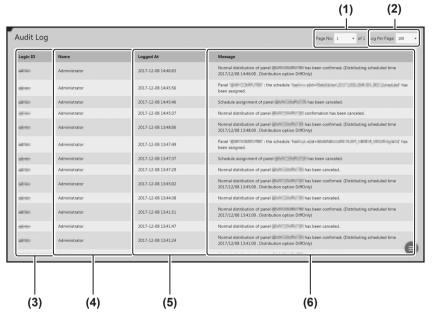

\* Example of "Audit Log" window.

Menu option		Explanation
(1)	Page No.	Select the page number you want to view.
(2)	Log Per Page	Select the number of log entries displayed per page.
(3)	Login ID / Panel ID	Shows the login ID or panel ID.
(4)	Name	Shows the user name or panel name.
(5)	Logged At	Shows the date and time of each entry.
(6)	Message	Shows the result.

# ■ Outputting a system log (TXT format / CSV format)

You can output a system log in TXT format or CSV format.

- 1 Click in the system log area.
- 2 Select and save the button for the desired file format.

Export to TXT
Export To CSV



The following explains the settings of the player device that are used when schedules and programs are distributed from the management PC.

# Client Scheduler

Client Scheduler is used on the player device.

Client Scheduler reads received schedules and manages Program Viewer to display specified programs at the specified time.

# Launching Client Scheduler

Client Scheduler is automatically launched by "Startup" when Windows launches.


When Client Scheduler launches, an icon ( ) appears and resides permanently in the task tray.

## Client Scheduler menu

#### **TIPS**

In USB distribution. Client Scheduler is not used.

Use the menu that opens when the icon in the task tray is rightclicked to perform the following actions:

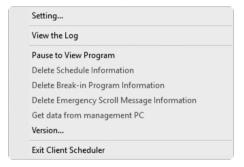

### Setting

Click the [Setting] menu to display the [Setting of Client Scheduler] dialog box. The tabs in this dialog box contain the following settings:


### [Program Viewer] tab

Configure detailed settings for Program Viewer.

 "Paint the program view area, if no program is played" checkbox

Select this checkbox to display content even when there are no programs to display. To set the displayed content, click [Paint Setting].


· "Dark blue" option button Show the area specified by the [Display area] settings in dark blue.

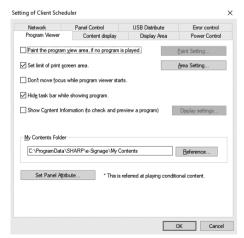

#### · "Content file" option button

Click [Setting], and set the content file path, display mode, and background color in the [Setting of the contents file] dialog box.

- (1) Click [Ref], and select the desired content file. You can select any file format that is supported by e-Signage S.
- (2) For the "Display mode", select the "Keeping aspect ratio", "Not keeping aspect ratio", or "In original size" option button.
- (3) Set the "Background color".

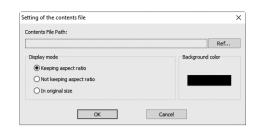

## · "Program" option button

Click [Import], and select an existing program. Programs that have been exported with Program Editor can be selected.

 The area set in the [Display area] field will be the display area (except when a program is specified).

### "Set limit of print screen area" checkbox

When multiple screens are output by a player device, using the screen capture function will capture the entire desktop. Select this checkbox to capture only part of the screen output.

Click [Area Setting] and specify the area you want to capture.



"Don't move focus while program viewer starts" checkbox

This checkbox is usually left unselected.

Select this checkbox if you do not want the Program Viewer focus to move when launching Program Viewer.

## "Hide task bar while showing program" checkbox

When this checkbox is selected, the task bar is hidden when Program Viewer is launched and reappears when Program Viewer is exited.

#### • "Show Content Information (to check and preview a program)" checkbox

Select this checkbox to show content information (display coordinates, playing time, etc.) while a program is playing. Select this checkbox to check playback of content.

Click [Display Settings] to configure settings for the content information display position and size, and whether scroll messages are forcibly changed when the playback duration elapses. If e-Signage S Player A1 data will be played on a computer, content playback information will not be displayed.

#### "My Contents Folder"

Enter the path of the folder in which content distributed in advance is saved.

The default path is as follows:

My Contents folder: C:\ProgramData\SHARP\e-Signage\My Contents

#### [Set Panel Attribute]

You can set the panel attributes of the player device. Attributes that can be set are "Panel name", "Group" and "Comment." This setting is used to play different content on each panel during conditional content playback.

#### [Content display] tab

Use this tab to set content display details.

• "Smooth contents change" checkbox


Select this checkbox to transition smoothly from one content item to the next by preparing for playback of the subsequent item before the current item ends.


Also select this checkbox when you need to synchronize the display of content between frames.

To set content to be preloaded, click [Preload Setting].

#### **TIPS**

- Using "Smooth contents change" will increase the load on the CPU and the amount of memory used. It is recommended that tests be conducted by actually displaying programs before operation.
- If content that can be played in Internet Explorer is preloaded,
   Flash content and banners embedded in the content may start from the middle.
- · Preloading is not performed on the e-Signage web browser.

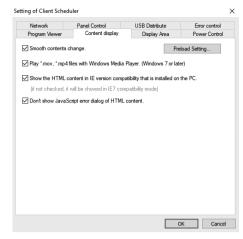

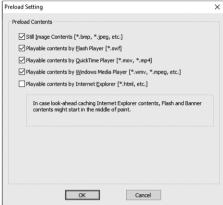


- "Play \*.mov, \*.mp4 files with Windows Media Player. (Windows 7 or later)" checkbox
   This checkbox can be selected in Windows 7 or later. Select this checkbox to play files with the extension
   ".mov" or ".mp4" on Windows Media Player.
- "Show the HTML content in IE version compatibility that is installed on the PC" checkbox

  Set the compatibility mode when playing HTML content in Internet Explorer. Check this box to display HTML in a way that is compatible with the version of Internet Explorer installed on the PC.
- "Don't show JavaScript error dialog of HTML content" checkbox
   Select this checkbox to prevent error dialog boxes from being displayed if a JavaScript error occurs when HTML content is displayed.

### [Display Area] tab


- "Display area for distributed program"
   When the display area of the program is different from the resolution of the panel, this tab allows you to display the program regardless of the display area set for the program.
   Select the "Always display the distributed program in the following area" checkbox and set the area in which the program is to be displayed.
- "Display area for emergency scroll message"
   In SHARP e-Signage S Standalone Edition, this field is not used.

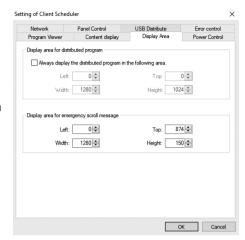

# [Power Control] tab

Manages power on player devices currently being configured.

- "Shutdown on the designated time" checkbox
   Select this checkbox to turn off the player device at the specified time.
- "Reboot on the designated time" checkbox
   Select this checkbox to restart the player device at the specified time.

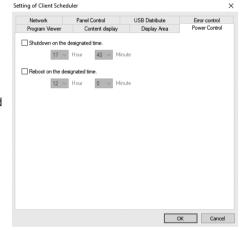

#### [Network] tab

In SHARP e-Signage S Standalone Edition, this tab is not used.

## [Panel Control] tab

Select the panel control method (RS-232C/LAN/USB).

## TIPS


If you set this to a value other than "No panel", it may take a long time to access the panel when starting or exiting Client Scheduler if the setting is not correct.

# • "No panel" option button

Panels will not be controlled.

#### · "Single panel" option button

Click [Connection Setting] and select the panel control method (RS-232C/LAN/USB).

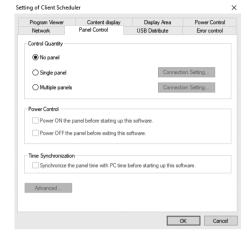

## • [Connection Setting]

From the "Connecting Interface" option button, select and set "RS-232C", "LAN", or "USB".

Setting		Description	Default
RS-232C	COM port	COM1 to COM256	COM1
K3-232C	Baud Rate	9600, 19200, 38400, 115200	9600
	Host name or IP address	Enter up to 32 alphanumeric characters for the host name or IP address of the panel to be controlled.	-
LAN	Data port	Enter a data port number between 1025 and 65535 for the panels to be controlled.	10008
LAN	User name	If a user name has been set for the panel to be controlled, enter up to 8 characters for the user name.	-
	Password	If a password has been set for the panel to be controlled, enter up to 8 characters for the password.	-
USB		-	-

### • [Test connection]

Check the connection to confirm that the panel can be controlled.

After the connection is established successfully, the model name of the panel is acquired and displayed. Operate the panel with the panel power turned on.


# • "Multiple panels" option button

You can register and control up to 25 panels.

# • [Connection Setting]

A list of connected panels appears when you click [Connection Setting].

The first time you use this function, click [Add] to add panels to the list.

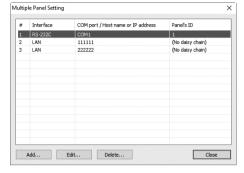

Setting		Description	Default
DC 020C	COM port	COM1 to COM256	COM1
RS-232C	Baud Rate	9600, 19200, 38400, 115200	9600
	Host name or IP address	Enter up to 32 alphanumeric characters for the host name or IP address of the panel to be controlled.	-
LAN	Data port	Enter a data port number between 1025 and 65535 for the panel to be controlled.	10008
	User name	If a user name has been set for the panel to be controlled, enter up to 8 characters for the user name.	-
	Password	If a password has been set for the panel to be controlled, enter up to 8 characters for the password.	-
USB Panel's ID		-	-
		When panels are connected in a daisy chain, select an ID to identify each panel. (No daisy chain), 1 to 255	(No daisy chain)

- "Power ON the panel before starting up this software" checkbox
   Select this checkbox to turn on the panel when Client Scheduler launches.
- "Power OFF the panel before exiting this software." checkbox
  Select this checkbox to turn off the panel when Client Scheduler is exited.
- "Synchronize the panel time with PC time before starting up this software" checkbox
   Select this checkbox to synchronize the panel clock to the time on the player device when Client Scheduler launches.
- [Advanced]
  - "If a panel is not connected at startup, subsequent communication is not performed" checkbox When this checkbox is selected, no further communication will be performed if a connection cannot be established with the panel at startup.
  - "Allow LAN connected panel to process daisy chain communication." checkbox
     When panels are connected by RS-232C in a daisy chain connection, select this checkbox only if the first
     panel only is connected by LAN. This will enable the following panels in the daisy chain to be controlled
     by specifying an ID.

#### [USB Distribute] tab

In SHARP e-Signage S Standalone Edition, this tab is not used.

## [Error control] tab

For service technicians only. Not used for normal operation.

#### Displaying the log

Click [View the Log] to display the log of Client Scheduler actions. The log can be cleared and updated.




#### Pausing a program

Click [Pause to View Program] to pause the currently displayed program.

A checkmark will appear to the left of this item. Click [Pause to View Program] again to resume the program.

# **Deleting Schedule Information**

Click [Delete Schedule Information]. A confirmation message will appear. Click [Yes] to delete all schedule information currently saved in Client Scheduler.

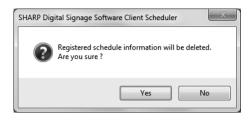

## **Deleting Break-in Program Information**

In SHARP e-Signage S Standalone Edition, this tab is not used.

## **Delete Emergency Scroll Message Information**

In SHARP e-Signage S Standalone Edition, this tab is not used.

## Get data from management PC

To receive distribution data from the management PC, click [Get data from management PC]. This function can only use PULL type distribution.

#### **Version information**

Click [Version]. The [Version] dialog box of Client Scheduler will appear.

#### TIPS

You may be asked to provide version information if you contact SHARP for help with a problem with e-Signage S.

# **Exiting Client Scheduler**

To exit Client Scheduler, click [Exit Client Scheduler]. Normally you should not exit Client Scheduler.

# **Program Viewer**

Program Viewer is used on the player device.

Program Viewer displays programs based on schedules loaded by Client Scheduler.

### **TIPS**

- To pause a program, right-click the Client Scheduler icon. In the menu that appears, click [Pause to View Program].
- To change advanced settings for Program Viewer, right-click the Client Scheduler icon, and in the menu that appears, click [Setting]. Settings can be adjusted in the [Setting of Client Scheduler] dialog box that opens.

  (1887 Page 87)
- After new schedules are sent, old schedules are no longer needed. Unneeded schedules and their associated content will be automatically deleted the next time Client Scheduler starts.

# e-Signage S Player A1 settings

Configure e-Signage S Player A1 settings.

# ■ e-Signage S Player A1 settings window

# Displaying the settings window

1 Right-click twice anywhere on the screen. Or, press twice the [RETURN] key on the remote control unit.

The settings window appears.

# Description of the settings window

CONFIGURATION

[P	[Player setting] tab		
	PLAYER SETTING		
	Save directory	Select the storage destination for received content.	
	PANEL ATTRIBUTE SETTINGS		
	Panel name	Set a panel name for the player device.	
	Group	Set a group for the player device.	
	Comment 1 to 3	Enter comments regarding the player device.	



[Network setting] tab		
	DISTRIBUTION	
	Content distribution method	Set the content distribution method.
F	TP SETTING	
	Port number	Enter a value between 1024 and 32000. (Default: 2121)
	User name	Enter up to 30 alphanumeric characters. (Default: ftp)
	Password	Enter up to 30 alphanumeric characters. (Default: ftp)
Н	ITTP SETTING	
	Hostname or IP Address	Enter the host name or IP address of the management PC.
	Port number	Enter a value between 1 and 65535. Set the port number to be used by HTTP protocol. If the management PC or network has a firewall, set the firewall to allow communication using this port number.
	User name	Enter up to 30 alphanumeric characters. (Default: http)
	Password	Enter up to 30 alphanumeric characters. (Default: http)
Р	LAYER ID	
	Tenant ID	Set a tenant ID.
	Get Tenant ID from server	Retrieve the tenant ID from the tenant name.
	Player ID	Set the player ID. Enter a text string consisting of 2 to 30 characters beginning with @.
C	ONNECTION CONFIR	М
	Connect to Management PC	Test the connection with the management PC.
	Device info register / update to Management PC	Register player device information (distribution type, player ID, FTP information, MAC address) on the management PC.



[F	[Power management setting] tab		
	POWER MANAGEMENT		SETTING
		Panel turns on at specified time	Select "enable" to turn on the panel at the specified time.
		Time to turn on panel	Set the time at which the panel will turn on.
		Panel turns off at specified time	Select "enable" to turn off the panel at the specified time.
		Time to turn off panel	Set the time at which the panel will turn off.
		Android reboots at specified time	Select "enable" to restart Android at the specified time.
		Reboot time	Set the time at which Android will restart.




ĺ	[USB/SD memory distribution setting] tab				
	USB/SD MEMORY DIST		ISB/SD MEMORY DIST	TRIBUTION SETTING	
			Display time of delivery cancellation dialog	Set the time that the dialog box to cancel distribution is displayed.	



# • OTHERS

[Android settings] tab	Configure Android OS settings.
[Device info] tab	Shows the MAC address and IP address of player devices.
[License] tab	Shows license information used for e-Signage S Player A1.
[Player version] tab	Shows the version of e-Signage S Player A1.
[Delete all distributed data] tab	Delete all data that has been distributed to the player device.
[Go to playback screen] tab	Start playback of signage.
[Exit player] tab	Close the player.

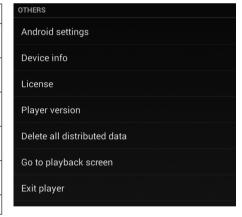

# **Key/Mouse Linkup**

This section explains how to change displayed programs using your keyboard or mouse.

# **Key/Mouse Linkup Tool window**

# ■ Launching Key/Mouse Linkup Tool

1 From the Windows Taskbar, click [Start] - [All Programs] - [SHARP e-Signage S Tools] - [Key-Mouse Watcher].

Key/Mouse Linkup Tool launches and an icon ( **3**) appears and remains permanently in the task tray.

### **TIPS**

 To have Key/Mouse Linkup Tool automatically start when the computer is started, add Key/Mouse Linkup Tool to Windows Startup.

# ■ Key/Mouse Linkup Tool menu

The following actions can be performed from the menu that opens when the icon in the task tray is right-clicked.

# Configuration

Set the operation mode of Key/Mouse Linkup Tool.

- "Disable" option button
   Disable Key/Mouse Linkup Tool.
- · "Screen Saver Mode" option button

Temporarily stop display of a program when a keyboard or mouse operation is performed.

If the keyboard or mouse is not used for a certain period of time, the distributed program is displayed.

Click [Configuration] to configure the following settings.

## Time to restart program after last key event

You can also restart a program by pressing the [Ctrl], [Alt], and [V] keys.






#### • "Change Program Mode" option button

By assigning an action to a combination of keys, you can perform the action by pressing the keys. Up to 20 actions can be assigned.

Click [Configuration], and set the key assignments and action.

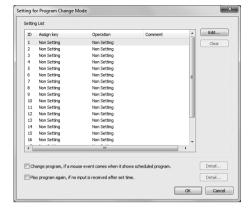

- (1) Click the item you want to edit and click [Edit]. The [Assign for] dialog box will appear.
- (2) Set each item.
  - "Key Setting"
     Set the combination of keys you want to register.
  - "Operation"
     Set the action the keys will execute.
  - If you selected "View preset program", specify the ID number of the preset program you want to display in "ID of preset prg.".

If the preset program has not been imported, specify the ID number and import the program.

- 1) Enter the ID number in "ID of preset prg.".
- 2) Click [Import].
- 3) Specify the exported program data and click [Open].

  The program is imported to the specified preset number ID.
- If you selected "Run application", enter the path of the application to be run in "Path." It is also possible to enter "Option."
- (3) Click [OK].

## TIPS

- If the same keys are assigned to different IDs, the assigned action is performed in ascending order of the IDs
- If the [Ctrl] key is pressed when PowerPoint Viewer is launched, PowerPoint content will not be displayed in the correct position. Be aware of this when displaying a program containing PowerPoint content.



- "Change program, if a mouse event comes when it shows scheduled program" checkbox
   Select this checkbox to assign actions to mouse operations so that the actions can be executed by operating the mouse
  - (1) Click [Detail]."Assign for mouse input" dialog box will appear.
  - (2) Set the items.
    - "Operation"

Set the action of the registered mouse operation.

 If you selected "View preset program", specify the ID number of the preset program you want to display in "ID of preset prg.".


If the preset program has not been imported, specify the ID number and import the program.

- 1) Enter the ID number in "ID of preset prg.".
- 2) Click [Import].
- 3) Specify the exported program data and click [Open].

  The program is imported to the specified preset number ID.
- If you selected "Run application", enter the path of the application to be run in "Path." It is also possible to enter "Option."
- (3) Click [OK].

#### **TIPS**

• The assigned action cannot be executed while a preset program is being displayed.

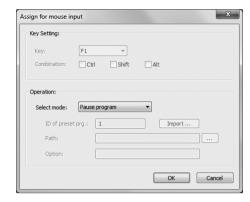

#### · "Play program again, if no input is received after set time" checkbox


When this checkbox is selected, a normal program will resume if no key or mouse actions are performed for a certain period of time.

(1) Click [Detail].

The "Configuration for Restart Program" dialog box will appear.

- (2) Set each item.
  - "Time to restart program after last key event"
     Set the period of time before program display is resumed.
  - "Restart program from beginning even if playing" checkbox

Select this checkbox to play from the beginning of the program if no time is designated or there is no key or mouse input. The program will be played from the beginning even when the program is playing according to the schedule.

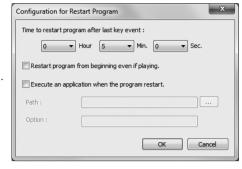


- "Execute an application when the program restart" checkbox
   If you selected this checkbox, enter the path of the application to be executed in "Path." You can also enter "Option."
- (3) Click [OK].

#### **About**

 Displays the version of Key/Mouse Linkup Tool.

#### Exit

Exit Key/Mouse Linkup Tool.




# **SDSS Launcher**

The previous generation of e-Signage S is "SHARP Digital Signage Software (SDSS)" digital signage software. A compatibility tool is installed that can be used if you previously used SDSS for signage operation or will use SDSS software to create programs or schedules.

Use SDSS Launcher to create signage widget content files and schedules in SDSS format. From the taskbar, click [Start] - [All Programs] - [SHARP e-Signage S Compatible Tools] - [SHARP Digital Signage Software].

Add a signage widget content file you have created to the content folder ("Media" folder), and use the file from this folder.

 Use the scheduler editor launched from SDSS Launcher to upload schedules in SDSS format to the management PC. "Configuration of WEB Server and Login Information" is necessary for uploading SDSS format schedule. If the PC on which the SDSS launcher is running and management PC are the same PC, specify "localhost" as "Host name or IP address" in "Configuration of WEB Server and Login Information". For information on using SDSS Launcher, see the SDSS operation manual.



# **License information for this product**

# **Software components**

This product consists of multiple independent software components for which our company and third-parties own copyrights. Some software components are distributed as free software and for which third-parties and other related laws. Regarding free software, requests for the source code are sometimes received subject to the condition that the software components be distributed in executable format. For the methods for obtaining the source code of free software and to view the licenses, visit the following Web site.

http://www.sharp.co.jp/business/lcd-display/support/download/source e.html

