 


# Timer Instructions:

Before you begin, please make sure all parts and proper quantities are included. Any parts damaged during shipment must be reported within 15 days of receipt. To report information regarding damages or if you have any questions, please call 1-800-235-1262.

## **CAUTION!**

The purpose of the timer is to prevent power overload while charging laptops in conjunction with peripheral components. The charge mode is independent of auxiliary mode to minimize risk of power overage. To provide charging power to laptops, toggle the Master Switch to "CHRG". To provide power to peripheral components, toggle the Master Switch to "AUX".

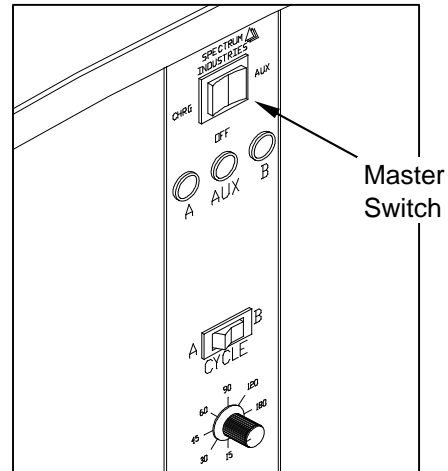

## LT30 Laptop Cart Timer 55210

The LT30 Cart Timer is a 240 minute time switch that provides accurate timing with 15 - 240 minute increments. Easy to set and operate.

The cycle timer is located on the instructor side of unit. The timer has 24 outlets which are controlled by the red lighted master switch. The master switch is a 3-position rocker switch. The timer controls 24 outlets (12-A & 12-B) designated for the charging of laptops. The outlets are controlled by the cycle switch and can alternate charging time between cycle A and B. The 7 outlets located on the student side may be used for various auxiliary applications.

- 1.) Plug the power cord into a 110-volt standard outlet.
- 2.) Plug appropriate equipment into both Side "A" & "B". Toggle the Master Switch to the "CHARGE" position.
- 3.) To charge Side "A" ONLY, toggle the Cycle Switch to "A" position.
- 4.) To charge Side "B" ONLY, toggle the Cycle Switch to "B" position.
- 5.) To cycle charge BOTH "A & B", toggle the Cycle Switch to "CYCLE" position. Set timer to desired cycling increment. After Side "A" expires the timer will activate Side "B" for the same period of time and will continue to do so until the Master Switch is set to the "OFF" position.