

Instructions:



(90) 052608
Velcro Wrap



(2) 037282
1/4-20 Nut
Fiberlock



(8) 044555
Hole Plug



(30) 052597-8
2" Velcro Hook & Loop



(10) 052605
1/4-20 x 15mm JC Bolts



(2) 035252
Pinetree
Button



(1) 052577B
Handle Gusset



 
(2) 055001
Handle Mount



(1) 025039
Allen Wrench

DESIGNED FOR INDOOR USE ONLY

Spectrum carts and lecterns are designed and constructed for indoor use only. Moving or using outdoors or on excessively rough surfaces may cause damage to the cart or casters and may void the warranty. If an outdoor application is desired, please contact us to discuss potential custom design solutions.

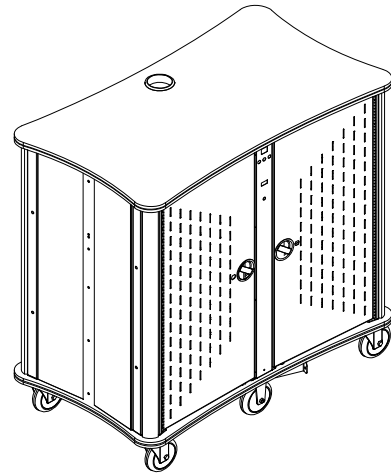

LT-30 Laptop Cart #55210

Before you begin, please make sure all parts and proper quantities are included. Any parts damaged during shipment must be reported within 15 days of receipt. To report information regarding damages or if you have any questions, please call 1-800-235-1262.

Cord Reel:

Tools Required:
Adjustable Wrench

1. Connect Plugs

- Once the unit is unloaded from the skid, insert the cord reel plug through the lower grommet. **Figure 1.**
- Plug the Cycle Charger plug into the Cord Reel power plug as shown.
- Plug the second Cycle Charger plug into the Power Strip as shown. Additional accessories can now be powered from the Power Strip.

Note: The Master Switch on the Cycle Charger needs to be switched to the 'AUX' position to use the Power Strip.

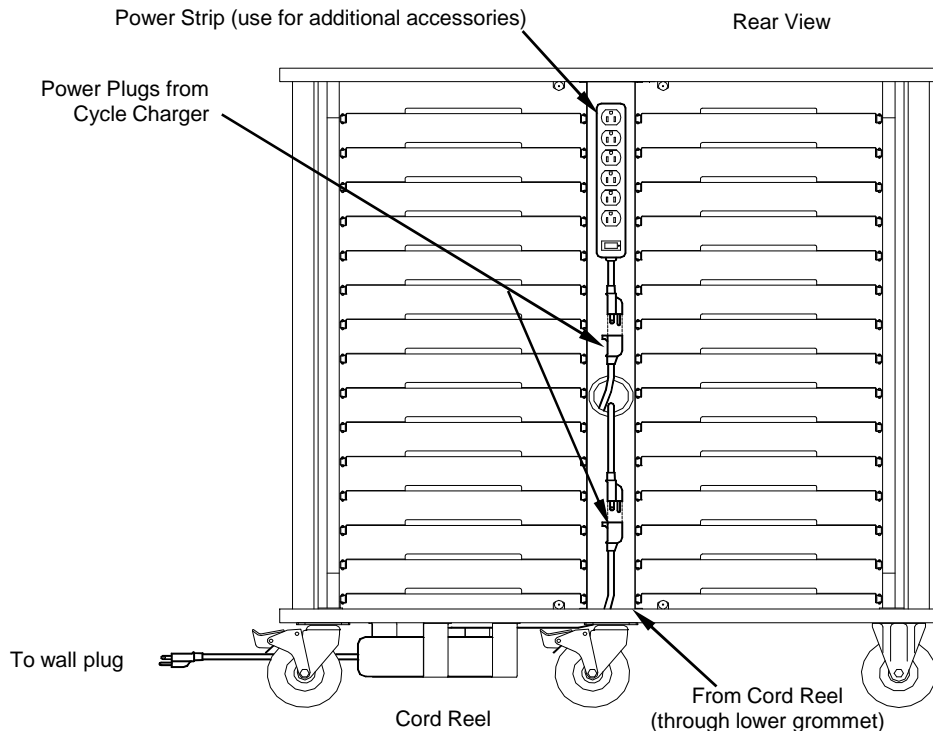 


Figure 1



205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com



Handle Assembly:

2. Attach Handle

A. Attach the Handle Gusset and Handle Mounts to the bottom of the Handle using 1/4-20 x 15mm JC Bolts. **Figure 2.**

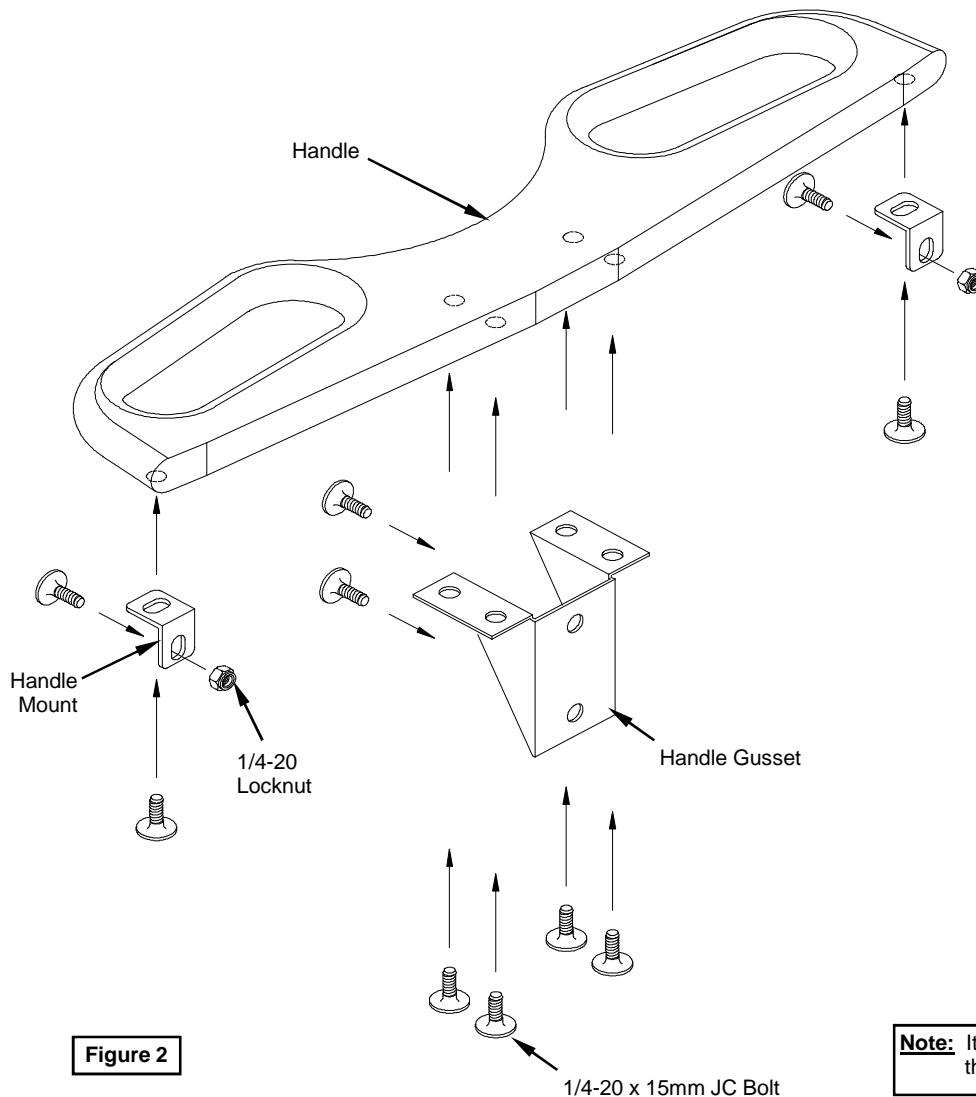 


Figure 2

Note: It is critical that all JC Bolts be used in the attachment of the Handle.

3. Attach Handle

- A. Open the Instructor-side & Student-side doors. Attach the Handle Gusset to either end of the cabinet using 1/4-20 x 15mm JC Bolts. Do not completely tighten at this time.
- B. Using 1/4-20 x 15mm JC Bolts and the 1/4-20 Locknuts, attach the Handle Mounts to the cabinet-one on each end. Move the shelves as necessary to obtain access. Tighten all screws.

 
4. Insert Hole Plugs

- A. On each end of the cabinet there are unused holes that can be filled with the Hole Plugs provided. The 2 Pinetree Buttons are to plug the holes on the opposite side of the Handle where the Gusset would attach.

Cable Management Suggestions:



Instructor-Side

Attach 1 of the Velcro wraps provided, to bundle cords and cables together. Route cables leaving enough slack for pulling tray in and out on the student side, and choose a set of slots to anchor cable(s). Route the charge plug to the Student-side to allow for ease of laptop charging and removal. Wide velcro strips are provided for anchoring the charger to the tray.

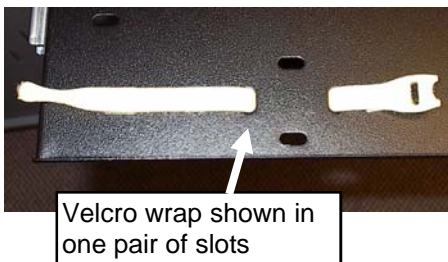


Student-Side

  Using the slots provided and a velcro wrap, anchor the charge plug in a convenient location for easy-access

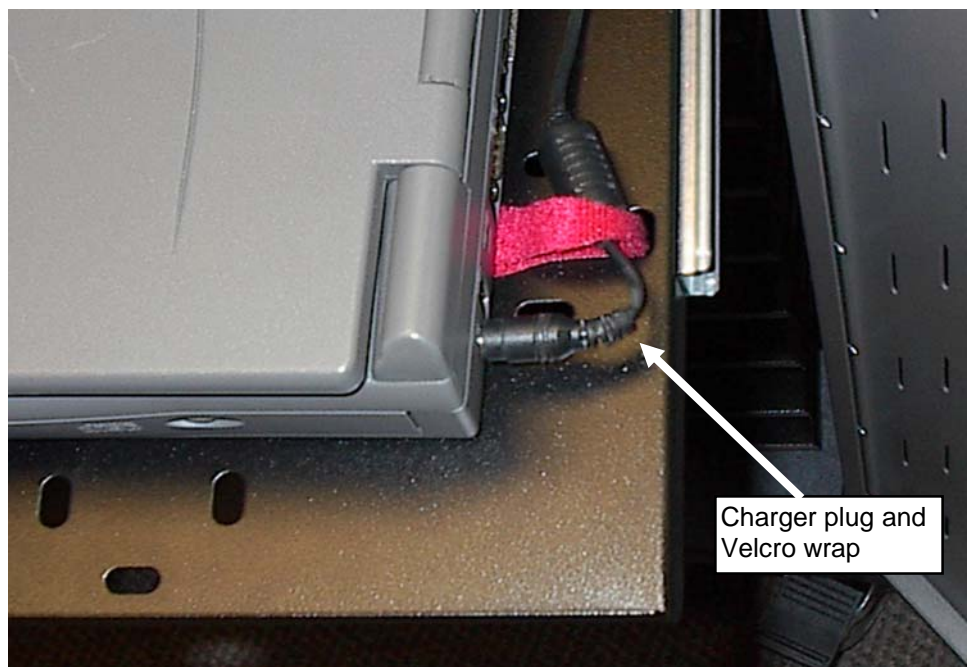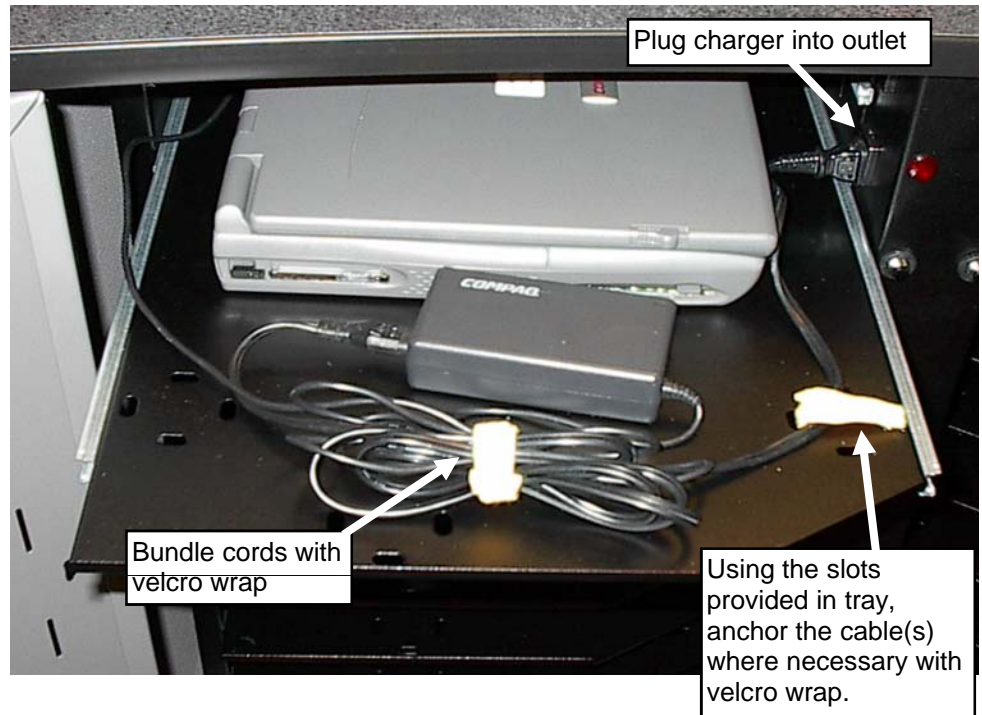

Timer Instructions:

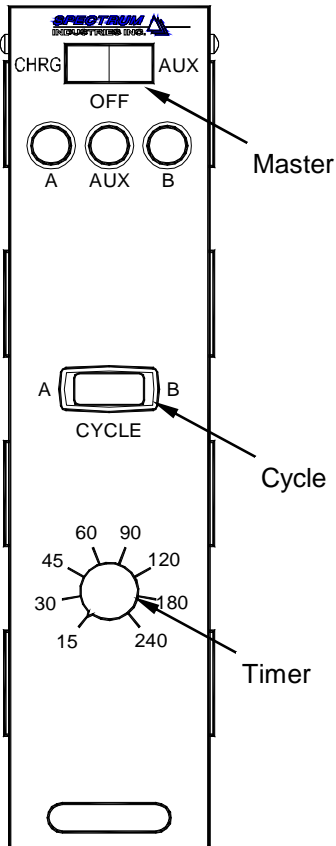 

The LT-30 Cart Timer is a 240 minute timed switch that provides accurate timing between 15 - 240 minute increments. It is easy to set and operate.

The cycle timer is located on the Instructor-side of the unit. The timer has 24 outlets which are controlled by the red lighted master switch. The master switch is a 3-position rocker switch. The timer controls 24 outlets (12-A & 12-B) designated for the charging of laptops. The outlets are controlled by the cycle switch and can alternate charging time between cycle A and B. The 7 outlets located on the Student-side may be used for various auxiliary applications.

- 1.) Plug the power cord into a 110-volt standard outlet.
- 2.) Plug the appropriate equipment into both Side "A" & "B". Toggle the Master Switch to the "CHARGE" position.
- 3.) To charge Side "A" ONLY, toggle the Cycle Switch to the "A" position.
- 4.) To charge Side "B" ONLY, toggle the Cycle Switch to the "B" position.
- 5.) To cycle charge BOTH "A & B", toggle the Cycle Switch to the "CYCLE" position. Set the timer to the preferred cycling increment. After Side "A" expires, the timer will activate Side "B" for the same period of time and will continue to do so until the Master Switch is set to the "OFF" position.

CAUTION!

The purpose of the timer is to prevent power overload while charging laptops in conjunction with peripheral components. The charge mode is independent of the auxiliary mode to minimize risk of power overage. To provide charging power to laptops, toggle the Master Switch to "CHRG". To provide power to peripheral components, toggle the Master Switch to "AUX".

Touchboards

205 Westwood Ave, Long Branch, NJ 07740
 Phone: 866-94 BOARDS (26273) / (732)-222-1511
 Fax: (732)-222-7088 | E-mail: sales@touchboards.com

SPECTRUM
INDUSTRIES INC.

1600 Johnson St. P.O. Box 400 Chippewa Falls, WI 54729 Ph. 1-800-235-1262 Fax. 1-800-335-0473
 E-mail: spectrum@spectrumfurniture.com web: www.spectrumfurniture.com