
Assembly Instructions

Phone: 866-94 BOARDS (26273) / (732)-222-1511 Fax: (732)-222-7088 | E-mail: sales@touchboards.com

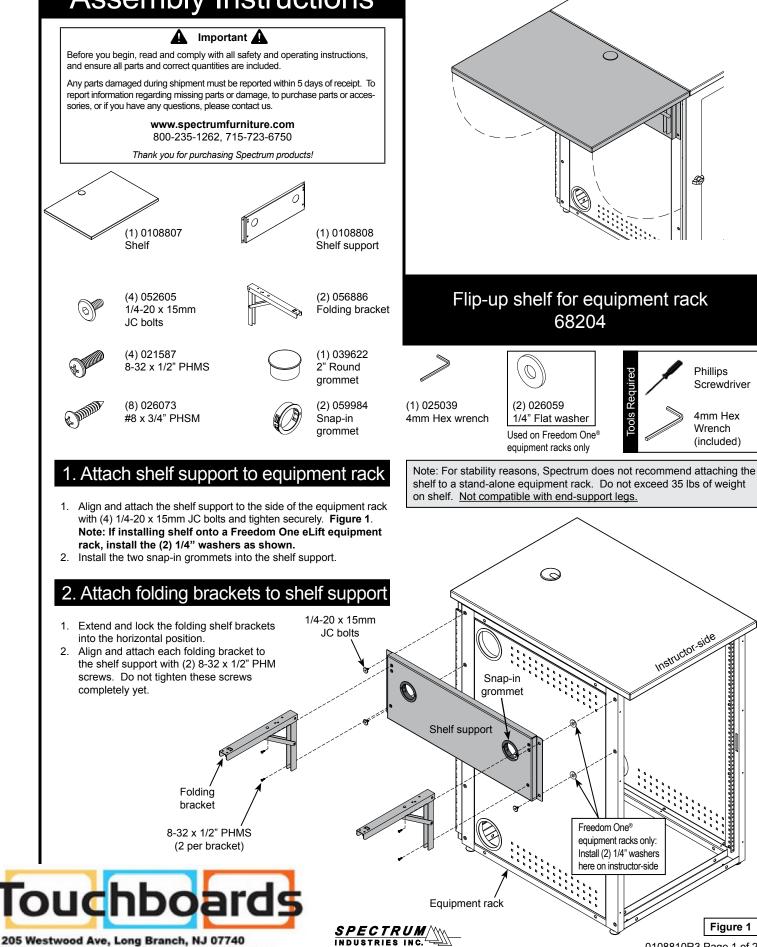

0108810R3 Page 1 of 2

Figure 1


Phillips

Screwdriver

4mm Hex Wrench

(included)

3. Attach shelf to folding brackets

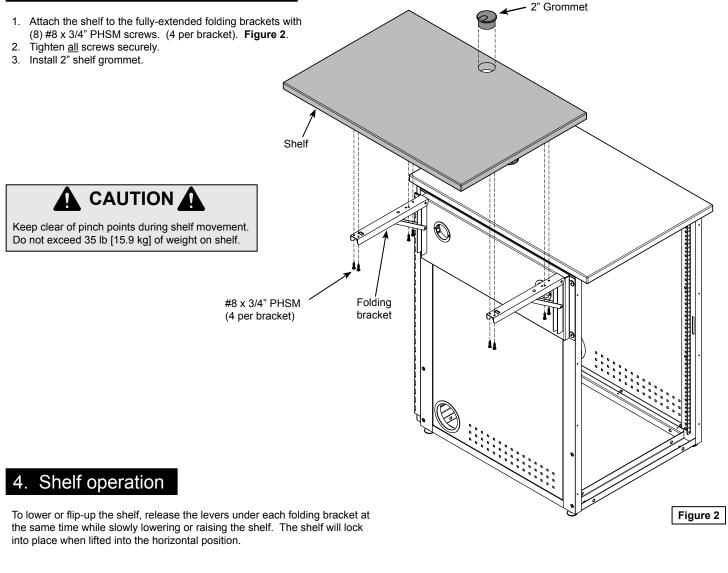



Keep clear of pinch points during shelf movement. Do not exceed 35 lb [15.9 kg] of weight on shelf.

Operation

The shelf will automatically lock into place when lifted into the horizontal position with the levers released. To lower or flip-up the shelf, press and hold the levers under each folding shelf bracket at the same time while slowly lowering or raising the shelf. Do not exceed a maximum of 35 lb of weight on the shelf. Do not move the unit while the shelf is in the horizontal position.

Note: Power and communication wiring for document cameras, laptop computers, and / or projectors placed on the flip-up shelf should be routed on top of the audience-side of the shelf. Use of the shelf grommet hole for wiring will result in pinching of the cords when the shelf is lowered.

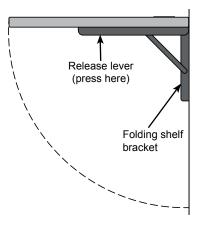


Figure 3

925 FIRST AVENUE, CHIPPEWA FALLS, WI 54729 / 800-235-1262 / 715-723-6750 / WWW.SPECTRUMFURNITURE.COM