


SEM1620 USER GUIDE

DIN RAIL MOUNTED CONDITIONER
UNIVERSAL INPUT
THREE WIRE VOLTAGE OUTPUT

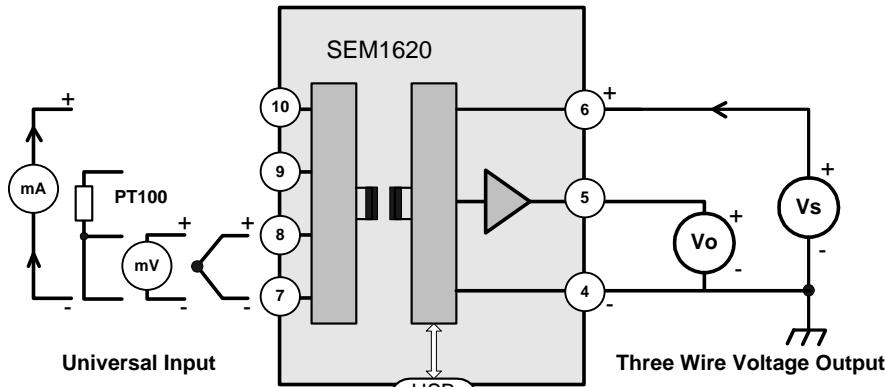

Important - Please read this document before installing.

Every effort has been taken to ensure the accuracy of this document, however we do not accept responsibility for damage, injury, loss or expense resulting from errors and omissions, and we reserve the right of amendment without notice.



IMPORTANT - CE & SAFETY REQUIREMENTS

Product must be DIN rail mounted, inside a suitable enclosure providing environmental protection to IP65 or greater.

To maintain CE EMC requirements, input wires must be less than 30 meters.

The product contains no serviceable parts, or internal adjustments. no attempt must be made to repair this product. Faulty units must be returned to supplier for repair.

This product must be installed by a qualified person. All electrical wiring must be carried out in accordance with the appropriate regulations for the place of installation.

Before attempting any electrical connection work, please ensure all supplies are switched off.

ABSOLUTE MAXIMUM OPERATING CONDITIONS (To exceed may cause damage to the unit):-

Supply Voltage ± 30 VDC (Protected for over voltage and reverse connection)

Current with over voltage ± 200 mA

Input Voltage ± 5 V between any terminals

Input Current ± 100 mA between terminals 7 & 10

Ambient Temperature (-30 to 75) °C Humidity (10 to 95) % RH (Non condensing)

PRODUCT SPECIFICATION

Please refer to the product data sheet for full specification, available to download at www.statinst.com.

RECEIVE AND UNPACKING

Please inspect the packaging and instrument thoroughly for any signs of transit damage. If the instrument has been damaged, please notify your supplier immediately.

CONFIGURATION




IMPORTANT - The SEM1620 can be configured while connected and powered, but a portable battery powered computer must be used to avoid the effects of ground loops.


M-CONFIG SOFTWARE



Disk or download @
www.statinst.com

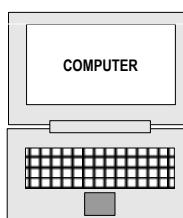

USB CABLE

 


SEM1620

Factory default:
Input type = Pt100
Units = °C
High Range = 100
Low Range = 0
Output = 0-10 VDC
Burnout = UPSCALE
User Trim = ON

The conditioner may be purchased pre-configured, if specified at the time of order. The user can re-configure the conditioner by connecting it to the USB port of a PC using a standard USB to mini 5 pin USB cable and running the Status Instruments USB_CONFIG software, available free from www.statinst.com. The USB port supplies power to the SEM1620 during configuration, no additional wiring is required. The following parameter can be configured by simply entering as prompted by the software package.

- Input type (K,J,E,N,T,R,S,mV, Pt100, mA)
- Low range
- High range
- Units (°C, °F, mV, mA)
- Burnout (direction of output voltage on sensor burnout)
- User Trim (option to lock out front panel trim function)

MECHANICAL INSTALLATION

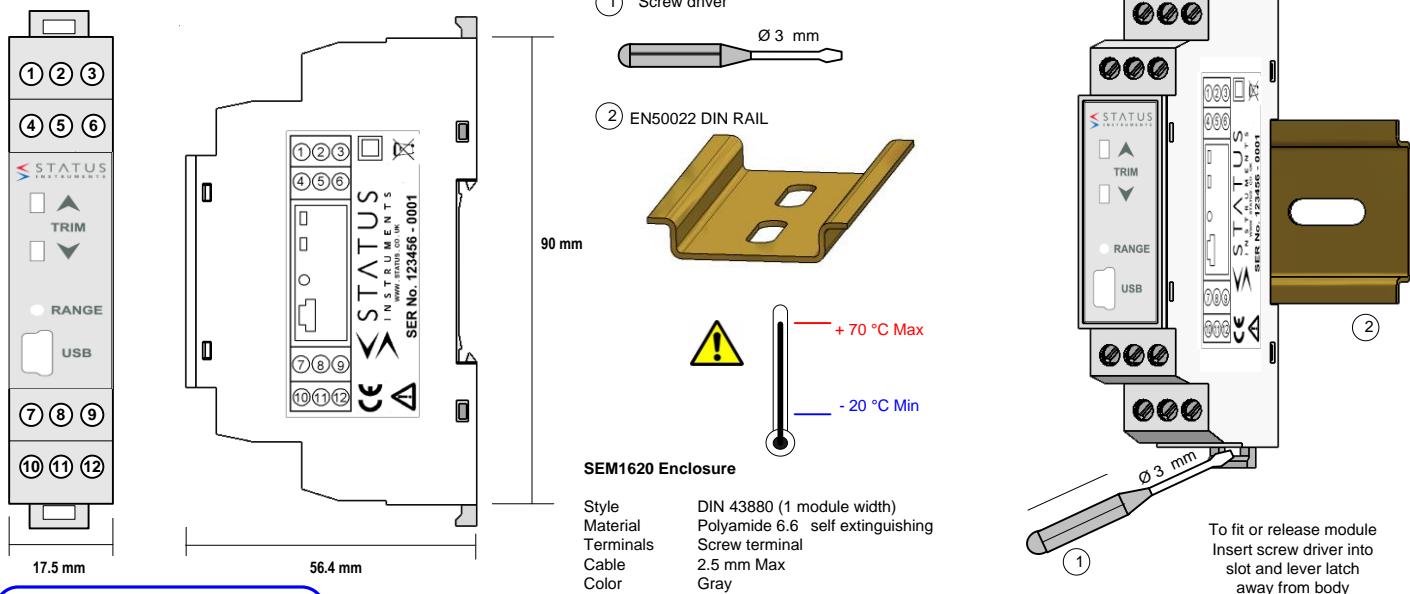



ELECTRICAL INSTALLATION



TURN OFF SUPPLY BEFORE WORKING ON ANY ELECTRICAL CONNECTION


UNIVERSAL INPUT CONNECTION

For cable length < 3 Meters no shielded or twisted pair required.
 Thermocouple inputs must use correct compensation cable.
 Pt100 inputs all three wire must be equal length (resistance).
 Use recommended types for cable length (3 to 30) meters.

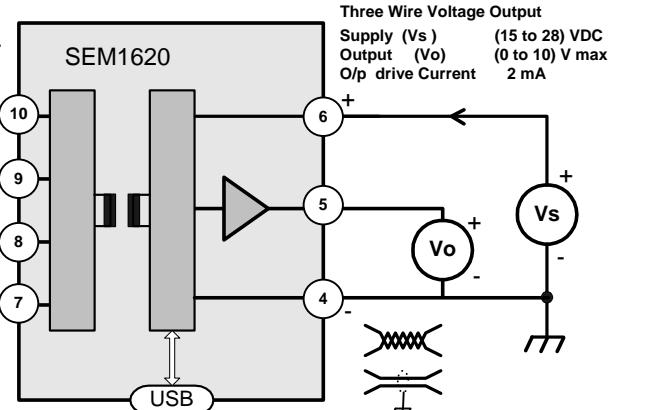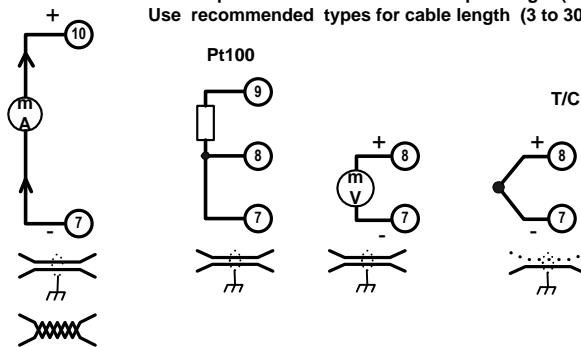

OUTPUT
 Three wire voltage
 Max cable length 30 meters
 Use twisted pair cable or screened > 3 meters

 USER TRIM




Digital mA meter

20.000

Power Supply (24VDC)



 
Input Simulator



or sensor

User trim function allows manual adjustment of the output current, this is useful for minor calibration adjustment or trimming out any sensor error, $\pm 5\%$ of range adjustment is available at both offset and span. Raise and lower buttons are provided on the front panel, of the transmitter, accessed using a 3 mm flat blade screw driver. Insert the screw driver into the appropriate slot to operate the button. The button has a click action.

The conditioner will automatically detect the correct trim point (offset or span) based on the output current drive. Offset will be trimmed when the output voltage is within ± 0.1 V of offset output, span when the output voltage is within (50 to 105)% of output range

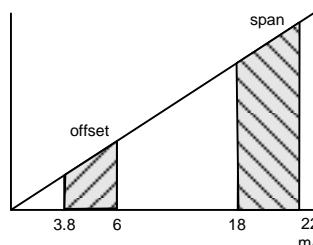


METHOD

1.0 Connect transmitter to a suitable input simulator or sensor. Connect output to a 24V dc supply, connecting a digital mA current meter in series with the output. Turn supply on, set input to either offset or span calibration point.

2.0 Enter trim menu by pressing "raise" button for > two seconds. When the trim menu is open the range LED will flash :-

Range LED will indicate Trim action
 Offset slow toggle
 Span fast toggle
 Out of trim range
 Input out of range

3.0 Trim output current by pressing either the raise or lower button, single click to step advance, or press continuously to auto advance.

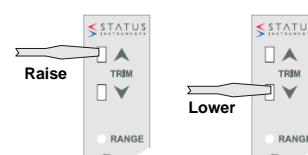

4.0 Once trim is complete allow 30 seconds with no button press, the transmitter will time out and return to normal operation.

