

TH-1040-CT-DV

**Touchboards**

205 Westwood Ave, Long Branch, NJ 07740  
Phone: 866-94 BOARDS (26273) / (732)-222-1511  
Fax: (732)-222-7088 | E-mail: sales@touchboards.com


# Installation Instructions




Additional Mount Accessory for TH-1040-CTS and TH-1040-CTL

## Component Checklist

VESA Plate

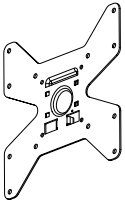

Mount Head Accessory

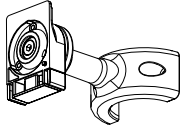

Mount Head Rear



### Hardware



 
Security Screw (optional)



M6/8 Spacer (x4)



M4/5 Washer (x4)



M6x20 Socket Cap Screw (x2)



5mm/3mm Allen Keys (x1 each)



M4/5 Spacer (x4)

### Display Mounting Screws



M5x16/25mm (x4 each)



M4x16/25mm (x4 each)



M6x16/30mm (x4 each)

NOTE: Phillips-head screwdriver not supplied

## IMPORTANT INFORMATION:

**! IMPORTANT - Install Telehook 1040 Additional Mount Accessory as per Installation Instructions.**

! This product is to be installed in conjunction with TH-1040-CTS and TH-1040-CTL Ceiling Mounts only.

! The manufacturer accepts no responsibility for incorrect installation.

## Step 1. Check Components



Check you have received all parts against the Component Checklist and Hardware above.

## Step 2. Install Mount Head Accessory on TH-1040-CTS or TH-1040-CTL

Attach Mount Head Rear to Mount Head Accessory with Socket Cap Screws (x2).

Mount Head Accessory

Use the 5mm Allen Key supplied.

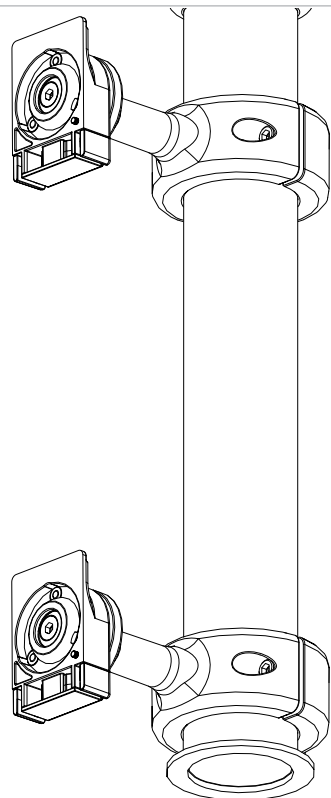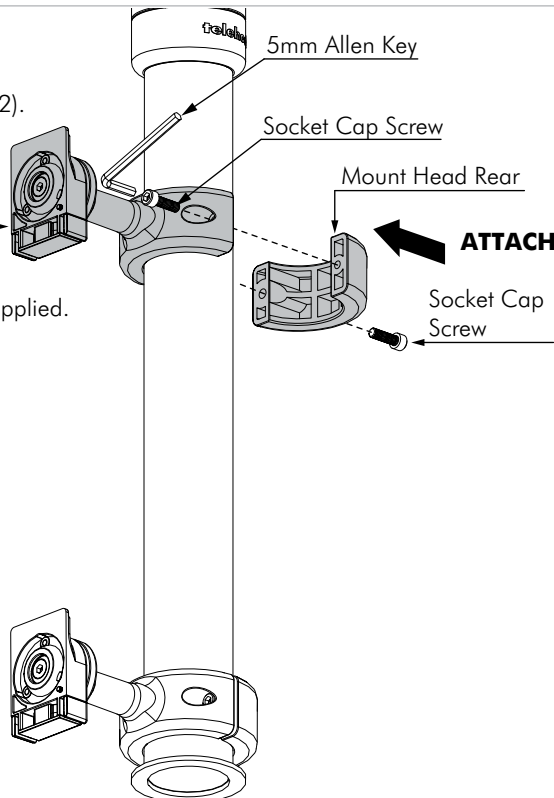

Refer to TH-1040-CTS/TH-1040-CTL Installation Instructions, Step 8. Attach VESA Plate to Display.

## Installation Complete



No portion of this document or any artwork contained herein should be reproduced in any way without the express written consent Atdec Pty Ltd. Due to continuing product development, the manufacturer reserves the right to alter specifications without notice. Published 12.03.12 ©