TH-3070-CTL TH-3070-CTS TH-3070-CTLW TH-3070-CTSW

Installation Instructions Telehook

Ceiling Tilt Short Mount / Ceiling Tilt Long Mount

Component Checklist



IMPORTANT INFORMATION:


- ! IMPORTANT Install Telehook Ceiling Mount as per installation instruction.
- ! This product supports a maximum load of 65kg (143lbs.).
- ! This product has a universal mounting hole pattern that suits a broad range of TV's: From 200-800mm in width and 200-500mm in height.
- The manufacturer accepts no responsibility for incorrect installation.

Step 1. Check Components


Check you have received against the component checklist and hardware above.

Touchboards 205 Westwood Ave, Long Branch, NJ 07740 Phone: 866-94 BOARDS (26273) / (732)-222-1511 Fax: (732)-222-7088 | E-mail: sales@touchboards.com


Step 2. Install Mounting Plate to the ceiling

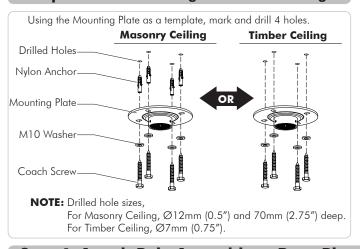


Step 3. Install Mounting Cover

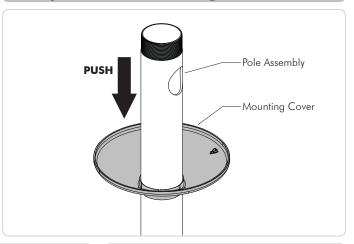


Step 4. Attach Pole Assembly to Base Plate

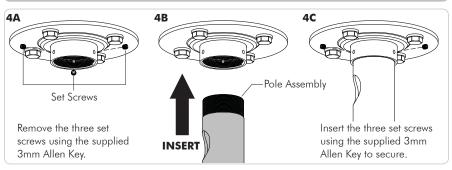

Step 5. Position Mounting Cover

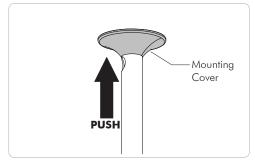


Step 6. Set the Height of the Pole

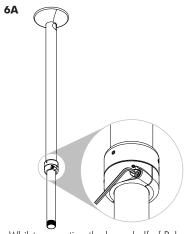


Whilst supporting the lower half of Pole Assembly loosen the Socket Cap Screws (x2) using the supplied 5mm Allen Key.

Height Adjustment CTL: 1050-1900mm CTS: 550-900mm

 Slide Pole Assembly to the desired height.




 Tighten the Socket Cap Screws (x2) to set the height using the supplied 5mm Allen Key.




If necessary, centralise the Pole Joint by tightening the Set Screws (x2) to suit using the 2.5mm Allen Key.


Step 7. Install the Ceiling Cover

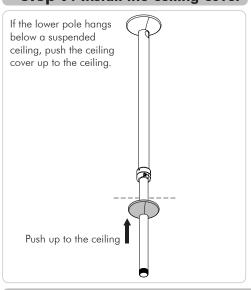

Step 8. Install the Clamp Head

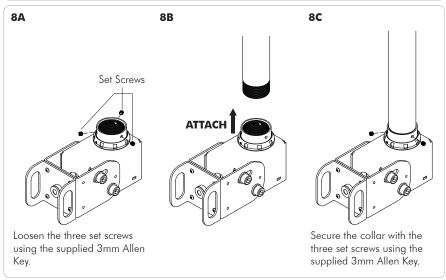


Step 9. Install the Horizontal Rail

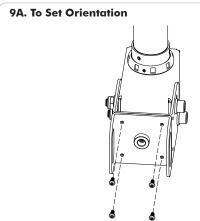



1. Loosen the 4 screws using the supplied 2.5mm Allen Key.

 NOTE: The rail mount is factory set in landscape orientation.




2. For Portrait orientation, rotate the head clamp 90° and insert the 4 screws again using the supplied 2.5mm Allen Key.

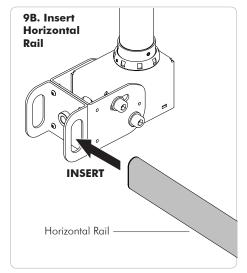


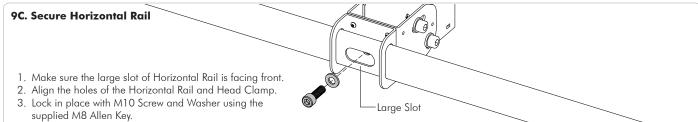

Step 10. Install the Head Clamp Front Cover


Step 11. Attach Mounting Brackets to the Display

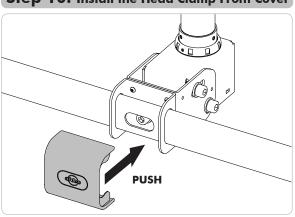


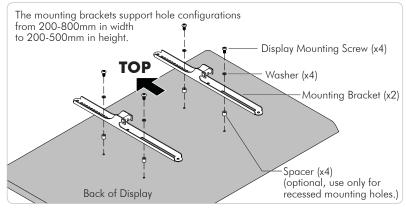


Step 12. Attach the Display to the Horizontal Rail


Step 13. Tilt Adjustment

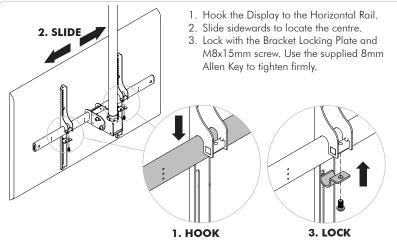

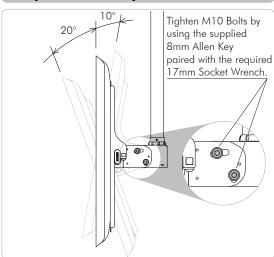

 
Step 14. Rotational Adjustment



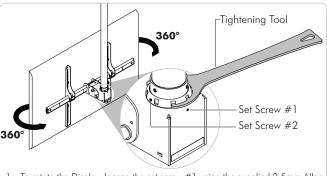


- To rotate the Display, loosen the set screw #1 using the supplied 2.5mm Allen Key and tighten to lock when desired orientation is achieved.
- Force adjustment is optional and to do this, loosen the set screw #2 using the supplied 2mm Allen Key, loosen or tighten the locking ring with the supplied tightening tool, and when the desired force is set, tighten the set screw.


Step 15. Cable Management

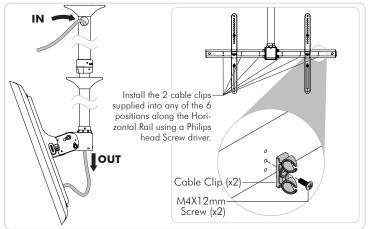

Step 16. Put on Clamp Covers

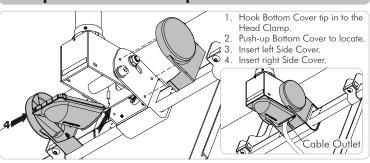

Step 17. Store Supplied Allen Keys

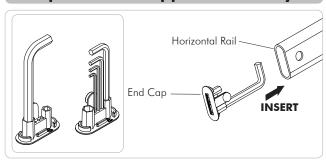

Installation Complete

