

205 Westwood Ave, Long Branch, NJ 07740 Phone: 866-94 BOARDS (26273) / (732)-222-1511 Fax: (732)-222-7088 | E-mail: sales@touchboards.com


Installation Instructions Otelehok FLAT SCREEN WALL MOUNT | FIXED

TH-40100-UF

Important Notes


- Supports a maximum load of 150kgs (330lbs).
- Suits displays with mounting hole patterns from 200mm to 800mm wide (8"-31.5") by 200mm to 600mm high (8"-23.5").
- The manufacturer does not accept responsibility for incorrect installation.



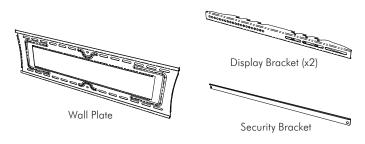



TOOLS REQUIRED:


- Power Drill
- 12mm ($^{1}/_{2}$ "), 10mm ($^{3}/_{8}$ ") or 7mm ($^{1}/_{4}$ ") Drill Bit
- Phillips Head Screw Driver
- Spirit Level
- 17mm (11/16") Socket Wrench or Shifter

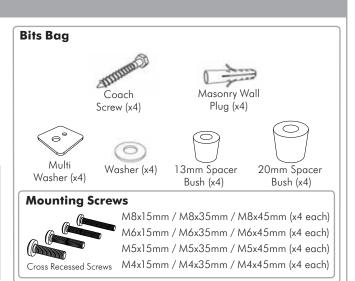

(A) Mounting the Wall Plate

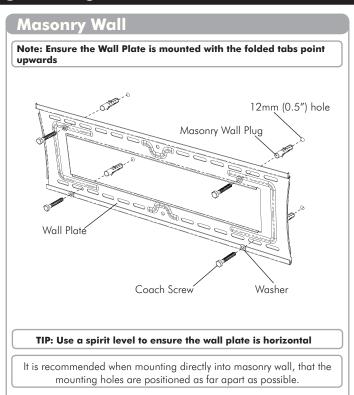

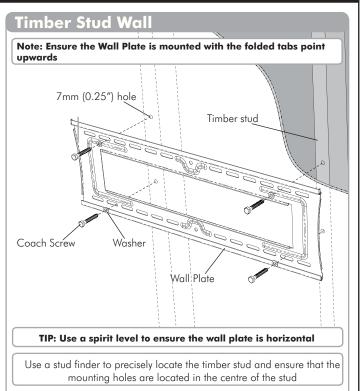


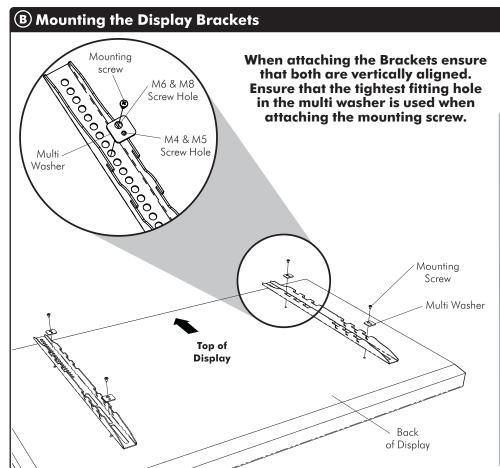

Recessed Mounting Holes

If the mounting holes are recessed into the back of the display, use the appropriate Spacer Bushes provided to pack the recessed hole.

Please note the 13mm Spacer Bushes can only be used with M4, M5, and M6 Mounting screws. Ensure the brackets are securely fixed to the display.

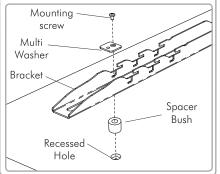

C Attaching the display to the wall plate

Note: This procedure will require two persons

With the Brackets attached to the display, lift the display and hook the brackets onto the Wall Plate as shown. There are three height positions to choose from in 50mm (2") increments.

