

Thermometers

TK 100 - TK 150
TK 102 - TK 152



"Select" key

See table

"Functions available from main screen"

"Function" key

1x : "Hold" : measure holding

1x long : "Auto-Hold" see p.2

2x : "Min/Max" : display of minimum and maximum values from **channel 1** since last request.

3x : "Min/Max" : display of minimum and maximum values from **channel 2** since last request.

4x : Back to held measure.

"On / off" key

ON : Switch-on

OFF : Switch-off

Escape : Return to previous screen

"Backlight" key

1x  Level 1

2x  Level 2

3x  No backlight

"OK" key

1x "To validate"
or "Delta temperature" see P2.

Functions available from main screen

	Select probe	1x  →  → Press  to scroll down thermocouple	⇒ Validate with 
	Select units	2x  →  → Press  to scroll down units.	⇒ Validate with 
	Automatic shut-off	3x  →  → Press  to scroll down minutes.	⇒ Validate with 
	Beep	4x  →  → Press  to activate or to deactivate.	⇒ Validate with 
[Class 150]	Lower alarm	5x  →  → Press  to select number or sign (Available on channel 1 only)	⇒ Validate with 
[Class 150]	Upper alarm	6x  →  → Press  to select number or sign (Available on channel 1 only)	⇒ Validate with 
[Class 150]	Auto-hold	1x long press  → A beep rings, once measure is stabilized (Available on channel 1 only)	⇒ Exit with 
[2 channels]	Delta temperature	1x  → Delta temperature value : $T_{\text{channel 2}} - T_{\text{channel 1}}$	⇒ Exit with 

Simplified mode

The simplified mode is the disablement of all keys, excepted "On / off" key.

➤ To **enable** this mode :

- Switch-off the device.
- Press simultaneously "Hold" and "On / off" keys.

*When the simplified mode is **enabled**, the automatic shut-off is settled on 15 mn.*

*This mode stays **enabled** even if device is switched on and off.*

 
➤ To **disable** this mode :

- Switch-off the device.
- Press simultaneously "Hold" and "On / off" keys.

Device is in normal mode.

How to change battery

1. Remove the front part at the back of the instrument
2. Remove old battery
3. Insert the new battery in accordance with proper polarity drew inside the housing.
4. Replace the front.



E Instruments International LLC
 172 Middletown Blvd - Suite B201
 Langhorne, PA 19047
 Tel.: 215 750 1212
 Fax: 215 750 1399
 E-mail: Info@E-Inst.com
 Web: www.E-Inst.com

Distributed by: