

INITIAL USE

For first time use and occasionally throughout the year, have another teacher or student(s) confirm that your voice is clearly heard throughout the classroom.

1. If the TeachLogic amplifier/receiver is available, adjust the “CH A” knob to the 12 o’clock position.
2. Attach the lanyard to the Sapphire’s metal clip.
3. Put the lanyard around your neck and adjust the strap until the top of the Sapphire sits on your collarbone (about 5 in [13 cm] from your mouth).
4. Locate the Volume Switch on the side of the microphone:
 - **In a Noisy Room:** Set at “Normal”
 - **In a Quiet Room:** Set at -6 dB
5. Turn the microphone ON (press/hold the power button).
6. Walk beneath a speaker. Talk in a normal, conversational tone. You should be able to hear yourself without hearing a ringing sound (feedback).
7. If you hear feedback, lower the CH A volume until it goes away.

DAILY USE

1. The amplifier will come out of STANDBY mode automatically when:
 - you turn ON the microphone
 - you play an audio source connected to the TeachLogic receiver
2. Use microphone’s Volume Switch is to make slight (3 or 6 dB) adjustments to the volume of your voice as room noise changes.
3. Use the “Priority” button to make daily adjustments to the volume of audio sources playing through the TeachLogic amplifier/receiver:
 - Press once to quiet all audio/ Press once to resume
 - Slide the button up/down to adjust the audio volume up/down

ENDING THE DAY

1. Turn the microphone OFF (press/hold the power button).
2. Charge overnight by plugging into charge cable or drop-in charger.

 
Sapphire

Infrared Wireless
Microphone

USER GUIDE

Your microphone is designed to clearly transmit your voice through your classroom audio system so that every student can hear you equally well. Don’t worry if you can or can’t hear your own voice. It’s what the students hear that matters.

SCAN TO LEARN MORE

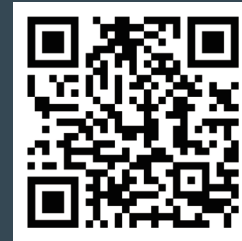

Power Button - ON/OFF

- Press/Hold for 3 seconds
- Solid Light = Mic is ON
- No Light = Mic is OFF

Mute ON/OFF

- Press once to mute
- Blinking Blue = MUTED
- Press once to unmute
- Solid light = UNMUTED

LED Color = Battery Level

- Solid Blue: 50-100% battery life
- Solid Purple: 25-50% battery life
- Solid Red: 0-25% battery life



3.5mm Aux Input (Mic/Line Level) for lapel or headset mic, or audio source

Teacher Priority:

- When mic is ON and UNMUTED
- Press once to quiet audio sources connected to amplifier/receiver
- Press once to resume

Security Alert*

 
- Press/hold for 5 seconds
 - Amplifier power button blinks green when activated
- *Security Alert feature only works when amplifier is connected to compatible intercom system

Amplifier Audio Volume Control

- Slide button up/down to adjust
- Adjusts volume of audio devices connected to amplifier
- Volume level will reset when amplifier turns off/sleeps

Mic Volume Switch: Increase/decrease the volume up to 6 dB

- Normal
- -3dB
- -6dB

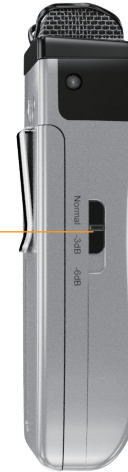

WINDSCREEN

Clip

Battery Cover

BACK WITH BATTERY COVER REMOVED



 
A/B Channel Selector

BOTTOM



Micro USB Charging Port

CHARGER

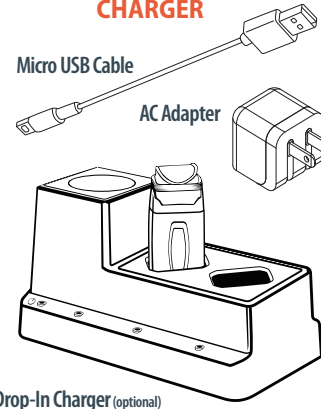

Drop-In Charger (optional)

"TL" Indicator Lights:

- **No light:** Power is OFF
- **Solid Blue:** Power is ON; 50-100% battery life
- **Solid Purple:** 25-50% battery life
- **Solid Red when using:** 0-25% battery life
- **Blinking Blue:** Mic is muted
- **Solid Red when charging:** Charging in progress
- **Solid Green when charging:** Battery is fully charged
- **Blinking Red:** Battery needs to be replaced
- **Solid Yellow:** Mic is in test mode; disconnect and reconnect battery